


# Remote Control MD-A150-FCC User Manual

## 1. Operation Instruction

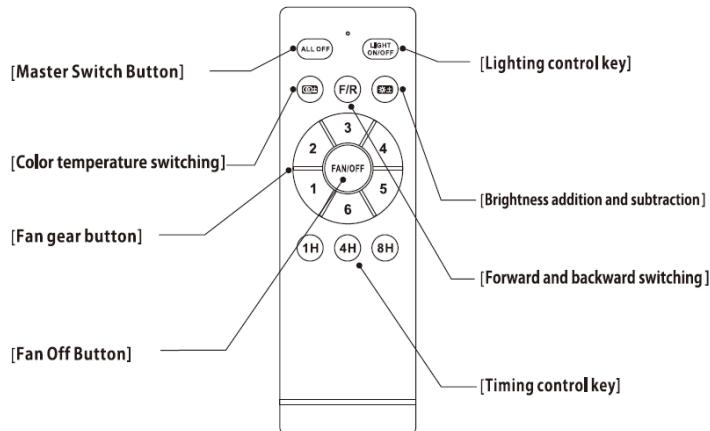

- 1) Install 2 x1.5V AAA batteries. (To prevent damage to remote control, remove the battery if not used for a long time).
- 2) Code alignment: Power on and press the 1H+8H key for 5 seconds.
- 3) Clear code mode: Power on and long press the color temperature switch + brightness plus minus key for 5 seconds.

Note: Brightness plus or minus key: function description: After short press or long press to the maximum brightness, the brightness cannot be continue to increase, and the brightness begins to decrease until the minimum is cycled to a larger increase. Color temperature switch key: Neutral light/yellow light/white light 3 color cycle changes.

## 2. Warning Statements

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.