

Wireless remote control manual



1. First power-on. The buzzer beeps once, and the controller enters standby mode.
2. Code matching: After turning on the power and hearing a "Di" sound, press the "FAN/OFF" key within 3 seconds. The receiver will emit a "Di-Di" sound, indicating successful code matching. If the code matching is not successful, turn off the power and repeat the operation in one minute.
3. When the remote control cannot be effectively controlled: please check the battery, and take out the battery if it is not used for a long time.
4. After the remote control is powered off or the battery is replaced, press the "Light on/Off" button to turn on the remote control

WARNING: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.