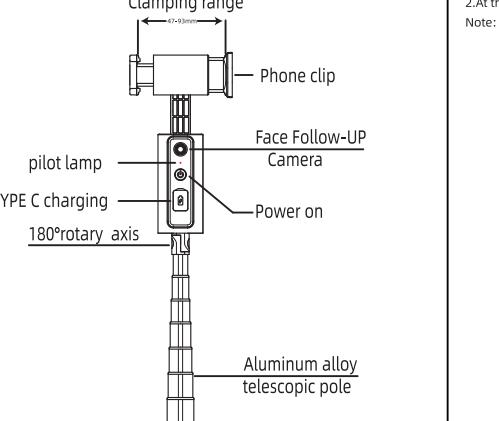
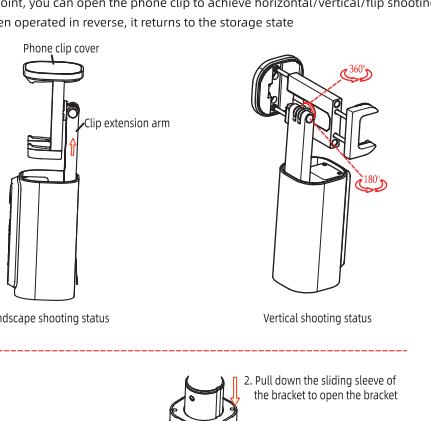
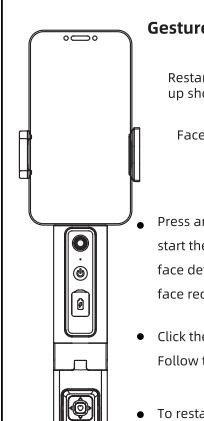
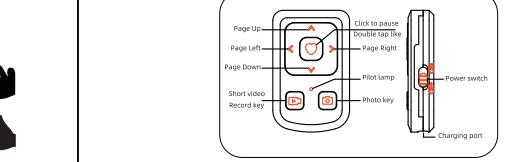
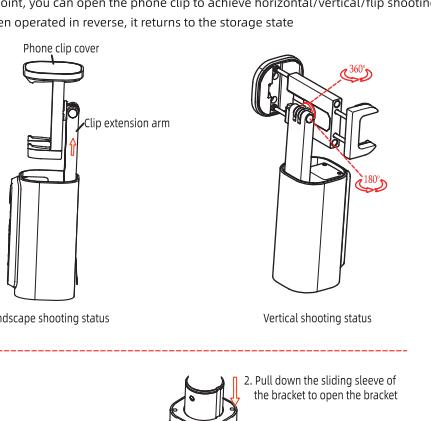
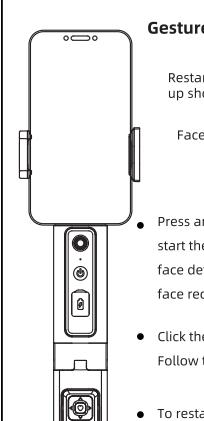
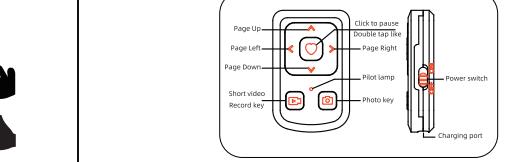


<p>CL18</p> <p>AI facial tracking selfie stick Portrait tracking/Gesture control/1.5-meter bracket/360 degree rotation/180 degree flip</p>  <p>English usage instructions </p> <p>Instructions for use</p>	<p><b>WELCOME TO THE PAN/TILT SUPPORT FOR FOLLOW-UP SHOOTING</b></p>  <p><b>PRODUCT USE METHOD</b></p> <p>1. Hold down both sides of the cover and pull out the phone clip extension arm 2. At this point, you can open the phone clip to achieve horizontal/vertical/flip shooting Note: When operated in reverse, it returns to the storage state</p>	  <p><b>GESTURE CONTROL</b></p>  <p><b>BLUETOOTH REMOTE CONTROL</b></p>  <p>1. Pull the side switch of the remote control (ON/OFF). The remote indicator flashes automatically. 2. Open the phone "Settings" - "Bluetooth" to enable Bluetooth, search for "CL-SXP" and click the device name to pair. When connected is displayed, the indicator stops flashing and the connection is successful (remote control is turned on). 3. Direction keys: When watching short videos, up/down keys switch videos, and left/right keys slide left and right keys slide. 4. Like button: Watch short video (click pause/double click like). 5. Short video recording button: Enter the short video interface, click to start and pause shooting. 6. Camera key: Go to the camera screen and click to start and pause the camera. *Apple phones are unable to swipe videos through the up, down, left, and right buttons on the remote control. To do so, the phone comes with settings: 1. Settings - Accessibility - Touch - Accessibility Touch (Open) - Tracking Sensitivity (You can find the tracking sensitivity function in the drop-down menu of the Accessibility Touch menu) Turn the small white dot towards the direction of the turtle (the best remote control sensitivity is set to 1/3 or 1/4 on the progress bar), and after completion, you can remotely swipe videos and read books up, down, left and right (long press the up and down buttons to adjust the volume)</p>	<p><b>TROUBLESHOOTING</b></p> <p>1. Bluetooth remote control cannot be turned on &gt;&gt;&gt; Charge the remote control and try again after charging is complete. 2. Bluetooth cannot connect/function properly after turning on&gt;&gt; Remove Bluetooth pairing from the phone, restart the Bluetooth remote control, and then re pair and connect. 3. If the remote control cannot be used to take photos on an Android phone &gt;&gt; Press the camera button to adjust the volume: Open the camera interface of the app, open the settings icon, and modify the "volume button function" to default or use the volume button to take photos to use the music Remote camera with controller at 10 meters. 4. When using the tracking gimbal function to track a lost target, the gimbal stops and the indicator light flashes. At this time, you can enter the camera's field of view again or use a gesture to restart and start following. To ensure recognition accuracy, please use within a range of 0.3-5 meters from the tracker</p>	<p><b>TIPS</b></p> <p>1. Do not store the product in a low temperature or humid environment. 2. Do not place the product in high temperature environments such as exposure to sunlight or fire. 3. Do not use in restricted areas to avoid violating public order. 4. This product contains small components, please keep out of reach of infants and young children to prevent accidental ingestion. 5. The pictures and dimensions shown in the packaging and instructions are for reference only. Please refer to the actual product. 6. If the remote control is not used for a long time, please turn off the side switch interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</p> <p><b>FCC Warning</b></p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>
--	---	---	---	---

<p>CL18</p> <p>自动人脸跟拍支架 人像追踪 / 手势控制 / 1.5米支架 / 360度旋转 / 180度翻转</p>  <p>中文使用说明 </p> <p>使用说明书</p>	<p><b>欢迎使用跟拍云台支架</b></p> <p><b>产品使用方法</b></p> <p>1. 按住盖子两侧往外拉出手机夹延伸臂 2. 此时可拉开手机夹实现横/竖/翻转拍摄 注: 反向操作时, 即回到收纳状态</p>	  <p><b>手势控制</b></p>  <p><b>蓝牙遥控器</b></p>  <p>1. 拨动遥控器侧面开关 (ON开启/OFF关闭) 遥控器指示灯自动闪烁。 2. 打开手机“设置” - “蓝牙”开启蓝牙, 搜索CL-SXP”点击设备名称配对, 显示已连接后, 指示灯停止闪烁, 即连接成功 (遥控器处于开启状态)。 3. 方向键: 看短视频时, 上/下键切换视频, 左/右键为左滑动右滑动。 4. 点赞键: 看短视频 (单击暂停/双击点赞)。 5. 短视频录制: 进入短视频界面, “单击”开始和暂停拍摄。 6. 拍照键: 进入像机拍摄界面, “单击”开始和暂停拍照。 * 苹果手机无法通过遥控器上下左右按键刷视频 需在手机自带设置1: 设置-辅助功能-触控-辅助触控(打开)-跟踪灵敏度(在辅助触控菜单内下拉能找到跟踪灵敏度功能), 把小白点往乌龟方向调(在进度条调至1/3或者1/4遥控刷灵敏度最佳), 完成后即可上下左右遥控刷视频、看书(长按上下按键可调节音量)。</p>	<p><b>故障排除</b></p> <p>1. 蓝牙遥控器无法开机。 &gt;&gt;&gt; 将遥控器进行充电, 待充电完毕后重试。 2. 开机后蓝牙无法连接/无法正常工作&gt;&gt; 移除手机上的蓝牙配对重启蓝牙遥控器后重新配对连接。 3. 安卓手机如果无法使用遥控器拍照&gt;&gt;&gt; 按下拍照键可以调节音量: 打开App相机界面, 打开设置图标一把“音量键功能”修改成默认或者使用音量键拍照, 即可使用遥控器10米远程拍照。 4. 使用跟踪云台功能 跟踪目标丢失时, 云台停止并指示灯闪烁, 此时再次走入相机视野范围内即可或使用手势重启开启跟拍。为保证识别准确性, 请在距跟拍器0.3-5米的范围内使用。</p>	<p><b>温馨提示</b></p> <p>1. 请勿将产品置于低温、潮湿环境保存。 2. 请勿将产品置于曝晒、火烤等高温环境。 3. 请勿在设备被限制的场所中使用, 避免违反公共秩序。 4. 本产品含有细小部件, 请放置于婴幼儿触摸不到的地方, 防止小孩误吞。 5. 包装及说明书等所示图片、尺寸仅供参考, 请以实物为准。 6. 长时间不使用遥控器, 请关掉侧面开关。</p>
---	--	--	--	---