



尺寸: 75*75mm

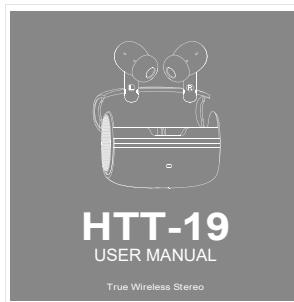

Package Contents

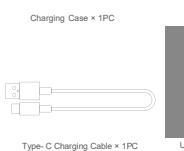

Type-C Charging Cable × 1PC



Earbuds × 3 Pair

User Manual × 1 PC



Product Overview



1



2

Touch Control Diagram

The touch area (MFB Touch Panel) is located in the upper part of earbuds handle.

(MFB)

Touch Panel

Charging Pin

LED Indicator

Type-C Port


Ambient Noise

Cancellation Mic

Mic

Charging Pin

3

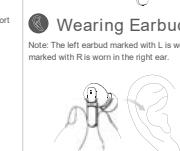

Wearing Earbuds

Note: The left earbud marked with L is worn in the left ear, and the right earbud marked with R is worn in the right ear.



Power ON/OFF

Power on

Auto: Open the charging case and take out the earbuds to power on

Manually: Press and hold the MFB for 3s.

Power off

Auto: Place both earbud in its charging case, Close the lid.

Manually: Press and hold the MFB for 5s.

Open cover and take out the earbuds to power on

Touch to turn on

Put earbuds in to power off

Touch to turn off



Pairing

1. Open the charging case, and take out the earbuds earbuds will pair automatically.

One of the earbuds flashes blue and red, the another earbud light goes out.

2. Activate Bluetooth on the device, turn on Bluetooth, search for pairing name

"HTT-19" and click on it.



Bluetooth Lost

1. Turn off mobile phone's Bluetooth, earbuds will enter the pairing mode and can

pair with other devices.

2. If the connection range is exceeded, the earbuds will enter the back connection mode. No connection within 5 minutes, the earbuds will turn off

 
Notes For Signal Transmission Distance (as illustrate)



Reset

If your earbuds accidentally only get one earbud to work, or fail to pair, please reset the earphone.

1. Power off all "HTT-19" Bluetooth records on the phone, and turn off Bluetooth.
2. Put earbuds into charging case, and then take out to pairing mode, tap L & R MFB 5 times simultaneously, hear "DU" prompt voice to clear all pairing.
3. Put earbuds into charging case.



Touch Operation

Left Earbud



- 1x Play / Pause: Tap the MFB once.
- 1x Answer the call: Tap the MFB once.
- 2x Previous Track: Double tap the left MFB.
- 2x End Call/Reject call: Double tap the left MFB.
- 3x Volume -: Triple tap the left MFB.
- 4x Game mode: Four tap the left MFB.
- 1.5s Voice assistant: Press and hold the MFB for 1.5s.

9

Touch Operation

Right Earbud



- 1x Play / Pause: Tap the MFB once.
- 1x Answer the call: Tap the MFB once.
- 2x Next Track: Double tap the right MFB.
- 2x End Call/Reject call: Double tap the right MFB.
- 3x Volume +: Triple tap the right MFB.
- 4x Game mode: Four tap the right MFB.
- 1.5s Voice assistant: Press and hold the MFB for 1.5s.

10

Earbuds low battery alarm

When the battery power is low, every 1 minute voice reminder "Lower battery" and Red light double flashing, until the battery power is run out and turn off.



Charge your earbuds

Place your earbuds the charging case and close the lid, earbuds automatically complete charge.



Product Parameter

Earbud(each)

Model Name: HTT-19

Bluetooth Version: V5.4

Speaker: Φ10mm

Bluetooth Range: 10m/33ft (with out obstacles)

Technology: HSP/HFP/A2DP/AVRCP

Frequency Range: 20Hz-20kHz

Weight: 4.0g

Size: 32.5*20.2*22.6mm

Charging Time: 0.5H

Battery Capacity: 40mAh

Play Music Time: 6H

Input: DC 5V ±0.08A

Charging Case

Weight: 38g

Size: 60*46*28mm

Charging Time: 2H

Battery Capacity: 400mAh

Input: DC 5V ±0.3A

13

Earbuds Warning

1. Please do not place the product in an environment where the temperature is too low (above 45°C or below 0°C).

2. Do not dismantle or repair the earbuds under any circumstances, if necessary, please send the product to the seller for repair.

3. Do not throw or drop the earbuds to avoid damage.

4. The earbuds and its accessories will be disconnected if the distance between them is more than 10 meters.

5. Keep the device and accessories away from children and pets.

6. Do not put the earbuds into the washing machine.

Battery Warning

1. The battery in the product may cause fire disaster or risk of chemical burning if mishandled.

2. Please charge with a rated voltage charger.

3. The discarding of battery should obey local law, if possible, please recycle it. Do not dispose of it in general garbage, because it may cause a explosion.

4. Users are not allowed to take out or replace battery in the product unless there is a stipulation on user manual. It is very hazardous to do this, may cause a damage to product.

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2BQNF-HTT-19

14

15