

水族灯2代说明书

设计稿尺寸：291x216mm(已在四周各留3mm出血位)

印刷成品尺寸：285x210mm

291mm

216mm

PRODUCT FEATURES

7 Color Light Modes:
Choose from 7 different color modes to customize the aquarium light: red, green, blue, purple, golden yellow, cyan, or white.

Stepless Dimming:
Adjust the light brightness to your needs with stepless dimming.

Three Timing Options (Auto On/Off):
Select from three automatic on/off modes (6H, 10H, and 12H) to suit your needs.

PRODUCT PARAMETER					
MODEL	HD-YG-300	HD-YG-300	HD-YG-300	HD-YG-400	HD-YG-1200
INPUT VOLTAGE	AC 100-240V				
OUTPUT VOLTAGE	DC 20V				
POWER	14W	18W	22W	26W	36W
LIGHT SIZE	12"	18"	24"	30"	36"
APPLICATION	12"-18"	18"-24"	24"-30"	30"-36"	36"-42"
POWER CORD	DC adapter (3.0V) + remote (2B)				

PACKAGE INCLUDED

1* Aquarium Light
2* Metal brackets
1* AC/DC adaptor
1* User manual

WARRANTY

- 1-year limited warranty provided free of charge.
- 1-month free return policy.
- Free replacement available for 3 months.

IMPORTANT SAFETY INSTRUCTIONS

Warning: To guard against injury, basic safety precautions should be observed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS:
You should read all the important notices on the appliance before using it. Failure to do so may result in loss of fish life or damage to the appliance.

Danger: To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt to repair it yourself. Return the appliance to an authorized service facility for service or discard the appliance.

A: Carefully examine the appliance after installation. Do not operate the appliance if it has a damaged cord or plug, or if it is malfunctioning or has been dropped or damaged in any manner. The power cord of this appliance cannot be replaced. If the cord is damaged, the appliance should be discarded. Never cut the cord.

B: To avoid the possibility of the appliance plug or receptacle getting wet, position the plug or receptacle to one side of a wall mounted receptacle to prevent water from slipping onto it. A "drip loop" should be arranged by the user for the cord connecting the appliance to a receptacle. The drip loop is that part of the cord below the level of the receptacle or the connector if an extension cord is used to prevent water from travelling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, do not unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance, then unplug and examine for presence of water in the receptacle.

This appliance is not intended for use by persons (including children) with significantly impaired physical or mental capabilities, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.

Customer Service: support@gamalta-home.com

OPERATION

- ON/OFF Key:** Press once to turn on the light and twice to turn off the light.
- Color Mode Key:** Press the button to switch between the following color modes: Press the button once to white; Press the button twice to red; Press the button three times to blue; Press the button four times to green; Press the button five times to purple; Press the button six times to golden yellow; Press the button seven times to cyan; Press the button eight times to recycle (Change one color in turn every 2 minutes).
- Down Key:** Select from three automatic on/off modes (6H, 10H, and 12H) to suit your needs.
- Up Key:** Short press to increase brightness by 10%. Long press for stepless dimming from dark to bright.

INSTALLATION

SAFETY INFORMATION:
Before using the light fixture, please ensure that all components are undamaged. Always disconnect electrical supply of the light fixture before any kind of maintenance.

A. Make sure to mount the light fixture correctly and securely on the aquarium before operating the appliance.

B. Ensure that the brackets are on the outside of the aquarium frame. If needed, adjust the extendable mounting brackets to ensure proper fit on aquarium.

C. For maximum LED performance, it is recommended to clean the fixture on a weekly basis. Prior to cleaning, unplug the transformer and remove the fixture from the aquarium (Use both hands when manipulating the appliance). Carefully wipe exposed surfaces with a damp cloth to remove any dust or mineral deposits that may collect over time. Do not use detergents or harsh cleaners as they may damage the light fixture.

Download the APP

Search "GAMALTA" in the app store or scan the QR code below to download.

Adding a New Device to an Existing Secured Network.

1. Tap the "Add Device" button in the bottom right corner of the dashboard.

2. Tap the "Add Device" button in the bottom right corner of the dashboard.

3. Confirm the device name to connect the device online.

4. Tap the "Control" button and Device online to set different choice.

5. Tap the "Manual" button for user-defined light color customization.

6. Tap the "Scene" button for 24/7 user-customizable sunrise and sunset lighting feature.

7. Tap the "Auto Mode" button for tropical lighting mode.

8. Tap the top right corner of the dashboard to open the edit device page.

9. Tap the "User Guide" button to access written instructions regarding manual control, scenes, auto mode and device configuration.

216mm

封底

封面