

炫彩蓝牙音箱  
V7

使用说明书

按键及接口说明

①

②

③

④

⑤

⑥

⑦

⑧

⑨

① 上一首/音量减

② RGB灯效键

③ 模式键

④ 开机/关机，播放/暂停

⑤ 下一首/音量加

⑥ TF卡接口

⑦ USB接口

⑧ 充电接口

⑨ 3.5mm音频接口

01

蓝牙连接方法

(1) 打开音箱蓝牙模式

1. 长按电源键3秒开机，响开机提示音，开机默认蓝牙模式；  
2. U盘、TF、AUX、FM等模式时可短按模式键切换至蓝牙模式；

(2) 连接到移动设备

\* 打开设备蓝牙功能，点击搜索，找到“V7”并点击连接，连接成功后响连接提示音；  
\* 下次使用时，打开设备蓝牙功能会自动连接，回连不成功自动转到配对状态；10分钟无连接自动关机。

-----

切换设备操作

如果音箱与当前设备处于连接状态，则需要与当前设备断开连接，然后使用新的移动设备按上述（2）连接音箱。

02

产品参数

|      |               |
|------|---------------|
| 频率响应 | 100Hz - 20KHz |
| 信噪比  | > 90dB        |
| 充电时间 | 约4小时          |
| 电源输入 | 5V 2A         |
| 音箱尺寸 | 105x125mm     |

03

**FCC Caution:**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Colored Glaze  
Wireless Speaker  
V7

PRODUCT USER MANUAL

按键及接口说明

①

②

③

④

⑤

⑥

⑦

⑧

⑨

① Short press for previous song/long press for volume -

② Light switch

③ Mode switch

④ ON/OFF

⑤ Short press for next song/long press for volume +

⑥ TF card

⑦ USB

⑧ Charging port

⑨ 3.5mm audio input line/Auxiliary

01

Connection method

① Turn on the speaker

Turn on the speaker, the speaker will automatically enter into the wireless mode.

② Connect to mobile devices

Turn on wireless option in mobile device,select ( v6 ) in the mobile device,the speaker will make a beep sound after successful connection.  
For future uses, just keep the mobile device's wireless turned on, it can automatically connect.  
If the connection is unsuccessful, it will automatically switch to pairing status and the pairing will automatically shutdown in 10 minutes.

-----

Connect to new mobile device

If the current device with the speaker is connected, you need to disconnect the current device's wireless, then use the new mobile device to connect the speaker.

02

Technical parameter

|                          |               |
|--------------------------|---------------|
| Frequency response range | 100Hz-20KHz   |
| Signal noise rate        | > 90dB        |
| Battery charge time      | About 4 hours |
| USB power input          | 5V 2A         |
| Speaker size             | 105x125mm     |

03

Size:65\*85mm折页