


## 04 Connect the Z-axis Motor Cable

Connect the Z-axis motor cable on both sides of the printer.

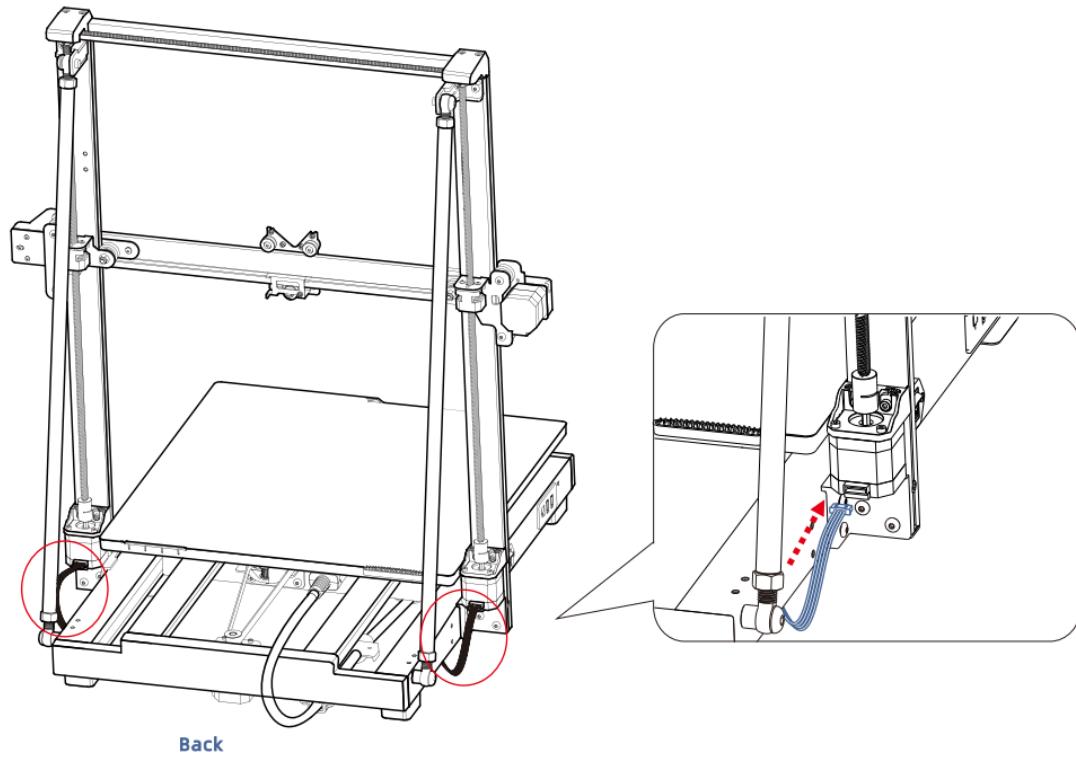

## 05 Connect Printhead Cable

Pull the belt horizontally to lower the height of the Z-axis.

