

AC POWER CONNECTION:

1. Insert the plug into the port on the back.
2. Plug the AC power cord into an AC outlet.
3. Clock display will light.

BATTERY POWER:

1. Open the battery compartment on the bottom of the alarm clock.
2. Install 3 x AA batteries ensuring that the battery polarity corresponds to the polarity in the battery compartment.
3. Close the battery compartment cover.

Specification:


Model: H251MC
Power: AC 120V 50/60Hz
FM Band: 87.5-108 MHz
AM Band: 520-1710kHz
Battery Required: 3*AA Batteries
(Battery not included)

In the Package:
Alarm clock radio * 1
User manual * 1
Warranty Card * 1
Power cord * 1

- ① When changing batteries, keep AC power connected to save your settings.
- ② Battery only last 12 hours for radio, please keep plug in.
- ③ Don't mix different types of batteries or mix new and used batteries or mix different brand batteries.
- ④ When use battery, screen will dimmed if no operation within 20 seconds.

Setting the Clock

1. Press the button , then the time will start to flash.
2. Press the button to adjust the hour; Press the button to adjust the minute.
3. Press the button to exit and save the setting.

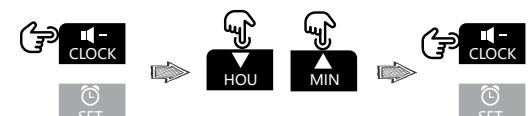


Note:

1. Turn off radio before you set clock.
2. When you set the clock, the AM and PM indicator will tell a.m. and p.m. time.

Setting the Alarm

1. Press the button , then alarm time will start to flash.
2. Press the button to adjust the hour; Press the button to set the minute.
3. Press the button to exit and save the setting.

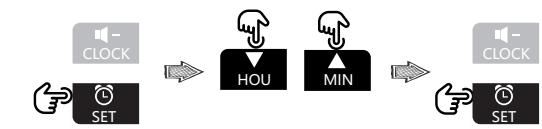


Note:

1. Turn off radio before you set alarm clock.
2. When you set the alarm, the **AM PM** indicator will tell you a.m. and p.m. time.

Setting Alarm Ringtone

1. Press the button , then alarm time will start to flash.
2. Press the button to turn on or turn off radio alarm.
3. Press the button to exit and save the setting.

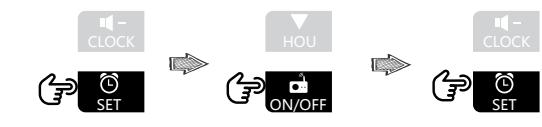


Note: The alarm clock will goes off with the lastest station you listen to if you set radio alarm.

When radio alarm is on, the indicator will light up; When radio alarm is off, the Indicator will light up.

Setting Alarm Volume

1. Press the button , then alarm time will start to flash.
2. Press the button to increase or decrease the alarm volume.
3. Press the button to exit and save the setting.

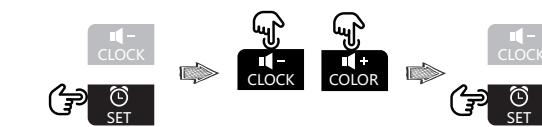

Note: The volume duation is 5-16 levels. When alarm goes off, the volume will gradually increase from 0 to the level you setted within 20 seconds.

Turn on/off Alarm

Press the button to turn on or turn off alarm clock. When alarm is on, the alarm indicator or will light up. When alarm clock is off, all the alarm indicator will be off.

Snooze

1. When alarm goes off, press the button to mute the alarm for 9 minutes. The alarm can be muted 2 times.
2. When alarm goes off with beep, press other buttons **except** to turn the alarm off for 24 hours.
3. When alarm goes off with radio, you can tuning radio or adjust volume or listen to preset stations with releated buttons. press the buttons or to silence alarm for 24 hours.

Note: The alarm indicator will blink in snooze mode.

Playing the Radio

- Press the button  to turn on/off radio.
- Press the button  to switch AM and FM.
- Press the buttons  and  to tune frequency.
- Press the buttons   to adjust radio volume.
- Press and hold the buttons   to auto search a station with frequency down or up.

Note:

If no operations within 10 seconds, the screen will display time. Press any button to let screen display frequency again.

Setting Radio Presets

Press and hold any one of the four numbered buttons     to preset the present station to be station 1,2,3 or 4. the indicator  will light up when finish the setting.

To listen to preset stations, press any one of the four numbered buttons, then you can listen to the stations.

  to preset station

 to listen to preset station

Setting the Sleep Timer

When listen to radio, press the button  , the screen will show "90". Press the button SNOOZE to select among 90MIN, 80MIN, 70 MIN, 60 MIN, 50 MIN, 40 MIN, 30 MIN, 20 MIN, 10 MIN and off.

Switching the Color

When radio is off, press the button  to switch the LED colors, total 3 colors available- red, green and blue.

Adjusting the Dimmer

When radio is off, Press the button  to adjust the display brightness, total 4 brightness levels.

Our Warranty:

90 Days Money Back Guarantee

365 Days Free Replacement

Quick Respond After-sales Support

MANUFACTURE:

SHENZHEN SUOTAI TRADE CO., LTD

Address: B3005, 30/F, Zhulongtian Talent Apartment,
Shiyan Street, Baoan District, Shenzhen, China,
ZIP Code:518110 Mail:support@homial.com

Contact US

By Email

Send message to

"support@homial.com"

On Amazon

Open the Amazon App or Amazon website, then click "orders" to enter order page. Choose the order to send message.

TROUBLESHOOTINGS

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
GENERAL		
Power does not come on.	AC cord not plugged in.	Insert plug firmly into AC outlet.
RADIO		
No sound.	Power is not on.	Turn the unit on.
	Volume control at minimum position.	Turn the volume control up.
Noise or sound distorted on AM or FM.	AM: Interference. FM: Antenna wire not extended.	Position the radio for better AM reception. Extend antenna wire.
CLOCK		
Incorrect time.	Clock not set. Batteries inserted incorrectly, not connected or depleted.	Set the clock. Check batteries.
Alarm does not turn on.	Alarm is not set to turn on. Clock is not set. Alarm time is not set.	Slide the alarm switch to turn on alarm Set the clock. Set alarm time.

Dear Customer,

Sincerely thanks for choosing Homial, and hope that you'll be satisfied with our product.

Always satisfying customer, providing them with high quality and grade product as well as the service are our aim.

You may have questions or issues while using the item, hope that you could give us a chance to improving. Just feel free to tell us on amazon or by email, we will do our best to help you and make you feel happy.

Thanks&Best regards.
Homial

1) FCC 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2) FCC 15.21

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

3) FCC 15.105

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.