

# Dog Training Collar

## Instruction Manual



Model NO. :X18



### FAQ

**The dog training collar does not work, or my dog does not respond after correct installation of the dog training collar how should I solve this problem?**

### Warnings

- Please do not use dog leash on the collar; Avoid leaving the collar on the dog for more than 12 hours per day; if possible, please reposition the collar on the dog's neck every 1-2 hours.
- When first using on dog, begin with the lowest shock level to observe dog's reaction to check the fit to prevent dog's over-reaction.
- Try to use vibration or beep sound to train your dog firstly and then try to train with the lowest level of shock function to build communication and strengthen your bond with your best friend to reach the effect of stopping or controlling dog's bad behaviors with only vibration or beep sound, no need shock function. Attention: If your dog has heart disease, high blood pressure, cerebral thrombosis, skin allergies, etc., please do not use the product.
- Training collars are used to train the dogs and kindly entertainment and not for punishment.

● Make sure the battery of remote transmitter and receiver collar have enough power to operate.

● Check to see if the remote transmitter and receiver collar are turned on and check signal channel button on remote transmitter to ensure signal channel are correctly configured; switch "signal channel button with 4 channels" to choose right channel.

● If any of the 4 signal channels does not work, try to pair the remote transmitter and receiver again, see the detailed instruction on the below part "Product Paring Instruction".

### Why the real control range is less than 1 km as we advertised?

- There may be obstacles of affecting signal distance around.
- There may be signal interference around.

### How do you know the shock function is working or not?

Attention: Ensure you have paired the remote transmitter and receiver correspondingly following the detailed below instruction of "Product Paring instruction" before you check the shock function is working or not with the following steps

1 Push up to turn on the keylock button of remote transmitter and switch to the right channel that you want to choose

2 Short press the button on the remote receiver with the green light on to open the receiver.

3 Let the metal side of the Test Bulb Tool directly contact with the two Metal Prongs on remote receiver and then short press any button of shock buttons on remote transmitter one time, the light of the Test Bulb Tool will be on one time to prove the shock function works for the receiver. Test other receivers with the same way

### If the shock function is not effective, check the following reasons to ensure shock function to be effective on pet:

1 Check if the shock function is working or not with the Test Bulb Tool by following the above steps for "How do you know the shock function is working or not?"

2 Check the metal prongs is proper or not for your dog and choose right metal prongs between long prongs and short prongs.

3 Check to ensure both of the pieces of metal prongs when wearing collar are contacting directly with your dog's neck skin simultaneously.

4 Check if battery power of transmitter and receiver is enough or not, if not, charge in time please.

5 Check the collar is fitted properly and there should be enough space to fit one or two fingers snugly in between the contact points on the receiver on the collar and the dog's skin.

6 If try all the above ways, the shock function still does not work, try to cut dog hairs shorter or wet dog hairs a little to wear collar with receiver.

### Keylockbutton of remote transmitter

Safety Keylock of remote transmitter to prevent button error touching when put in pocket or bag, push down the key to lock all the button functions and push up the key to unlock.



Power button/Keylock of Remote Transmitter


### LED Icons Display on Remote Transmitter

Push up to turn on the keylock button of remote transmitter and then choose the channel that you want by switching the channel button of remote transmitter, and then the LED Icons appearing on the LED Display screen of Remote Transmitter shows the function you have set last time for the corresponding receiver.



### Turn on/off Receiver

To turn on receiver with vibrating sound of the receiver by short pressing the "Power Button" of the receiver, and to turn off the receiver with vibrating sound by long pressing the "Power Button" of the receiver for 3 seconds.

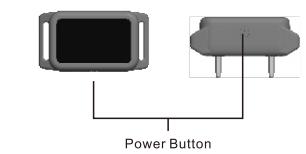

Power Button

### Receiver's LED Indication light

● When receiver is turned on and is working, green Indication light shines every 2 seconds.

● Paring remote transmitter and receiver according to the below instruction part "Product Paring Instruction" long press "Power Button" to make green indication light always on to prove successful pairing.

● Receiver red indication light's shining all the time indicates low power for receiver.

● When power charging is finished, red indication light change to green color.



### About battery

● Do not expose to extreme heat or store at the temperature above 60°C to avoid explosion and life-threatening.

● Charge in time when battery power is low for both remote transmitter and receiver.

● When charging is full, Please unplug in time to avoid long charging.

● Do not repair or disassemble by yourself When battery is damaged.

● Quick charge with 2 hours, and charge for 4 hours for the first time of charging.

Attention: when product is not in use, manually close the product to increase battery life.

### Remote Range

● The product send and receive signals with 433Hz frequency and has a long transmission distance.

● The transmission distance is applicable for most dog training environments, such as indoors, courtyards, parks, etc.

● The practical transmission distance may be a little shorter due to different environment, weather, obstacles and other factors.

● When the remote transmitter sends signals, hold it with hand to operate the product to prevent any obstacles from affecting transmitting signals. If you use it indoors or under your pocket, it will also affect the signal transmission.

### Receiver's Sleep Mode

● The receiver will enter into sleep mode without any operation for 30 seconds and keep extremely low power consumption.

● When the remote transmitter is turned on, press any button of the remote transmitter to wake up sleep mode of the receiver in 1-2 seconds.

● The receiver's sleep mode is usually for dog's short break or sleep without the need of manual shutdown to save power of the receiver.

### Receiver's Outdoor Water-proof Function

The receiver's water-proof level reaches to IPX7, applicable for any weather such as rain or fog, etc.

Applicable for dog's swimming(1 meter under water) for Less Than One Hour.

### Remote Transmitter

#### Instruction for the Buttons

1 Level Adjustment Button : In shock mode, you can choose level from 1-99, choose your proper level for your dog please.(Kindly reminding: Use shock function for your dog with caution please.)

2 Strong Shock Button: Press Strong Shock Button and the shock is strong, applicable for large dogs.



3 Vibration button : Press the button to transmit vibrations to stimulate your dog and even if you hold down the button, the vibration will be auto-off in 10 seconds.

4 Flashlight Lighting Button: Press the button to easily find dog's position with the light.

5 Weak Shock Button: Press Weak Shock Button and the shock is weak, applicable for small dogs.

6 Power button/Keylock of Remote Transmitter: To effectively prevent the remote transmitter from error pressing and touching when placed in pocket or bag.

7 Beep Sound Button : Press the button and there will be beep sound on the remote receiver; when your dog is well trained, the sound button can make you effectively interact with your dog.

8 Channel Switch Key: If you have two collars, press the channel switch key to choose channel between collar 1 and collar 2. Attention: One collar can work only with one channel and see the detailed instruction in the below part of "Product Paring Instruction" to know clearly how to pair new channels for multiple collars.

### Caution

Charge both remote transmitter and receiver for at least 4 hours before the first time's using.

### Product Paring Instruction

This product works via wireless signals, make sure the Channel on the Remote Transmitter that you choose is set and paired correspondingly with receiver, if you lose contact between Remote Transmitter and the Receiver due to signal interruption or power failure during pairing process, pair again manually please.

### Pairing instruction

1 Switch on the keylock button of remote transmitter and then choose the channel that you want by switching the Channel Key on the remote transmitter, and then long press the power button on remote receiver for 5 seconds until green Indication light begins to flash quickly to enter into pairing process.(Attention: Operate when the remote receiver is off status), and then press any button of the beep sound function, vibration function and shock function on remote transmitter to complete the whole pairing process. After successful pairing, there will be a beep sound on remote receiver and the LED flashing will stop.

2 Remind: If you buy dog training collar with 2 remote receivers, you can pair the 2 remote receivers separately with Channel 1 and Channel 2 on remote transmitter.

3 If you buy dog training collar with 4 remote receivers, you can pair the 4 remote receivers separately with Channel 1, Channel 2, Channel 3, Channel 4 on remote transmitter. Pairing 4 remote receivers with the same way to finally control 4 different dogs by switching the channel on remote transmitter.

4 Use beep sound and vibration together with reward to train and interact with your pet or other series of actions.

5 No adjustable level for vibration and beep sound mode.



### Vibration Mode and Beep Sound Mode

1 Before using shock function, you can firstly use beep sound function and vibration function to let your pet form conditioned response and stop current wrong behaviors after pet's feeling vibration or beep sound, which is the most safe method to train your pet.

2 Use beep sound and vibration together with reward to train and interact with your pet or other series of actions.

3 No adjustable level for vibration and beep sound mode.



### Training Function Instruction

#### Shock Mode

1 Before the first's using, you can use the test bulb tool to test whether the current of the remote receiver is normal or not by taking test bulb tool to make the

### Proper Wearing of Receiver

1 Dog training collars are not designed for daily use and we advise to use the collar only in dog's active training, and take off the collar when your dog is unattended.

2 Make sure your dog is wearing the collar in proper position on dog's neck to make dog feel comfortable.

3 Place the receiver in the center of your dog's neck, near the chin, to ensure that both metal prongs contact the skin at the same time and also to avoid loosening easily.

4 Make sure there should be enough space to fit one or two fingers snugly in between the metal prongs on the receiver on the collar and the dog's skin.

1 When not in use, the products must be placed in a dry place just as other electronic device.

2 To prevent battery damage, charge the product regularly even when the device is not in use. But do not charge for more than 3 hours.

3 Clean metal prongs regularly every week please.

4 Check your dog's neck is wearing the remote receiver collar correctly and properly please.

### Packing List

#### Packing includes:

Remote Transmitter\*1, Metal Prongs\*4, Remote Receiver\*1, Charging Cable for Remote Transmitter and Receiver\*1, Dog Collar\*1, Hand Lanyard\*1, Test Bulb Tool\*1.

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

\* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.