

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device. This equipment has been tested and found to comply with the requirements. However, you are encouraged to use good shielding practices when using the equipment.

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment has been tested and found to comply with the limits using standard test methods. Your use of the equipment may cause interference to radio communications, television reception, or other electronic equipment. If you experience such interference, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not solve the problem, you are encouraged to report the problem to the dealer. The dealer should be contacted within 90 days of the date the equipment should have been installed and operated for minimum 20 hours between the radiator and your body.

[illegible]

Product Information	
Product Name	Ultrasonic Cool Mist Humidifier
Model No.	HQ-052328
Voltage	AC 200V~240V
Frequency	50Hz/60Hz
Rated Power	120W
Maximum Mist Output	1200ml/h
Water Tank Capacity	1.8L
Extra (Cool) Tube Included	240mm×265mm×1180mm
Net weight	1450g

CONTROL PANEL

Labels in the diagram include: Motor, Blade, Water intake, Top cover of tank, Motor induction coil, Motor cable, Power switch, Power cord, Safety lock, Control panel, Emergency stop, Manual control, and Detachable bagging.

Important instructions:

- Plug in the power supply with a "stop" status. The screen displays the power supply mode "E", indicating that the machine is running normally.
- Click the "E" button to reach the battery status machine at the default 100% motor level, and press again to start the machine.
- When the machine is running, touch the battery and the machine will enter "stop" mode and the screen will display "off". Touch it again to turn off the stop mode.

[illegible][illegible]



Customize your preferences by adjusting various settings using the control panel's various control **▲** and **▼** keys.



When the funnel is in use for an extended period, please switch off the machine using **▲** and **▼** to empty the water tanks.

ESSENTIAL OIL TRY



① Press the **Essential Oil** button at the back of the control panel. **▲** and **▼** keys and empty water tanks and water reservoir protect the machine for long lifetime.

 


② Press and **ON/OFF** 4 drops of essential oil.

③ Switch.

1. Check the contents of the **bag** (see water pipe, 1, 2, 3, 4, 5, 6 and 7) and remove contents.
2. Remove the **water pipe** from the water pump, then **fill** the **bag** with water from the water pipe to it.
3. Put the **water pipe** into the bottom of the **water tank**, then **fill** the **water tank** to the **water level** (see the **water level** on the **water tank** and connect the **water tank** to the **water pump** (see the **water pump** on the **water tank**).
4. Insert the **water pipe** into the **water tank**.

At night



Item Name	Machine	Instruction Manual	Remote Control
Quantity	1 Piece	1	1

Please carefully check the contents of the package. If there is any missing or damaged items, please contact us immediately for further assistance. Our customer service team will provide a solution within 24 hours.

COMPONENTS	02
CONTROL PANEL	02
WIFI OPERATING INSTRUCTIONS	04
SCREEN DESCRIPTION	05
INSTRUCTIONS FOR USE	06
ESSENTIAL OIL TRAY	08
SAFETY GUIDE	09
NOTE	10
COMMON PROBLEMS AND SOLUTIONS	11
PRODUCT INFORMATION	12

[illegible][illegible][illegible]

When this icon is lit, it means that the machine is not in constant connection with **Wi-Fi**. The set-up for constant connectivity **Wi-Fi** is not yet done with the current connection. Press **Wi-Fi** on the display.

When this icon is lit, it means the machine is made as an.

Specific means that **Wi-Fi** means the machine is powered on and is vibrantly made.

After registration, if the identifier is not set, it indicates that the water **Wi-Fi** is the machine, generating you to set **Wi-Fi** for **Wi-Fi** to be used. After adding water for the machine to ensure normal operation.

When this mark is on, it means the machine **Wi-Fi** is connected and you can control the machine's operation via the app.

This mark represents the current network's connectivity. If there is no connection, the **Wi-Fi** of the product is not.

For the time necessary to the timing.

Means timing on the right table 280° rotation function.

1. Insert the water hose into the back of the machine. The water hose will extend the machine to enter the machine.

2. Plug the machine into the socket. Upon a successful connection to the power cable, a sound will be heard, indicating that the machine is operating.

3. Touch the power button to initiate the machine, starting the water pumping process. In the 3-5 seconds, there will be no sound.

4. Download the "TUNE" App. Touch the "TUNE" button to start the connection.