
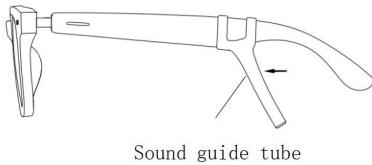


Smart Glasses

User Guide

Product diagram

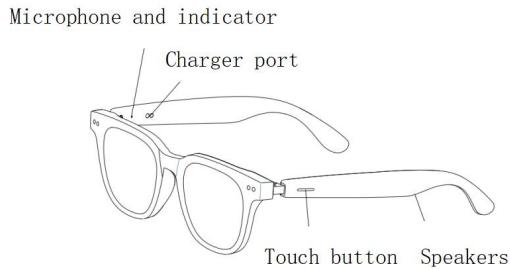

Product parameter

- ◇ Bluetooth pairing name: T08
- ◇ Bluetooth version: Bluetooth V5.4
- ◇ Transmission distance: >10 meters
- ◇ Play music time: 5~7 hours
- ◇ Charging input: DC 5V/200mA
- ◇ Charging time: about 1 hour

Instructions for the glasses

◇ Power on

Long press touch button of the glasses 3 seconds

◇ Power off

Long press touch button of the glasses 3 seconds

◇ Pair the left leg and the right leg of the glasses

When the glasses are not connected to the mobile phone, double-click the left or right touch button of the glasses

◇ Play or Pause music

Clicking the left or right touch button of the glasses

◇ Move previous

Double click the left touch button of the glasses

◇ Move next

Double click the right touch button of the glasses

◇ Volume up

There clicks the right touch button of the glasses

◇ Volume down

There clicks the left touch button of the glasses

◇ Wake up the voice assistant

Four clicks the left or right touch button of the glasses

◇ Answer or hang up the call

Clicking the left or right touch button of the glasses

◇ Reject a call

Long press the left or right touch button of the glasses 1 second

◇ Low battery warning

When the battery power is low, the glasses will automatically broadcast a low battery warning tone until the glasses is turned off

◇ Charge

Connecting the charge line to glasses charger port, the red

light is on when charging, and the green light is on when fully charged

◆ **Automatic shutdown**

If the glasses are not connected to the Bluetooth device within 5 minutes, it will automatically shutdown

Safety information

Before you use the device, read the following precautions carefully to ensure optimal performance and to avoid danger or violation of laws and regulations.

- ◆ Do not heat or bend the frame temples as this may cause them to malfunction or even catch on fire.
- ◆ To prevent hearing damage, avoid using the product at a high volume for long period of time.
- ◆ Wearing this device will not protect your eyes from injury by looking directly at the sun or other strong light sources, or from physical trauma.
- ◆ Use the microfiber cloth that came with your glasses or a clean and soft cloth to clean your glasses. Do not clean your glasses with anything sharp or abrasive. Use a neutral cleanser to clean your glasses. To avoid lens damage, deformation, and discoloration, do not use abrasive cleansers or sprays, high-concentration cleaners, chemical cleaning fluid, alcohol, or acetone solvent to clean your glasses.
- ◆ Please note that strenuous exercise while wearing the product carries a risk of facial injury due to product breakage.
- ◆ Some individuals may be allergic to some of the metallic materials used in this device.
- ◆ Do not use this device in areas where the use of wireless devices is prohibited as it may interfere with other devices or present other hazards.
- ◆ In clinics and hospitals where the use of wireless devices is

prohibited, please comply with the regulations and power off this device.

- ◇ Some wireless devices may interfere with implantable medical devices and other medical equipment, such as pacemakers, cochlear implants, and hearing aids. Consult the manufacturer of your medical devices for more information.
- ◇ When using this device, keep it at least 15 cm away from medical devices.
- ◇ Use this device at temperatures between 0°C and 35°C and store this device and its accessories at temperatures between -20°C and 45°C. Extreme heat or cold may damage this device.
- ◇ Keep this device and its accessories that may contain small components out of the reach of children. Otherwise, children may damage this device and its accessories by mistake, or swallow small components, which may cause choking.
- ◇ This device is not a toy, and children should only use it under adult supervision.
- ◇ Use only the accessories approved by the device manufacturer for use with this model. The use of other accessories may void the device warranty, lead to injury, or violate the relevant regulations of the country where you are located.
- ◇ Connecting this device to non-approved or incompatible power supplies, chargers, or batteries may cause fires or explosions.
- ◇ Do not disassemble or modify this device, insert foreign objects into it, or submerge it in water or other liquids as this may cause this device to leak, overheat, catch on fire, and even explode.
- ◇ Do not drop, squeeze, or puncture this device. Avoid applying external pressure to this device as this may cause its electronic circuitry to short or overheat.
- ◇ If the battery fluid leaks, avoid touching it. If the battery fluid touches your skin or eyes, rinse it out immediately using

clean water and seek medical treatment.

- ◇ When this device is being charged, ensure the power socket is close to this device and easy to reach. Disconnect the charger from this device and unplug the charger from the power socket once this device has been fully charged.
- ◇ While this device is being charged, do not place any cards with built-in chips in the card holder of the charging case. Otherwise, this device or card may not work properly.
- ◇ This device is equipped with a non-removable internal battery. Do not attempt to replace the battery yourself as this may damage the battery or device, or even cause fires and explosions.
- ◇ When charging this device, do not place any cards with built-in chips in the card holder of the charging case. Otherwise, this device or the card may not work properly.
- ◇ Ensure that the device and its accessories are dry. Do not attempt to dry this device using an external heating device such as a microwave oven or hair dryer.
- ◇ Stop using this device, close all apps, and disconnect all connected devices before performing cleaning and maintenance on this device.
- ◇ Do not place any magnetic stripe cards (such as bank cards and telephone cards) near this device as this may cause the card to become damaged.
- ◇ Avoid disassembling or modifying this device and its accessories. Unauthorized disassembly and modifications may result in voiding of the factory warranty. If the device malfunctions, take your device and proof of purchase to an authorized Customer Service Center for assistance.
- ◇ the glasses frame temples contain built-in batteries. Do not heat, bend, or remove the batteries as this may damage them, or even cause them to catch on fire or explode. Do not place this device in environments with strong sunlight, high temperature,

or high humidity.

◇ This device is splash and dust resistant. Splash and dust resistance are not permanent conditions, and may decrease as a result of normal wear and tear. Do not charge this device in humid conditions.

◇ Do not dispose this device and its accessories as ordinary household waste.

◇ Respect local laws on the disposal of this device and its accessories and support recycling efforts.

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.