




Local Settings



Configuration keyhole

R90

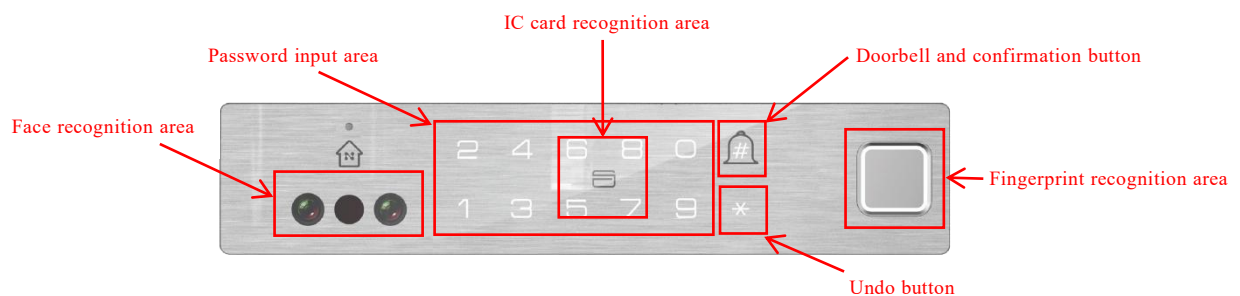

R89

Adding the Administrator Password

Insert the card pin into the configuration keyhole and remove it after hearing a "beep" sound.

Voice prompt: Please enter a new 6 to 10 digit password.

Manually enter the set password on the exterior panel and press the "#" key to confirm.

Voice prompt: Please reenter.

Manually enter the set password on the front panel again and press the "#" key to confirm.

Voice prompt: Addition successful. Means the administrator password has been successfully entered.

Note: This password is the administrator password with the highest authority and must not be forgotten!!

The "*" key is for returning, and the "#" key is for confirmation.

If no operation is performed for more than 10 seconds, the device will automatically return to the previous menu.



Adding Password

Voice prompt: 1 Add user; 2 Delete user; 3 System settings.

Press "1" to add a user.

Voice prompt: 1 Add password; 2 Add fingerprint; 3 Add IC card; 4 Add face recognition.

Press "1" to add a password.

Voice prompt: Please enter a new 6 to 10 digit password , press "*" to return.

Manually enter the set password and press the "#" key to confirm.

Voice prompt: Please reenter.

Manually enter the set password again and press the "#" key to confirm.

Voice prompt: 1 Addition successful, you can now use this password to unlock the door.

Adding Fingerprint

Press "2" to add a fingerprint, and follow the voice prompt to press the user's finger on the fingerprint area 5 times.

Voice prompt: 2 Addition successful, you can now use this fingerprint to unlock the door.

Note: When entering, try to cover the entire fingerprint for entry.

Adding IC Card

Press "3" to add a IC card, and hear the voice prompt: Please one card press after.

Place the accompanying IC card on the recognition area.

Voice prompt: 3 Addition successful, you can now use this door card to unlock the door.

Note: Only compatible with Yuntian's IC cards.

Adding Face Recognition

Press "4" to add face recognition.

The user stands in front of the door, aligning with the exterior panel of the door control.

Follow the voice prompts to move the face forward, up, down, left, and right for recording.

After the recording is complete, Voice prompt: 4 Addition successful, you can use this face recognition to unlock the door.

Deleting User

Voice prompt: 1 Add user; 2 Delete user; 3 System settings.

Press "2" to delete a user.

Voice prompt: 1 Delete by number; 2 User deletion verification; 3 Delete all.

Press "1" for number deletion.



Voice prompt: Please add your deletion number.

Enter the user number to be deleted + "#" key to confirm deletion.

Voice prompt: Deletion successful. It indicates that the deletion has been successful.

Press "2" to delete the user.

Voice prompt: Please verify user to be deleted.

Enter the user's password, fingerprint, door card, or face recognition directly on the exterior panel.

Voice prompt: Operation successful, the user's input item unlocking method is now deleted.

Press "3" to delete all.

Voice prompt: Press "#" to confirm.

After pressing the "#" key, hear the voice prompt: Deletion successful.

Note: All registered users and unlocking methods will be deleted except for the administrator password.

System Settings - Volume Mode Settings

Voice prompt: 1 Add user; 2 Delete user; 3 System settings.

Press "3" to enter system settings.

Voice prompt: 1 Function setting; 2 Function switch; 3 Restore factory settings.

Press "1" to enter function settings.

Voice prompt: 1 Volume setting; 2 Unlock mode setting; 3 Human body sensing distance setting.

Press "1" to enter volume settings.

Voice prompt: 1 High volume; 2 Medium volume; 3 Low volume; 4 Mute.

Usually, you can select "1" high volume for settings.

System Settings -Restore Factory Settings

Voice prompt: 1 Function settings; 2 Function switch; 3 Restore factory settings.

Press "3" to restore factory settings, and confirm with the "#" key.

Voice prompt: Initialization complete, and the system has now been restored to factory settings.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.