
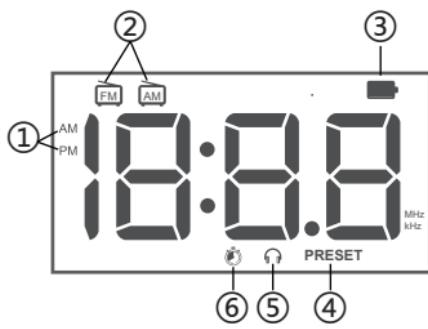


## USER MANUAL

Model: RA02DR

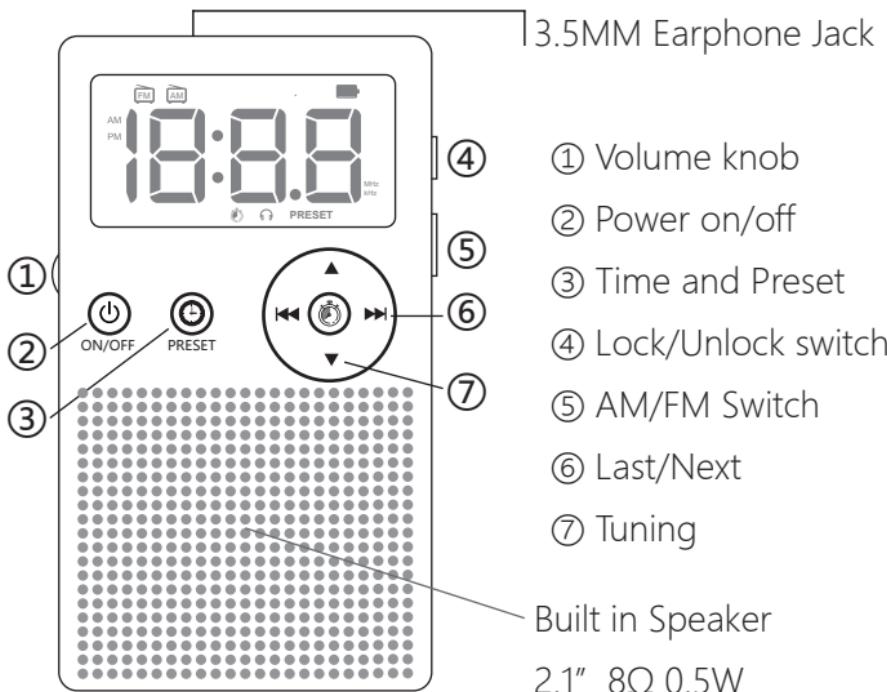

## **Before First Use:**

Insert 3 AA batteries (not included) with correct poles, then screen will display time.

The button cell CR2032 (included) is only for saving settings when battery power out or replace batteries, can't power screen or radio.

**Please note:** Don't mix old and new or different brand batteries. The battery should be removed if the product will be stored for more than two weeks. Leaky batteries can badly damage unit. The button cell CR2032 could last more than 12 months, needn't to take it out if unnecessary.

**About the Backlit:** The screen backlit will be off if no operation after 5 seconds, press anyone button to wake it up.

**About the Lock Indicator:** The red indicator will light up when you lock the radio, the indicator will be off if no operation after 5 seconds.

**About the screen:** When listening to radio, the screen will display time if no operation after 10 seconds. Press anyone button except "ON/OFF PRESET" to display frequency.

## **Technical Specifications:**

Batteries Required: 3 AA Batteries (not included)

Button Cell: CR2032 3V (Included)

Frequency: AM 520-1710 kHz FM 87.5-108 MHz

Speaker: 2.1" 8Ω 0.5W

Dimensions: 13\*7.3\*3.2 CM

## **In the Box:**

Radio \*1

Carrying Strap \*1

User Manual \*1

Button Cell \*1 (built-in)



## SETTING THE TIME

When radio is off, press the button , time will flash on the display, then press the button  to set the hour and press the button  to set the minute, press the button  again to exit and save.



## LISTEN TO RADIO

- Press the button  to turn on or off radio.
- Slide the AM/FM switch to listen to am or fm.
- Press the button   to tune frequency or press and hold the button   to auto-search a station.
- Press the button   to scan preset stations.



## PRESET STATION

When listening to the station, press the button , screen will display preset location “**P01**”, then press the button   to change the location number, press the button  again to save and exit.



## SLEEP TIMER

When listening to the radio, press the button , screen will display **90** (means radio will auto-off after 90 minutes), repeatedly press to reduce the duration, wait for 5 seconds to save and exit, radio will auto-off when count-down is over.



## LOCK / UNLOCK

Slide up the switch to , the lock indicator will light, all the button won't work, but you can adjust volume or switch AM/FM. To unlock the buttons, slide down the switch to , the indicator will be off, you can operate the radio with buttons.

# Need our help?

**Welcome to contact us, and we will do our best to make sure you are satisfied.**

HUIXING ELECTRICS CO.,LTD

1B701, HAOYA GARDON, FUQIAN RD, FUCHENG ST,  
LONGHUA DISTRICT, SHENZHEN

ZIP:518110

MAIL: support@ratakee.com

1) FCC 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2) FCC 15.21

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

3) FCC 15.105

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.