



# Manual of Intelligent Lock

Open the lock way: Fingerprint, password, credit card, key

 


Optional:

tuya WiFi

Wirelessremote control

Multi-language support

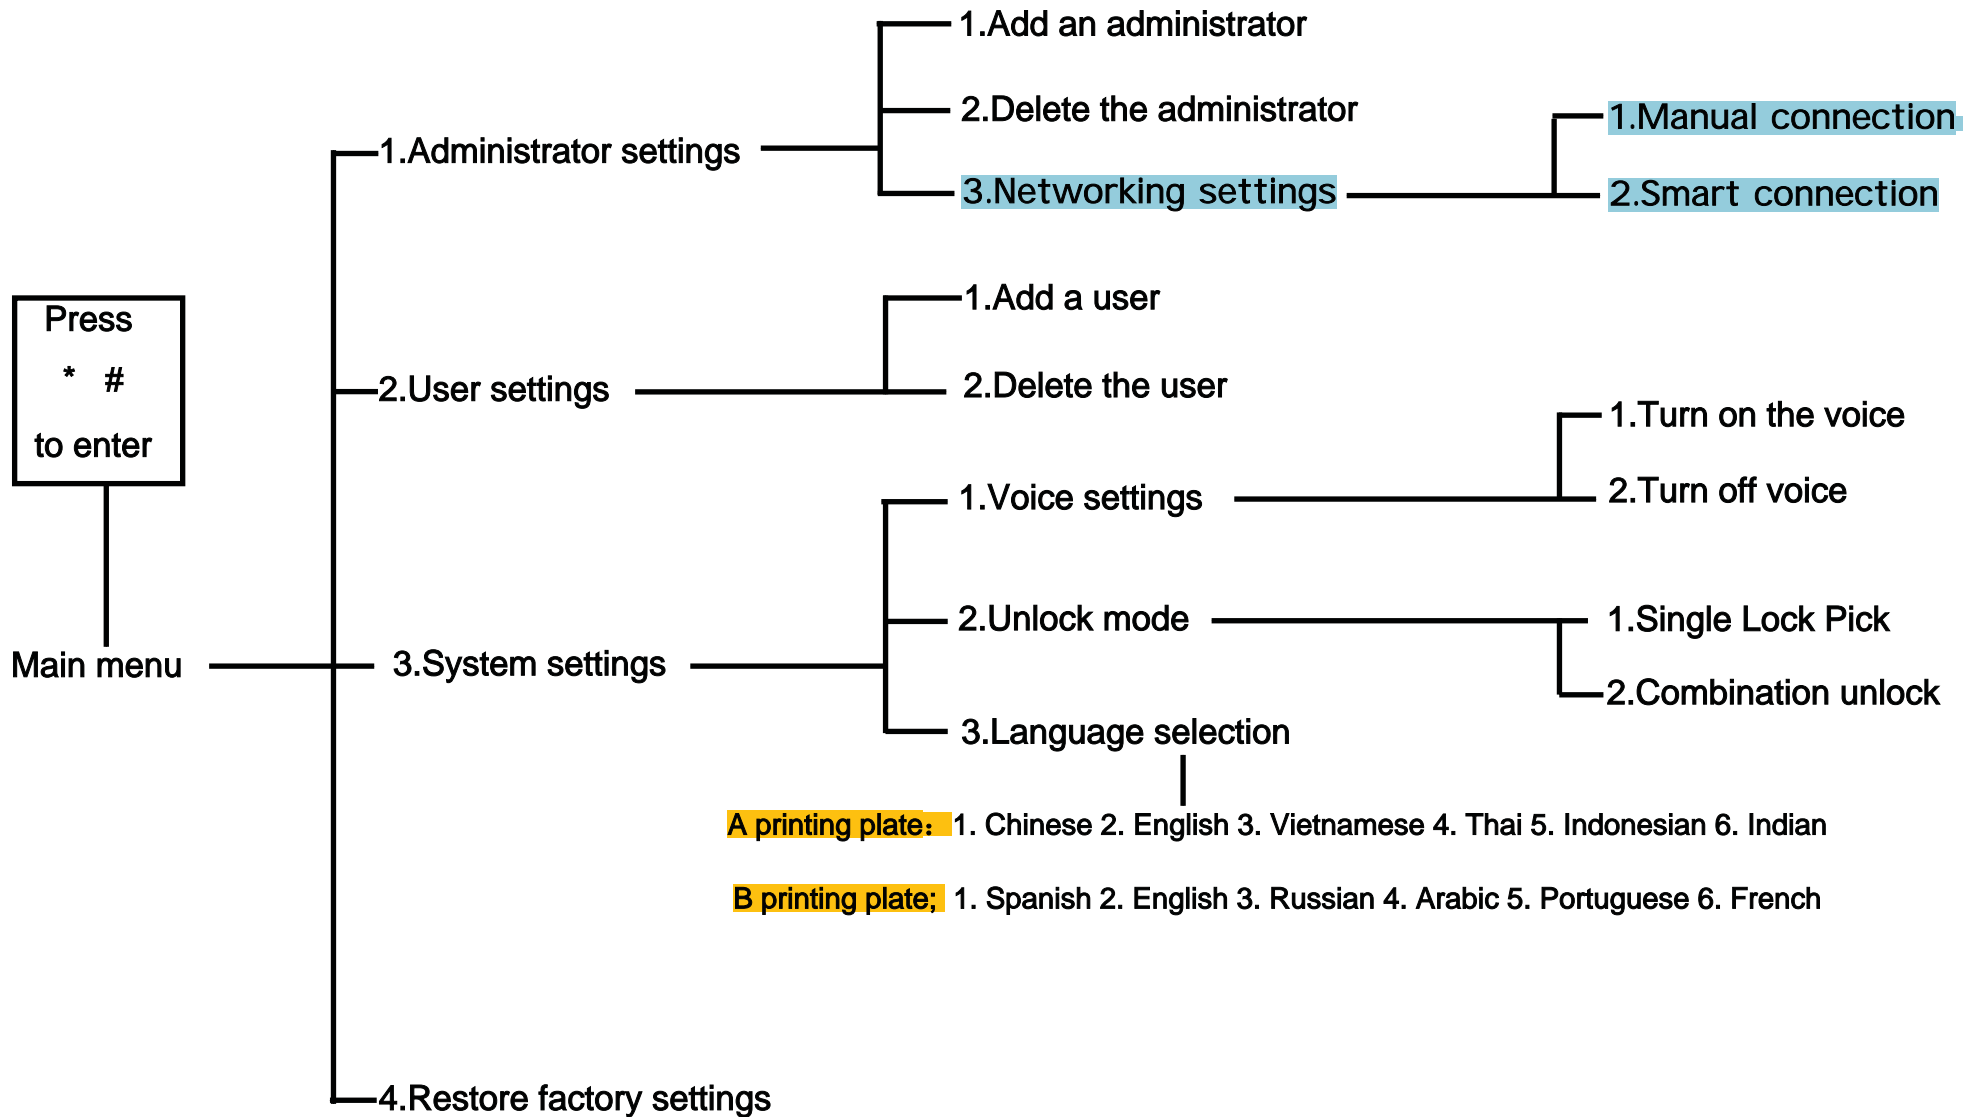


Warning Sign:

According to the voice navigation tips, the operation



## Simple operation, easy to learn

 1. Press and hold the reset key for 6 seconds to restore the factory settings;
2. In the initial state, press "\*" and then "#". The language: "Please enter administrator information", enter the initial password "123456" and then press # key  
Information (fingerprint, swipe card, password, etc.), according to the voice navigation input, refer to the box diagram;
3. Press the lock key for a few seconds, the voice prompt "the door has been locked", at this time, ordinary users can not unlock the lock, only the administrator can unlock the lock;  
Hold down the lock key for 3 seconds or the administrator unlocked once, the lock is cancelled.
4. Regular function: press "5" before unlocking (within 4 seconds), press "5" and "#". Enter the correct initial password "123456" and then press # key

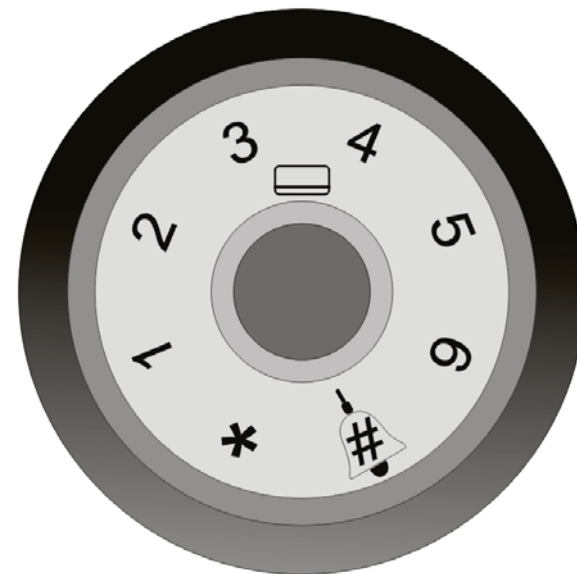


## Doodle WiFi connection

  1. Mobile phone connected to WiFi(2.4G), can not connect to 5G network
2. Press "\*" and "#" on the smart lock to enter the settings, press 3 in the administrator settings, Select 2 Smart Connection
3. After opening the **tuya** on the phone, click "+" in the upper right corner to add the device camera /Lock the door lock (WiFi) enter the WiFi password to confirm the keyboard light flash, Connect connection confirm the keyboard light flash, Connect connection until the connection is successful.

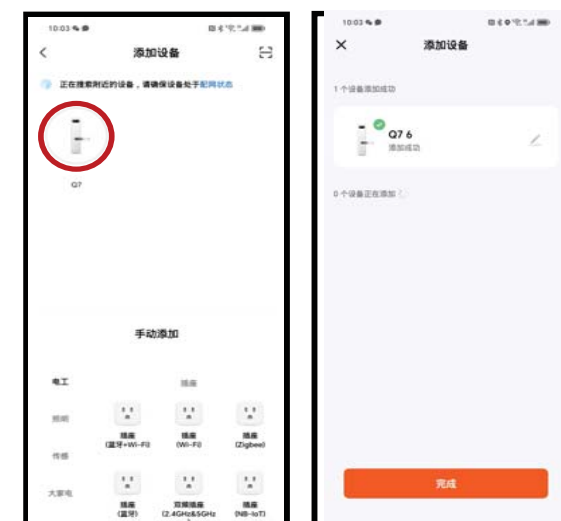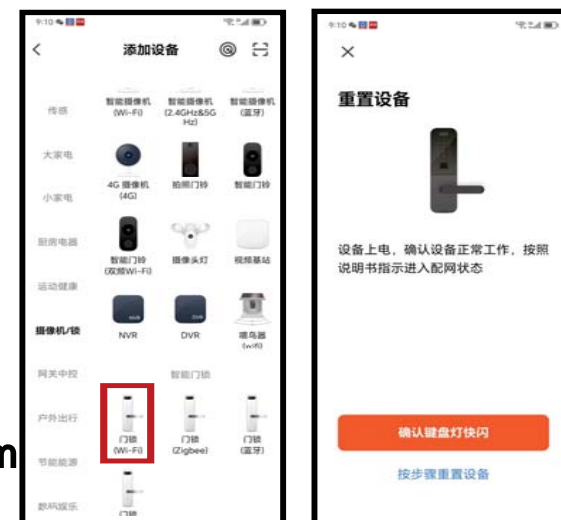

Download the Doodle smart App



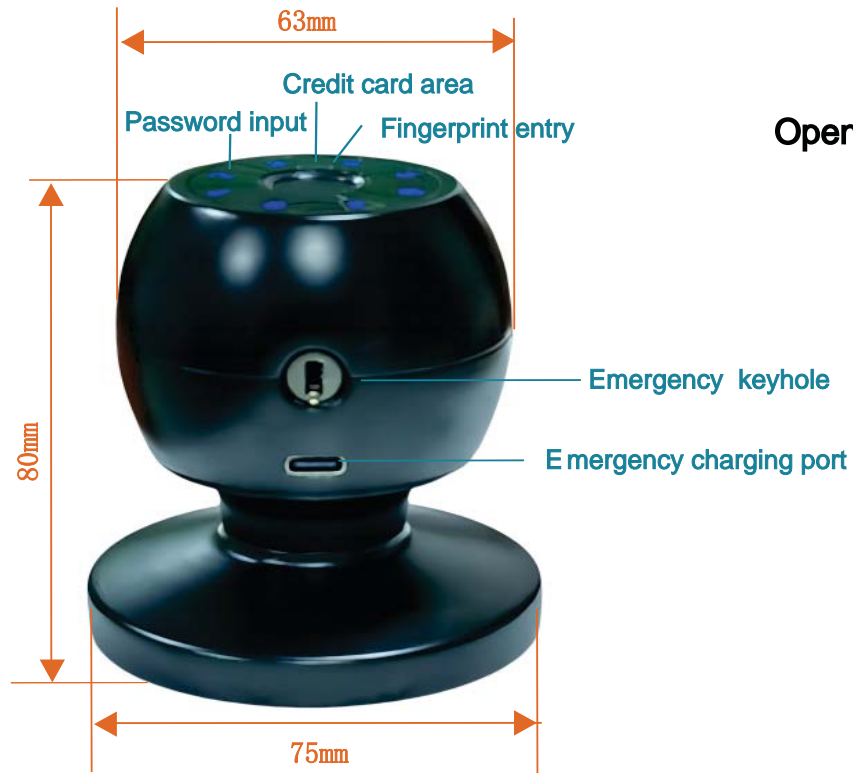 

## Product Parameter:

Open the door way: Fingerprint, swipe card, password, key

main body material: aluminum alloy

The fingerprint head: semiconductor

Fingerprint capacity: 100

Password capacity: 100

quiescent current : 40uA

Unlock current: 150mAworking

voltage: 4.5-6V

applicable temperature: -25°C-70°C

Suitable for humidity: 20%-90%

Applicable door thick: 40-60mm

scope of application : Office, room doors, etc

## Installation steps:

1. Install the lock body



2. Install 2 filaments



3. The plug screw is made parallel to the line



4. Put the line into the square tube



5. Put the line through the square tube



6. Install screws



7. Tighten it with the screws

 


8. Plug in the docking plug





9. Hide the plugs and wires

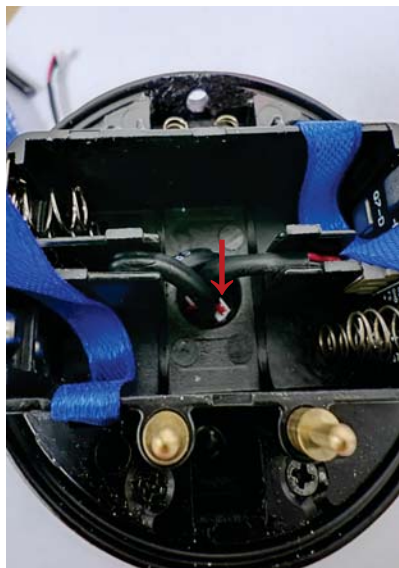

10. Install the next two batteries



 
11. Install two more batteries



12. Put the hook off



13. Installation is complete

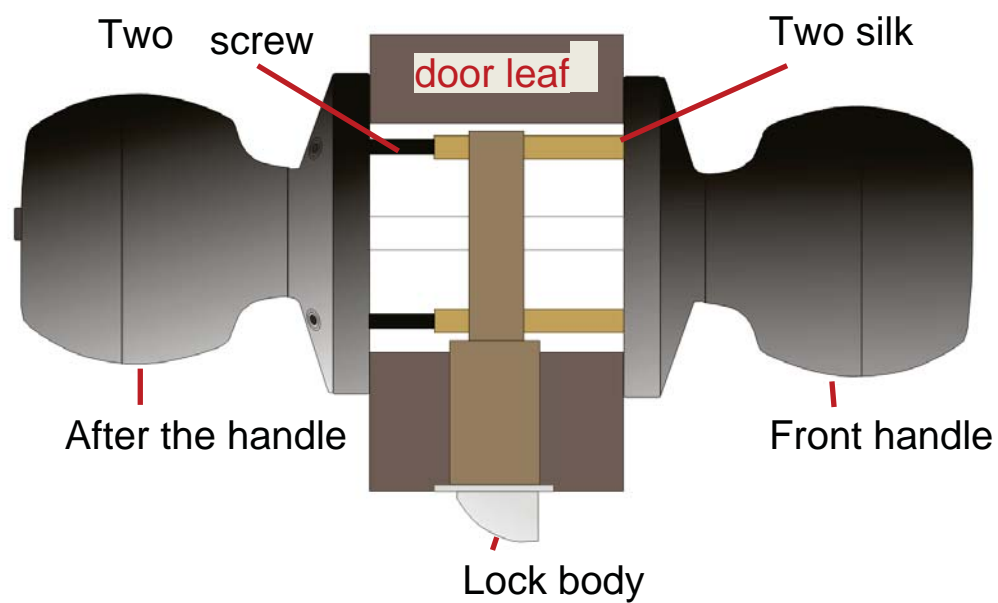

## FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

Equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a Particular installation.If thise quipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator&your body.



## Important tips:

Be sure to keep the emergency key with you or in a safe place outside

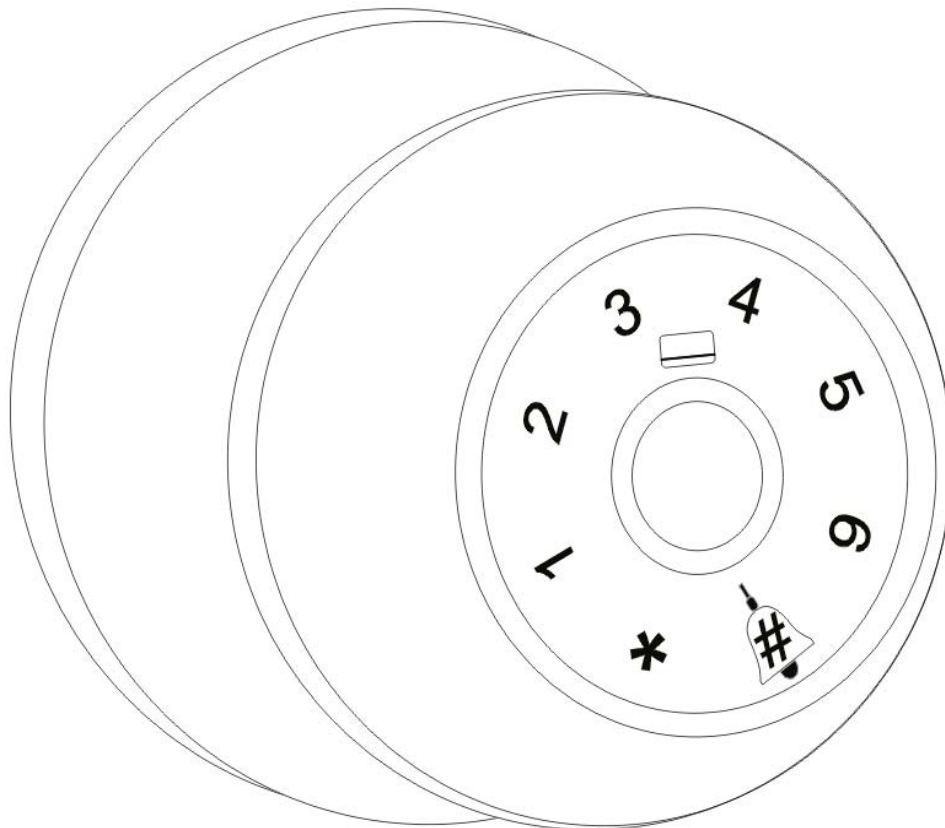

Made in china