
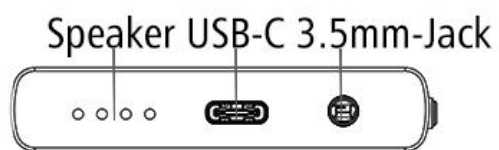


USER MANUAL

G4

www.pecsu.com

Key Diagram

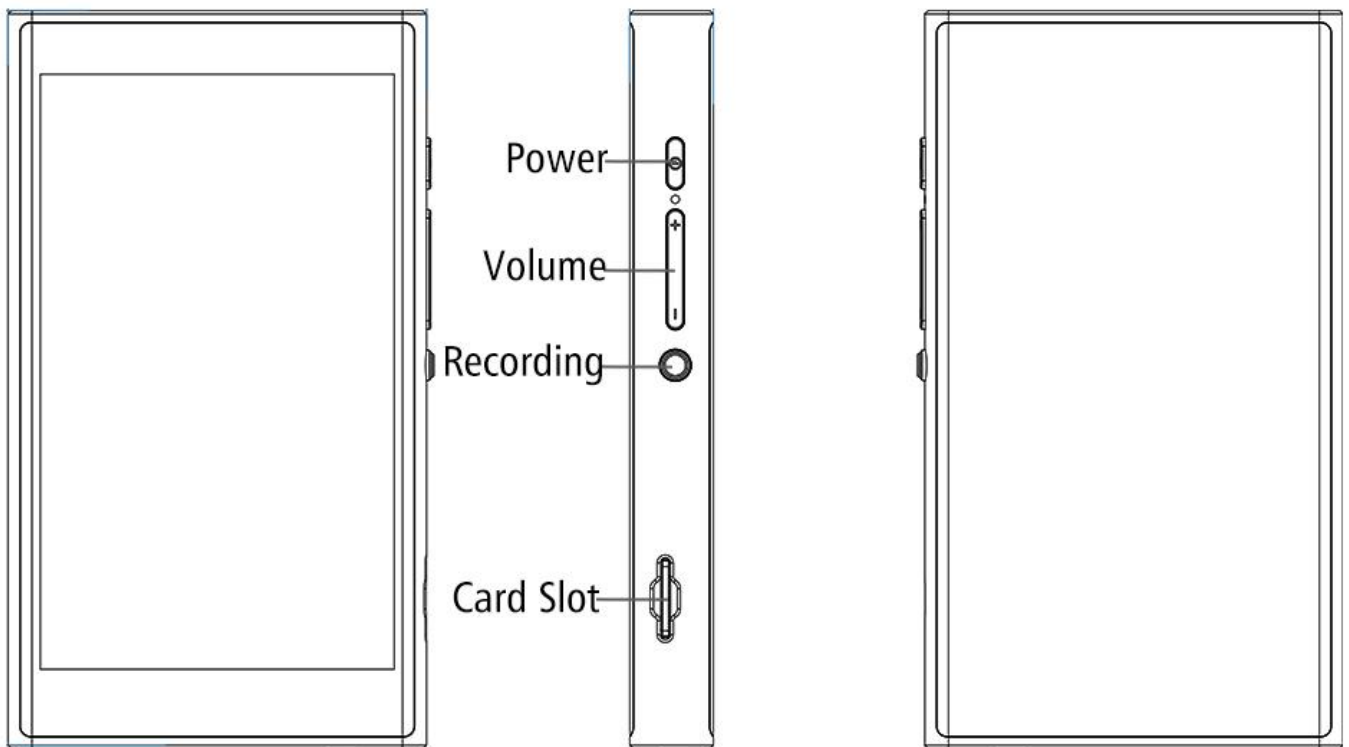

Button Description

■ Power

- ⦿ Short press(in the power-off state): press and hold for 3 seconds to power on
- ⦿ Deep press(in the power-off state): press and hold for 10 seconds to force-restart
- ⦿ Short press(in the power-on state): turn off / on the screen
- ⦿ Deep press(in the power-on state): shutdown; Restart

■ Touch button area

- ⦿ Show button: Swipe up on the bottom of the screen to reveal the function buttons
- ⦿ Hide button: Clicking the leftmost " ▼ " will hide the button navigation
- ⦿ Home: Click " ● " to return to the main screen of the screen
- ⦿ Back: Click " ◀ " to return to the previous page
- ⦿ Open background apps: Click " ■ " to open background process management (recent apps) and swipe left or right to delete the selected process

■ Reset function

Forced restart, press and hold the power button for 10 seconds, and the device will restart

■ Volume - / +

Reduce/Increase the volume / Continuously reduce/Increase the volume

■ USB - C Port

Used for charging and file transfer

■ SD Slot

Expand the storage of the device, with maximum support of 512GB TF / Micro-SD card

■ 3.5mm Output

Connect your earphones or external speakers

■ Speaker

Built-in speaker

Google Play Store

- Free downloading and installation, you can download and install any kind of applications you need from google play store, including live streaming, games, social media apps and so on.
- © Please do not install high capacity / heavy games onto this music player.
- © Please do not install applications from any third-party or unknown sources out of google play store, it may cause compatibility problem or virus, etc.
- © Application installation will affect the system performance, the more apps installed, the slower the system performance will be. Once the music player sticks or restarts without a notice, it may be caused by the installation of too many apps, in this case, please remove some of the apps to leave a certain space for the system to run smoothly.

File Transfer G4 PC

■ Windows

- © Compatible with Windows 98/Vista, Win XP/7/10/11, transfer files by the USB-C cable:
 1. Connect the Player to computer with the provided USB Cable. (Auto connect, no driver needed)
 2. Click "G4 Memory" and select the folder where you want to put the files onto. (if a micro SD card is inserted, it will show two memory available)

■ Mac OS

Please download the MTP device file transfer software before proceeding with the above operations. The recommended software is as follows:

© OpenMTP: <https://openmtp.ganeshrvel.com/>

© MacDroid: <https://www.macdroid.app>

About Parental Controls

■ How to set up parental controls ?

- (1) First of all, parents must have a Google account. If not, please create one. Please click Settings-Google-Log in to your parent's Google account.
- (2) Secondly, please click on the parental control mode - select Child or Teen - add the child's Google account (please pre-create a Google account for your child).

■ How to block browser or any other applications ?

Please click Parental Controls-Blocked apps-Manage apps while the parental control mode on.

For example, if you block browser, immediately the browser app will disappear from the G4 music player's display.

■ Application download request.

On parental control mode, any application download must be approved by the parents.

For more information or request, please contact: support@pecsu.com

or visit google parental controls Q&A page:

<https://support.google.com/googleplay/answer/1075738>

Trouble Shooting

■ Missing accessories?

©Please contact our support team to re-send the missing parts immediately.

■ FM radio cannot be turned on

©The FM Radio function will be affected by the location and the strength of the signal.

©A wired headset/headphones needs to be plugged as an antenna for Radio. If the headset is plugged and problem persists, double check if the 3.5mm port is properly connected or not, and please replace the headset and try again.

■ This device is used abnormally

- ◎ Please restore the factory settings to see if it returns to normal
- ◎ Press and hold the power button for 10 seconds to force-restart
- ◎ Contact our after-sales team for a system refresh or firmware reinstallation

■ **The device does not respond to charging or connecting to the PC**

- ◎ Please use the original USB-C cable to charge the player, please be informed that the MP3 player does NOT support PD fast charging, power from a PD charger will not be acceptable.
- ◎ In power off state, when charging with a USB-C cable connected to a computer or a power adapter, the player will usually light up and display a charging icon.
- ◎ If it's not charging, please double check the USB-C cable or power adapter is damaged: Connect the player by replacing it with another standard USB-C data or charging cable and power adapter to check if it can be charged normally.

■ **Forget password or pin-codes?**

- ◎ No worry, please send your order number with the date of purchase to our support team.

■ **The SD card is not working properly**

- ◎ Check if the SD card is inserted properly or not.
- ◎ Check the SD card if physically damaged or not.
- ◎ Check if the SD card is FAT32 or EXFAT.(only FAT32 format is perfectly supported)

■ **The operating speed become slowly / stuck / restart sometimes**

- ◎ Too many application installed, in this case, please remove some of the applications and leave a certain space for system to run smoothly.
- ◎ Software incompatibility, if you install other third-party unknown software into this player, in this case, please remove the software or factory reset the player.
- ◎ WiFi signal is poor will effect the speed while using live streaming applications.

For problems not listed above or with unknown reason, please contact: support@pecsu.com

Specifications

Model:	G4
O.S.:	Octa-core, Android 14.0
Built-in ROM + RAM:	3 + 32GB
Size:	107.40×61.19×12.20 MM (W×H×D)
Screen:	4.0inch 480×800 IPS
Product Material:	Metal, Tempered glass
Bluetooth	V5.0, 2-WAY
WiFi	Dual band 2.4
Charging Time:	about 3 hours for a full charge (5V 1A charger),
Playing Time:	music playback time is about 60 hours (test format MP3, maximum volume, bit rate 192Kbps,Bright screen, headphone playback)
Audio Format:	MP3, WMA, AAC, WAV, APE, FLAC with details below: MP3: bit rate 8Kbps-320Kbps,sampling rate 8KHz-48KHz WMA: bit rate 5Kbps-384Kbps,sampling rate 8KHz-48KHz AAC:bit rate 8Kbps-320Kbps,sampling rate 8KHz-48KHz WAV:bit rate 32Kbps-384Kbps,sampling rate 8KHz-48KHz APE:bit rate 800Kbps-1000Kbps,sampling rate 8KHz-48KHz FLAC:bit rate 1000Kbps-1200Kbps,sampling rate 8KHz-48KHz
E-Book Format:	TXT,PDF,EPUB,FB2,DOCX,MOBI, please download related APP in store
Recording Format:	3GPP
Language Support:	Customizable
Computer System Support:	Window XP, VISTA, WINDOWS 7/8.1/10/11, Mac OS 10
Micro SD card Format:	FAT 32

■ **Battery Life For Reference (lab data)**

- ◎ Screen-off state: play local music for about 10 hours.
- ◎ Screen-off state: play online music for about 6 hours.
- ◎ Screen-on state: play local video for about 5 hours.
- ◎ Screen-on state: play online video for about 4 hours.

Term & Condition of Warranty

Thank you for selecting Pecu, we will provide warranty below:

■ **Warranty terms:**

- ◎ Within 1 year from the date of purchase, failure or damage caused by product quality problems can be replaced for free or fully refunded.
- ◎ Accessories are not included in the warranty, such as USB cable, earphones, etc., but if quality problems occur within 7 days after purchase, they can be replaced for free.

■ **The following conditions are not covered by the warranty**

- ◎ Out of the warranty period.
- ◎ It has been disassembled or repaired privately by the user.
- ◎ Man-made damage, accidental damage, or deformation.
- ◎ Failure caused by installation and use in abnormal environments such as high temperature, high pressure, and humidity.

After sale service: support@pecsu.com www.pecsu.com

FCC Warning Statement (FCC ID 2BOXC-G4)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



SUCCESS COURIER SL

CALLE RIO TORMES NUM. 1, PLANTA 1, DERECHA,
OFICINA 3, Fuenlabrada, Madrid, 28947 Spain
successservice2@hotmail.com



1. Player or its battery can be damaged if dropped, burned, punctured, crushed, or exposed to liquid, please keep it away from fire, liquid, or airtight space.
2. To prevent possible hearing damage, do not listen at high volume levels for long periods.
3. Do not use earbuds to listen to music while walking or bicycling on streets or highways for your safety.
4. Check the voltage and current before connecting to the device, otherwise, it may cause damage to the loading device and other property.

