



Multi Speaker

CE UK CA FCC RoHS Made in China



MANUALE DI ISTRUZIONI
INSTRUCTION MANUAL

DM-D4



ENGLISH VERSION

What's included...

- 1x Multi Speaker
- 2x Rechargeable Wireless Microphones
- 2x Straps
- 1x Power Adapter
- 1x Performer's Manual




HOME PAGE

DM-D4 settings icon is displayed on the Homepage. Directly touch the icon on the screen to choose the desired function on the HOME PAGE and follow the instructions.
No Internet connection is needed for Bluetooth,AUX, USB Flash Drive and TF Card to work.
A WI-FI/Internet connection is required to run YouTube, Google Play and any other apps in the "My Apps" section.

TECHNICAL FEATURES:

SCREEN DIMENSION	13.3"
SPEAKER POWER	40W RMS
SPEAKER	4" WOOFER*2 + TWEETER*1

CONTROL PANEL

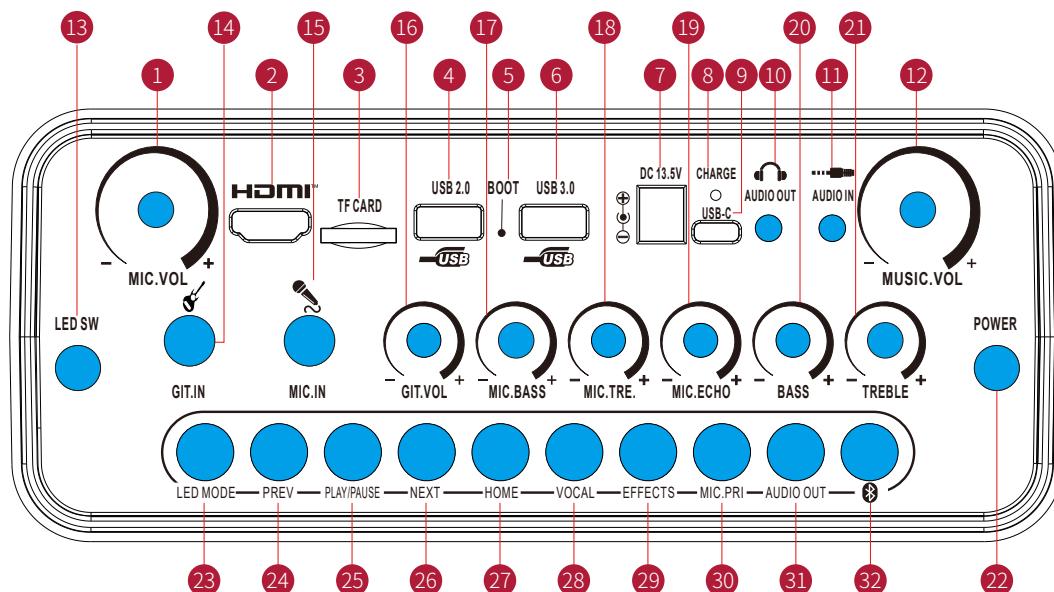

1. MUSIC VOL: Use this knob to adjust the main volume. Turn to the left to lower the volume, and to the right to raise it.

2. HDMI OUTPUT: HDMI output allows to connect the DM-D4 device to the TV.

3. TF:TF card port. Insert a TF card to play audio and video files.

4. USB 2.0: Play audio/video files via USB media.

5. BOOT: Insert a needle in the hole and simultaneously power on the Multi Speaker, then exit the needle. You will see on the screen a list of functions. UP/DOWN buttons on control panel to select Wipe data / factory reset.

6. USB 3.0: Play audio/video files via USB media.

7. DC 13.5V Charging port: Charging interface. Plug in the battery charger when the audio-video system has a low battery level.

8. CHARGING INDICATOR: It is red if the device is charging. The indicator will automatically change to blue when charging is finished.

9. OTG: USB type C live audio port.

10. AUDIO OUT: 3.5mm jack port for headphone or audio out.

11. AUDIO IN: 3.5mm live audio port.

12. MUSIC VOL: Use this knob to adjust the main volume. Turn to the left to lower the volume, and to the right to raise it.

13. LED SW: Press the switch to turn on (and then turn off) the led light.

14. GIT.IN: Guitar input with 6.35 mm jack.

15. MIC.IN: Microphone input with 6.35 mm jack.

16. GIT. VOL: Use this knob to adjust the guitar volume. Turn to the left to lower the volume, and to the right to raise it.

17. MIC.BASS: Use this knob to adjust the BASS of the microphone. Turn to the left to reduce it, and to the right to increase it. (Useful only when using the microphone).

18. MIC.TREBLE: Use this knob to adjust the TREBLE of the microphone. Turn to the left to reduce it, and to the right to increase it. (Useful only when using the microphone).

19. MIC.ECHO: Use this knob to adjust the ECHO effect of the microphone. Turn to the left to reduce it, and to the right to increase it. (Useful only when using the microphone).

20. BASS: Use this knob to adjust the volume of the BASS. Turn it to the left to lower the volume, or to the right to raise it.

21. TREBLE: Use this knob to adjust the volume of the TREBLE. Turn it to the left to lower the volume, or to the right to raise it.

22. POWER ON/OFF: Press the switch to turn on (and then turn off) the equipment.

23. LED MODE: Select LED effect.

24. PREV: Directional key to select a previous file or step.

25. PLAY/PAUSE: Play or pause the music.

26. NEXT: Directional key to select a next file or step.

27. HOME: Key to return to home page.


28. VOCAL: Key to turn on/ off remove the voice from the song.

29. EFFECTS: Key to start voice change app.

30. MIC.PRI: Button to prioritize the microphone. By activating this mode, if you use the microphone while a song is playing, the music will automatically turn down to let you hear what is amplified by the microphone. As soon as you stop talking, playback will resume normally.

31. AUDIO OUT: Key to enable/disable mute function while using headphones or extra speaker with AUDIO OUT 3.5mm jack port. Press the button to enable the sound only from headphones/speaker or also from the machine.

32. Bluetooth symbol: Bluetooth mode activation. You can connect a device via Bluetooth to playback music. BT works at a maximum distance of 10 meters.

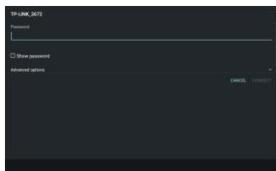

WI-FI CONFIGURATION

Touch the WIFI icon on the home screen, select the desired network and enter the password required, if any, for connection.

BLUETOOTH® CONNECTION

Touch the Bluetooth icon from the Home screen, or press the BT button to start the Bluetooth connection. Open your device settings in the Bluetooth section and select the “DM-D4” device.

Select the setting that allows to connect the 2 devices.

You can now listen to music files on your device through the DM-D4 device.

Press the RETURN/HOME key to exit Bluetooth mode.

DEVICE SETTINGS

Directly touch the SETTINGS icon on the screen.

Press the exit key or the arrow icon in the bottom right corner to exit a function.

You can adjust some functions of the device in the settings section by following the directions on the screen.

DATE and TIME SETTING:

Connecting the machine to wi-fi, date and time will automatically update.

If this not happens, due to connection problems, you can follow these steps:

- 1 - From the home page, touch “SETTINGS” icon and select DATE & TIME;
- 2 - Tap “Select time zone” and look for the time zone of your country.
If you can’t find it, select a city that has the same time zone of your Country.
- 3 - Before going back to the home page, tap “automatic date & time”.

LANGUAGE SETTING:

select "Languages and Input," then "Languages." Continue with "more language", and choose the desired language. The language will automatically change.

To back up your data and files, or go to factory data reset, go to Reset options.

Youtube, Google Play ,Google Chrome are pre-installed apps and cannot be uninstalled.

To uninstall other apps, push the icon and follow the instructions.

USING APPLICATIONS

From the Homepage, select the MY APPS icon. This section contains all the apps installed on the equipment.

Apps can be downloaded from Google Play with a dedicated account.

Warning! Some Apps may not be compatible with the Android version installed on the equipment and, therefore, you might not be able to either download or update them.

Explorer: Select EXPLORER in MY APPS, to check the available storage and the files available on DM-D4, USB or TF device.

WIRELESS MICROPHONE

-Press down on the triangular button with a Power symbol on each of the microphones to turn them on or off.

-The microphones will connect the DM-D4 device automatically.

-The microphones are rechargeable.

Troubleshooting Guide

1. Machine is not turning on.

The battery is depleted. Be sure to charge the machine after each use.

2. Microphone is not turning on.

The Microphone battery is low or depleted. Recharge the batteries for the microphone.

3. Touch screen is not turning on.

Turn off the power and then turn it back on.

4. USB or TF mode is not working.

Ensure that the touch screen is set to the right mode by going to the Media Player app and pressing the icon for your selected input. Alternatively, try unplugging either the USB or TF from the machine and turning it off. Turn the machine back on, plug the USB or TF back in, enter the Media Player app on the touch screen, and press the icon for your selected input.

5. Machine powers on and then shuts down.

Please charge the machine.

6. No sound is playing from the speaker.

Ensure that the volume on the machine, remote, and your device (if applicable) are all turned to an audible level.

7. Button or knob on the machine/remote control is not working properly.

Power off the machine and turn it back on.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.