


INSTRUCTION MANUAL

S6

Bluetooth headset
FCC ID: 2BOYF-S6

PRODUCT STRUCTURE DIAGRAM

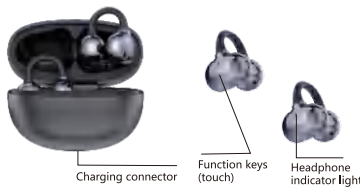

PACKING LIST

Headphones x1 pair
Charging compartment x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

The earphones are centered on the corridor as if you were wearing an ear cap. After wearing it, adjust the position of the headphones until they are adjusted to the clearest sound position.

PRODUCT OPERATION INTRODUCTION

Pairing Name	S6		
Power on	When the headset is in the charging compartment, open the charging compartment cover and the headset will automatically turn on. When the headset is turned off, press and hold the touch button for 3 seconds to turn it on.	Ice blue light flashes 3 times	Prompt sound "power on"
Shutdown	Put the earphones back into the charging case and close the lid, the earphones will automatically shut down	The red light stays on for 1S and then goes off	Prompt sound "power off"
Device pairing	Turn on the headset, and the left and right headsets will automatically connect to each other and enter	The main ear flashes in blue, red and ice alternately, and the secondary ear is off	Prompt sound "pairing"
Device Connection	Open the Bluetooth device, search for "S6" to connect,Connect successfully	Light off	Prompt sound "connected"
Disconnect	When the headset is out of the Bluetooth signal range, the headset and the device are disconnected and enter pairing mode. At this time, the headset pairing name can be retrieved by other devices. The headset will automatically shut down if the left/right headset is not connected for more than 3 minutes.	The main ear flashes in blue, red and ice alternately, and the secondary ear is off	Prompt sound "disconnected"
Play/Pause	After the music player is started, double-click the left/right ear touch button	/	/
Up and down	After the music player is started, triple-click the left ear to play the previous song, and triple-click the right ear to play the next song.	/	/
Answering a call	Incoming call status, double-click the left or right ear touch button	/	/
Reject call	Incoming call state, long press the left or right ear touch key for 2S to reject the call	/	/
Volume+	When connected, click the volume + button on the right earphone to adjust the volume to the maximum	/	Prompt sound "long dong"
volume-	When connected, click the left ear touch button volume - maximum	/	Prompt sound "dong dong"

Call out the mobile phone voice assistant	In connected state, press and hold the left or right ear touch button for 2 seconds to start/stop the voice assistant (except in music state)	/	"dong"
Headphones low battery reminder	The headset battery is low, and a warning tone will be played once every minute. After 5 times, the headset will shut down.	Headphones flash red light quickly	Prompt tone "battery low"
Clear Pairing	When not connected to a device, tap the left or right ear touch button 5 times to turn off the left or right earphone (clear all pairing and connection information) (can be operated on one or both ears)	The red light stays on for 1S and then goes off	Prompt sound "power off"
Headphones charging	Put the earphones into the charging case and close the cover. The earphones start charging and the red light stays on. When the earphones are fully charged, the indicator light goes out.		
The charging case charges the earphones	Put the earphones into the charging case and close the cover. The white indicator of the charging case will be on. When the earphones are fully charged, the indicator of the charging case will go out. When the battery of the charging case is low, the white light will flash.		
Charging in the charging case	When the battery level of the charging case is too low, please connect the charging case to a standard 5V power adapter for charging. The red light flashes when the charging case is charging, and the red light stays on when it is fully charged.		

HEADPHONE PARAMETERS

- | | |
|--------------------------------------|--|
| 1.Product name : S6 | 7.Horn sensitivity125dB ±3dB |
| 2.Bluetooth versionBluetooth 5.4 | 8.Horn impedance16Ω ±15% |
| 3.Support modeAAC/SBC | 9.Horn rated power10mW |
| 4.Bluetooth transfer distance10m | 10.Charging interfaceUSB Type-C |
| 5.Carrier frequency2.402GHz~2.480GHz | 11.Charging time of charging bin: ≈1.5 hours |
| 6.Frequency response range20Hz~20KHz | |

SIMPLE TROUBLESHOOTING

Fault	Reason	Solutions
Not On	The headset is low on power	Charge the headphones
Headphones flash white	The headset is low on power	Charge the headphones
Charging no prompt	The headphones are not in place	Adjust the position of the headphones
Automatic shutdown	The headset battery is low, and a warning tone will be played once every minute. After 5 times, the headset will shut down.	Charge the headphones
The headphones are echoing	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment
There is a noise in the headphones	Too far from the phone	Change location or close to the mobile phone
The other side is quiet	The headphones are improperly worn or the volume is too low	Adjust the wearing or volume of the headphones
The signal is intermittent	Strong external interference or too far from the phone	Choose a low-interference environment or close to the mobile phone

SAFETY GUIDELINES

- Please fully charge before first using this product.
- The product is not a toy, and children under the age of 12 must be used under adult supervision.
- Please use a 5V/1A charger certified by a formal manufacturer to avoid damage to the product caused by fast charging chargers that support high voltage.
- Please charge in a safe environment. When charging the charging compartment, please unplug the charging cable as soon as possible after the charge is full to avoid damage to the battery caused by long-term charging. The charging case is charged by Type-C interface.
- This product has a built-in non-removable rechargeable battery. Repeated charging and discharging headphones will reduce battery performance over time, which is normal for all rechargeable batteries.
- This product comes with a reasonable battery. If it has not been used for a long time, please charge it at least once a month.
- For individual differences, if you feel uncomfortable when wearing it, please stop wearing it and consult your doctor.
- When Bluetooth is connected to this product, please adjust the sound of the headphones to the appropriate volume to avoid damage to hearing in a high volume for a long time.
- If you use this product when engaging in activities that require concentration, you should pay attention to your own safety and that of others, such as driving or cycling, on roads, construction sites, railways, or walking on foot. You should remove the headphones or adjust the volume to ensure that the surrounding sounds, including alarms and warning signals, can be heard.
- Please abide by the relevant regulations of your region or country and use this product as required when diving.
- This product contains magnetic materials. When using or placing the product, please stay away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc.
- It is recommended to use this product in an environment with a temperature of -10°C~45°C. When the ambient temperature is below +5°C, the battery performance will be limited.
- In places where the use of wireless devices is clearly prohibited, please do not use this product, otherwise it will interfere with other electronic devices or cause other dangers.
- Before being close to medical and industrial equipment or boarding the plane, please consult the local staff if it can be used.
- Before cleaning and maintaining this product, please stop using this product, turn off all applications, and disconnect all connections or cables from other devices.
- Please dispose of waste electronic products correctly in accordance with local laws and regulations, and do not dispose of electronic and electrical equipment, components, batteries and other household waste.

WARNING

- Please follow the contents of this manual to avoid damage to the product due to incorrect operation.
- Please keep this product away from children, fire, heat, freezing, water and chemicals.
- Please do not listen at high volume for a long time to avoid adverse effects on hearing.
- Do not immerse the product and accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock.
- Please do not place the product in the sun or high temperature. High temperature will shorten the service life of electronic components, damage the battery, and deform some plastic parts.
- Please do not store this product in a dusty place where the temperature and humidity are too high or too low.
- Please do not touch the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
- Please do not put more pressure on this product, or disassemble, smash or shake the product to prevent damage to the product.
- Please do not use this product near the heat source, such as radiators, hot air regulators, stoves or other instruments that generate heat.
- Please do not block the opening of this product, such as the charging port, indicator light, microphone, etc.
- Please do not use the equipment in heavy rain. Thunderstorms may cause equipment failure and increase the risk of electric shock.
- Please avoid using this product when this product and its accessories are wet in the rain or moisture, and when you exercise strenuously or sweat a lot, so as to prevent liquid from penetrating into the interior of the product and damaging the product.
- The product belongs to the built-in polymer battery and cannot be replaced. Please do not throw it away or put it in the fire to avoid explosion, fire and other dangers.
- If the consumer violates the above warning and does not use it properly, the personal and property damage will be borne by itself. The company will not incur any legal responsibility.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.