



5WMC-12/2083  
715209

5,000mAh PD POWER BANK  
WITH MAGNETIC WIRELESS CHARGER



5.5

#### INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND  
RETAIN FOR FUTURE USE

1

2

3

4

#### Getting Started

- Remove the product from the box
- Remove any packaging from the product
- Please retain all packaging after you have checked and counted all the parts and the contents against the list

#### Package Contents

- 5,000mAh PD Power Bank with Magnetic Wireless Charger
- Type-C to Type-C cable
- Bonus Magnetic Ring included for Android phones (compatible to wireless charging)
- Instruction Manual

#### Key Features

- PD Power Bank with magnetic wireless fast-charger
- Capacity: 5,000mAh
- Type-C Input: 18W, Output: 20W
- Fast charge Type-C to Type-C cable included
- Wireless charging supports 5W/7.5W/10W/15W
- Compatible to Mag-Safe technology and does not block your camera, allowing you to use your phone at the same time while it being charged
- Simply snap your Mag-Safe compatible iPhone in place and it begins charging, no need for additional cables
- Perfect for travel or commuting, slim & portable design


#### Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water or any other form of liquid
- Do not operate the unit if it has been wet or moist to prevent against electric shock, explosion and/or injury to yourself and damage to the unit
- Do not use the unit if it has been dropped or damaged in any way
- Repairs to electrical equipment should only be performed by a qualified electrician
- Improper repairs may place the user at serious risk
- Do not use the unit with wet hands
- Keep the unit free from dust, lint etc
- Do not use this unit for anything other than its intended use
- Keep the unit out of reach of children
- This unit is not a toy

#### IMPORTANT SAFETY INSTRUCTIONS AND WARNINGS

- **Never charge batteries unattended.** When charging batteries you should always remain in constant observation to monitor the charging process and react to potential problems that may occur.
- **If at any time you witness a battery starting to swell up, smoke or hot, discontinue charging process immediately, disconnect the battery and observe it in a safe place for approximately 15 minutes.** This may cause the battery to leak, and the reaction with air may cause the chemicals to ignite, resulting in fire.
- Do not let the device fall down the floor. The internal circuit might get damaged.
- We suggest you put the battery in an enclosure to protect it from damages by liquid or dropping from height accidentally.
- Never store or charge battery pack in extreme temperatures, since extreme temperature could ignite fire.
- Store battery at room temperature between 40° F and 80° F for best results
- Do not expose battery pack to direct sunlight (heat) for extended periods
- **Storing battery at temperatures greater than 170 degrees F for extended periods of time (more than 2 hours) may cause damage to battery and possible fire.**
- Must keep battery pack away from children
- Do not attempt to disassemble the device as it may cause damage.

#### Description of Parts

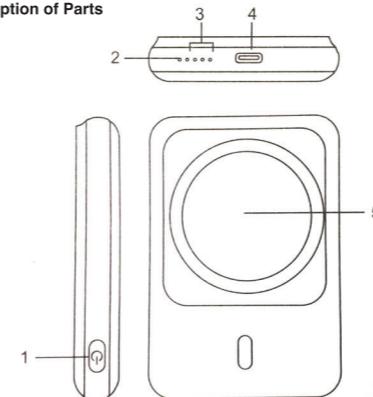

No	Function	Operation
1	ON/OFF Button (Multifunctional)	<ul style="list-style-type: none"> <li>• Short press once to see the remaining capacity</li> <li>• Short press once to start Wireless Charging</li> <li>• Short press twice to turn off the Power Bank.</li> </ul>
2	Fast Charging/Discharging/Wireless Charging Indicator	<ul style="list-style-type: none"> <li>• LED Light flashes blue &amp; green when you turn ON the power bank</li> <li>• Green LED Light stays on while charging your device through Type-C port.</li> <li>• Blue LED Light stays on while charging your device through wireless charger.</li> </ul>
3	Charging Indicator Lights	Shows Power Bank charge level: 25%, 50%, 75% and 100%.
4	Type C Input/Output Port	
5	Wireless Charger	

#### INSTRUCTIONS FOR USE

##### Charging your portable Power Bank

- Please use the Type-C to Type-C Cable that is included in your pack. Connect one end of the cable to the Type-C Input as shown in the figure. The other end should be connected to USB-C adapter source with 20W output or more.
- While charging the Power Bank, the battery capacity value will flash and increase accordingly. Once it is fully charged, all 4 LED Lights would stay on.
- Note: Before using the product for the first time, please charge the Power Bank for at least 4 hours or until all 4 LED Lights stay on.

##### Charging your iPhone, Smart Phones or any other USB Rechargeable Devices- Type-C Output Charging

- Please ensure that the Portable Power Bank is fully charged.
- Please use the applicable USB charging cable to charge your device (not included). Connect one end to Type-C output of the power bank and the other end to your device.
- It would start charging your device.

##### Wireless Charging

- Please ensure that the Power Bank is fully charged.
- Short press the ON/OFF button to start Wireless Charging function of the Power Bank.
- Place your Mag-Safe compatible iPhone onto the Wireless Charging Pad, it would start charging your phone.
- If you are using Android phone which has wireless charging function, you can affix the bonus magnetic ring on your phone and use Magnetic wireless charging.

**REMARK:**

- a. If your iPhone model is compatible with wireless charging and you are unable to charge it wirelessly, please remove your phone case and retry.
- b. Placement of some smart phones on the magnetic surface for wireless charging might need to be adjusted, in order for their internal components to make contact appropriately and begin wireless charging.

**Care and maintenance**

Read the following recommendations before using the Power Bank.

- Do not expose the battery to liquid, moisture or humidity. This may affect product's internal circuit.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as it may cause to destroy the battery or distort certain plastic parts.
- Do not dispose of the device to fire as it may result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fell down the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may cause damage.

**Product Specifications:**

PD Power Bank With Magnetic Wireless Charger  
Battery Capacity: 5,000mAh  
Type-C Input: DC 5V/3A, 9V/2A  
Type-C Output: DC 5V/3A, 9V/2.22A, 12V/1.67A  
Wireless Output: 5W, 7.5W, 10W, 15W  
Dimensions: L3.68" x W2.51" x H0.58"

Weight: 4.3 Oz  
Built-In Over-charge protection  
Max. ambient temperature: 25°C

**TROUBLESHOOTING**

Problem	Solution
Charging indicator does not light up when charging the Portable Power Bank	Please ensure that USB Charging Cable and Power Source is connected properly. Please ensure that your Computer is Turned On.
Portable Power Bank does not charge device once connected	Please ensure that USB Charging Cable is well connected.

**FCC Instructions**

**FCC Warning Statement:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Radiation Exposure Statement**  
The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's/Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**Limited Warranty**

This manufacturers product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible..