

# Operating instructions—SNV4

## Single Button Control

### Button Operation

#### Standby mode

Switch pixel number	Tap the button 3 times when power off .
Enter standby mode	Hold the button until the button light is on.
Enter boot status	Tap the button after enter standby mode.
Volume adjust	Hold the button until the breath light flashes <b>once</b> then release.
Switch boot effect	Hold the button until the breath light flashes <b>twice</b> then release.
Switch blade effect	Hold the button until the breath light flashes <b>Three times</b> then release.
Switch sound fonts	Hold the button until the breath light flashes <b>Four times</b> then release.
Power off	Hold the button until the breathing light is off.
Power saving mode	No operation for 10 minutes

#### Boot Status

Blaster	Tap the button.
Lock-up	Hold the button until the breath light flashes <b>once</b> then release.
Switch blade color	Hold the button until the breath light flashes <b>twice</b> then release
FOC on/off:	Hold the button until the breath light flashes <b>Three times</b> then release.
Enter standby mode	Hold the button until the breath light flashes <b>Four times</b> then release.

### Gesture Operation

#### Standby Mode

Enter boot status	Twist the saber.
Switch Sound fonts	Point blade upward, hold button and twist the hilt.
Switch BGM	Point blade downward, hold button and twist the hilt.

#### Boot Status

Switch blade color	Point blade downward, hold button and twist the hilt.
Force	Point blade upward, hold button and twist the hilt.
FOC	Hit the saber.
Drag	Hold the button and hilt the blade.
Melt	Hold the button and thrust the blade forward.
Enter standby mode	Twist the saber.

## PWR/AUX Control

When buttons are distributed up and down: Upper button is PWR button-lower button is AUX button.

When the buttons are distributed left and right: left button is PWR button-right button is AUX button.

### Button Operation

#### Standby mode

Switch pixel number	Tap the PWR button 3 times when power off
Enter standby mode	Hold the PWR until hearing the prompt sound "power on"
Enter boot status	Tap the PWR after enter standby mode.
Switch soundfonts	Tap the AUX.
Enter/Exit Volume adjust	Hold the PWR and AUX at the same time until hear the beep then release it.
After Enter volume adjust	Tap the PWR button to increase the volume;
Mode	Tap the AUX button to decrease the volume.
Switching boot effect	Hold the PWR button until hear the beep then release it.
Switch blade effect	Hold the AUX button until hear the beep then release it.
Power off	Tap the AUX button 3 times.

Power saving mode	No operation for 10 minutes.
<b>Boot Status</b>	
Blaster	Tap the AUX
Lock-up	Hold the AUX then release.
FOC off/on	Hold the PWR and AUX buttons at the same time until hear the beep then release it.
Enter standby mode	Tap the PWR
<b>Gesture Operation</b>	
<b>Standby mode</b>	
Enter boot status	Twist the saber.
Switch Sound fonts	Point blade upward, hold AUX button and twist the hilt
Switch BGM	Point blade downward, hold AUX button and twist the hilt
<b>Boot Status</b>	
Force	Point blade upward, hold AUX button and twist the hilt
Switch blade color	Point blade downward, hold AUX button and twist the hilt
FOC	Hit the saber.
Drag	Hold the PWR button and hilt the blade
Melt	Hold the AUX button and thrust the blade horizontally forward
Enter standby mode	Twist the saber.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction