

**RAGINARD™**

# **Sit and Ride Vibrator**


## **User Manual**



Please fully charge Sit and Ride Vibrator and read this manual carefully before using for the first time and keep it for future use.



# Product View

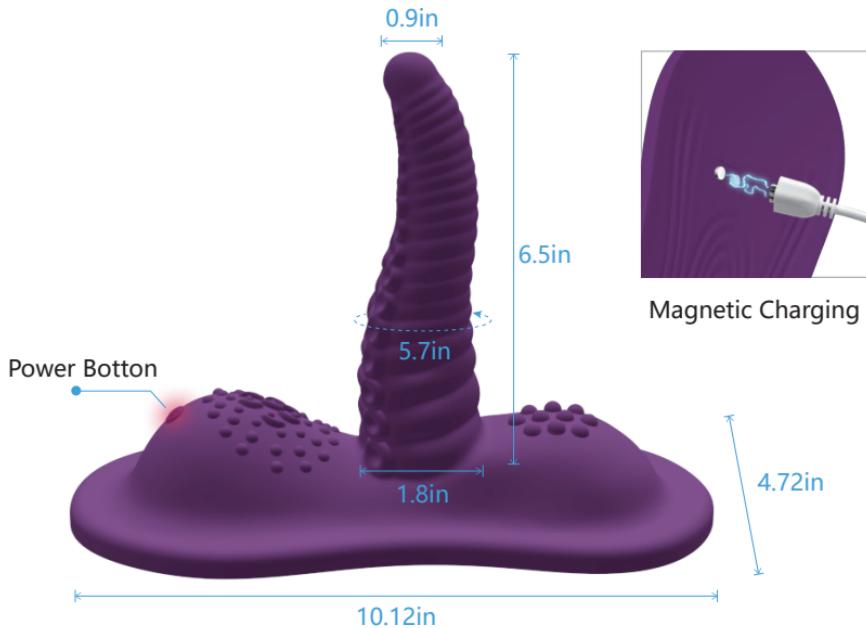

Tip: The size is measured manually, there may be some deviations



- Ring pattern buttons control the vibration and rocking of the dildo. This button remotely controls the shutdown of the product.
- Wave pattern buttons control front and rear vibration.

# Product Parameters

---

Name:	Sit and Ride Vibrator
Function :	Multifunctional Vibrator Monster Dildo
Model Name:	YM-008
Material:	Soft Liquid Silicone
Product Size:	10.12*4.72*7.36in
Net Weight :	1.71lb/775g
Waterproof Grade:	IPX7 Waterproof
Charging Method :	USB Magnetic Charging
Operation Method:	Button Control or Remote Control
Functional Modes:	10 Swing & 10 Vibration Modes
Remote Control Distance:	8 Meters
Time to Fully Charge:	90 mins
Usage Time:	45-60 mins
Noise:	≤ 50 db

# Operation Method Instructions

	<b>Product Separately Operation</b>
	<ol style="list-style-type: none"><li>1.Press and hold the power button  for 3 seconds on the vibrator to turn on the vibrator or turn off it, lights up/off.</li><li>2.After turning on,quickly press the power button  to cycle through speeds/functions.</li><li>3.Speed control (1st-3rd presses): Low → Medium → High.</li><li>4.Vibration patterns (4th-10th presses): 7 unique rhythms frequencies.</li></ol>

**1: The remote controller can only turn the product off.** To turn it on, you must press and hold the power button for 3 seconds.

**2:** If you only need the swing and vibration function of the dildo part, just click Button  when the product is turned on; If you only need the front and rear vibration function, just click Button  when the product is turned on.

**3:** Only use button  on the remote controller to switch off the product,  Button can't switch off the product.

**4:** The two buttons can also be used simultaneously.

	<b>Button Description</b>	<b>Remote Control Operation</b>
	Control the swing and vibration of the dildo.	<ol style="list-style-type: none"> <li>1. First Press &amp; hold the power button  for 3 seconds on the vibrator to turn on the device.</li> <li>2. After turning on, quickly press  Button to cycle through Dildo part speeds/functions.</li> <li>3. Speed control (1st-3rd presses): Low → Medium → High.</li> <li>4. Vibration patterns (4th-10th presses): 7 unique rhythms frequencies.</li> </ol>
	Control the vibration of the Granular Massage area.	<ol style="list-style-type: none"> <li>1. First Press &amp; hold the power button  for 3 seconds on the vibrator to turn on the device.</li> <li>2. After turning on, quickly press  Button to cycle through Granular Massage area speeds/functions.</li> <li>3. Speed control (1st-3rd presses): Low → Medium → High.</li> <li>4. Vibration patterns (4th-10th presses): 7 unique rhythms frequencies.</li> </ol>

## Recharge/Refill

---

When the vibrator is charging, the indicator light **at the bottom of the product** flashes. and when it is fully charged, the indicator light **at the bottom of the product** will keep on. Each full charge lasts 45-60 minutes, depending on the mode you use the vibrator.

Note: Before the first use, the product needs to be charged for 2 hours, and the subsequent charging time is about 90 minutes.

## Attentions

---

1. Please fully charge before first use.
2. Avoid using it while charging.
3. Keep it clean and wash it in time.
4. Water-based lubricants are recommended.
5. After washing and drying, store the product in a cool, well-ventilated area, away from direct sunlight, high temperatures, pressure, humidity, and pollution.

6. Patients with heart disease or high blood pressure are prohibited from using.
7. This product has a built-in polymer lithium battery. The battery cannot be removed by yourself.
8. This product is intended for adults only. It is prohibited for use by individuals under the age of 18. Keep away from children.

## **1. Cleaning:**

After use, clean the product with antibacterial soap and hot water, rinse thoroughly, and allow it to dry. It is advisable to use a special disinfectant detergent for the vibrator.

## **2. Wipe:**

Rinse and wipe with a dry cotton cloth or high-quality paper towel. Air-dry the product after wiping, avoid direct sunlight and high temperatures.

## **3. Maintenance:**

Remember to turn off the power after use it, otherwise, product or power issues may occur! Store the product in the bag and keep it in a cool, dry place.

## **4. Prohibited:**

Avoid disinfecting the product with boiling water, alcohol, or other appliance-specific disinfectants, as this may damage the product and render it unusable.

## **E-waste Recycling Instruction**

All e-waste contains hazardous chemicals such as mercury, lead, cadmium, and brominated flame retardants. Improper disposal of electronic devices can harm the earth's air, soil, water, and ultimately human health. If the product is completely unusable or damaged, disposal should be done through a certified e-waste hauler or recycler.

## **Package Listing**

1*Sit and Ride Vibrator	1*Soft Storage Bag
1*Remote Controller	1*Beautiful Box
1*Instruction Manual	1*USB Magnetic Charging Line

## **Service and Promise:**

If you have any problems, questions or concerns about our products, please feel free to contact us by email. We will try our best to give you the best solution within 24 hours.

 **After Sales Email:** [raginard@163.com](mailto:raginard@163.com)

# **⚠ WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



## **Button Battery Information & Warinings In The Remote Controller (CR2032, 3.0V)**

### **1. General Instructions**

- (a) Dispose of used CR2032 batteries according to local regulations. Keep away from children. Do not dispose in household trash or incinerate.
- (b) Even a used CR2032 batteries may cause serious injury or death if mishandled.
- (c) Call your local poison control center (or equivalent) if ingested.
- (d) Compatible Battery Type: CR2032 (3V Lithium Metal Cell).

(e) Nominal Voltage: 3.0V.

(f) Non-rechargeable batteries must not be recharged.

(g) Do not forcibly discharge, recharge, disassemble, heat or incinerate. These actions may cause venting, leakage, or explosion leading to chemical burns.

## **2. Replace CR2032 Button Battery**

(a) Ensure correct battery orientation aligns with polarity markings (+/-).

(b) Do not mix new and old CR2032 batteries, different brands, or battery types (e.g., alkaline, carbon-zinc, or rechargeable cells).

(c) Remove and recycle/dispose of batteries immediately from unused devices per local regulations.

(d) Always secure the battery compartment fully. Discontinue use if the compartment cannot be closed properly, remove batteries, and keep away from children.

## **Vibrating Stimulation that Will Have You Bucking Like A Wild Horse**



If you have any questions about the product, Please feel free to contact us.

 After Sales Email: [raginard@163.com](mailto:raginard@163.com)

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**RAGINARD™**

Today, pamper yourself in a different way.

MADE IN CHINA