

105mm

键盘说明书

140mm



包装包含:说明书×1 蓝牙键盘×1 USB充电线×1

产品型号规格

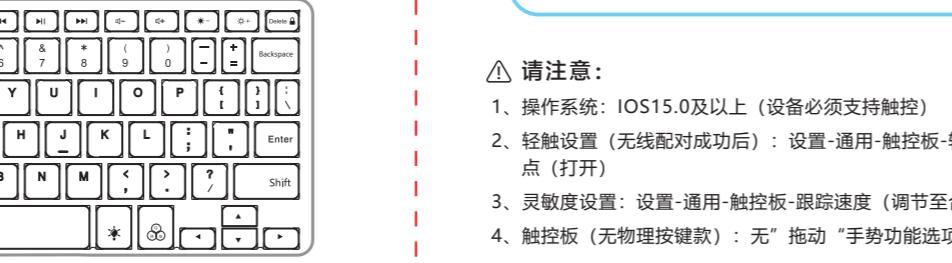
- 1. 蓝牙标准接口5.2
- 2. 有效操作距离: 10米内
- 3. 调制方式: GFSK
- 4. 工作电流: < 10mA(触摸板工作时)
- 5. 待机电流: < 2mA
- 6. 睡眠电流: < 40uA
- 7. 充电电流: 100mA/200mA(背光款)
- 8. 待机时间: > 100天
- 9. 充电时长: 2-3小时
- 10. 工作时长: ≥ 30/100小时(关闭背光)
- 11. 锂电池寿命: 3年
- 12. 按键力度: 80±10g
- 13. 按键寿命: 500万次点击
- 14. 工作温度: -10°C - +55°C

操作说明

第一次使用时, 请充电3~4小时, 以确保有足够的电量。

1. IPAD 键盘操作:
拨动电源开关至ON-开机; 拨动电源开关至OFF-关机。
2. 开启键盘蓝牙功能按组合键“Fn+C”配对, 蓝牙灯显示蓝色, 并持续闪烁, 配对成功后蓝牙灯长亮。
3. 打开设置-蓝牙-我的设备, 找到“Bluetooth Keyboard”点击进行连接。
4. 设备连接成功后, 蓝牙灯熄灭, 如果15钟不使用键盘, 键盘将自动进入休眠状态。按任意键, 等待2~3秒, 设备自动重新连接。

键盘布局



注:以上为功能参照表, 具体以实际为准

功能组合键

<input type="checkbox"/> 主屏幕/退出	<input type="checkbox"/> 切换输入法	音量调低
<input type="checkbox"/> 搜索	<input type="checkbox"/> 上一曲	音量调高
<input type="checkbox"/> 全选	<input type="checkbox"/> 播放/暂停	亮度调低
<input type="checkbox"/> 复制	<input type="checkbox"/> 下一曲	亮度调高
<input type="checkbox"/> 粘贴	<input type="checkbox"/> Fn+关闭屏幕	Fn 功能组合键
Fn+开启/关闭实体键盘(仅IOS系统)		
Fn+开启/关闭触控板		
背光款才有以下按键		
<input type="checkbox"/> 调节三种模式:按一下打开灯光, 按两下灯光变亮, 按三下灯光关闭		
<input type="checkbox"/> 调节七彩灯光颜色		
<input type="checkbox"/> Fn+Q 开启/关闭七彩背光呼吸灯		
<input type="checkbox"/> Fn+W 调节七彩背光呼吸灯速度		

请注意:

1. 操作系统: IOS15.0及以上 (设备必须支持触控)
2. 轻触设置 (无线配对成功后): 设置-通用-触控板-轻点以点按/双指辅助点 (打开)
3. 敏感度设置: 设置-通用-触控板-跟踪速度 (调节至合适的速度)
4. 触控板 (无物理按键款): 无 拖动“手势功能选项”

1

指示灯说明

① A 大小写指示灯	按下键盘上的“Caps Lock”, 指示灯变为白色。
② WiFi 蓝牙配对灯	按Fn+C进入蓝牙配对, 灯光闪烁蓝色, 配对完成蓝牙灯熄灭。
③ ⚡ 充电指示灯	充电状态长亮, 充电完成后变绿灯或者灭灯
④ 🔋 电源指示灯	蓝色慢闪表示电量偏低。

充电注意事项

1. 首次使用时, 请使用附带的充电线为键盘充满电 (⚡灯变绿灯或者灭灯)。
2. 充电时请检查充电口是否正常供电。

⚠ 注意: 请勿长时间给键盘充电, 长时间插电会耗尽键盘的电池寿命。

2

触摸板手势

① 点按	用单指按下直至有点按感
② 点按住	单指按住
③ 拖移	点按住项目, 然后用手指在触控板上滑动以移动它
④ 唤醒 iD	点按触控板; 或者如果您正在使用外接键盘, 请按一下外接键
⑤ 前往主屏幕	用单指将指针扫过屏幕底部, 屏幕出现后, 再次将指针轻扫过屏幕底部
⑥ 缩放	用单指将指针扫过屏幕右侧边缘, 若要隐藏侧拉, 请再次向右轻扫
⑦ 打开“控制中心”	用单指移动指针以选择右上方的状态图标, 然后点按, 或者选择右上方的状态图标, 然后单指向上轻扫
⑧ 向左或向右滚动	双指向左或向右轻扫
⑨ 向上或向下滚动	双指向左或向右向上轻扫
⑩ 前往App	三指向轻扫
⑪ 在打开的App之间切换	三指向左或向右轻扫
⑫ 从主屏幕打开搜索	双指向左轻扫

3

键盘的清洁与保养

为了您的键盘美观, 请保持良好的使用习惯, 并注意保护键盘。

键盘和外盖护理: 键盘相对轻薄, 请注意不要在凸凹不平的表面上使用, 以免使键盘弯曲, 不要将液体直接涂在键盘上, 不要将毛笔蘸上酒精或温和的肥皂水擦拭键盘和外盖。经常用这种方式清洁, 让你的键盘看起来很棒。

电池保养

工作温度: 键盘工作温度为 0°C ~ 35°C。锂电池对高温很敏感, 所以让你的表面远离太阳, 不要把它放在热的汽车里。随时充电: 充电后不需要电量为零。你可以随时给电池充电。但是, 不要长时间充电, 会降低电池寿命。

故障排除

关于连接

键盘支持蓝牙连接, 使用前请确认键盘和平板电脑已配对连接, 如果键盘连接延迟或输入延迟:

1. 将键盘充满电~4小时。
2. 断开平板电脑上的蓝牙连接, 重新启动, 关闭蓝牙功能, 重启平板电脑。
3. 关闭并打开键盘, 按Fn+C重新打开键盘蓝牙。
4. 打开设置-设备-我的设备, 找到“Bluetooth Keyboard”点击进行连接。

触控板使用

使用时请确保触控板功能处于开启状态, 如图标随机跳动, 请不起作用, 酒精或温水的泡沫水擦拭触控板。在使用过程中保持双手干燥, 以免触控板识别错误的手势。

因系统版本升级, 或APP程序特别定制功能, 别的功能可能无法使用, 请正常情况, 请以产品详细功能介绍为准, 或咨询客服。

4

5

105mm

105mm

Keyboard Instructions



140mm

Package contains:
Instructions * 1
Bluetooth keyboard * 1
USB charging cable * 1

Specifications

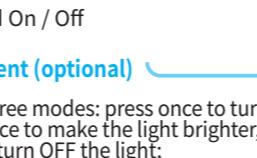
- 1. Bluetooth standard port 5.2
- 2. Operation Range: within 10 meters
- 3. Modulation Mode: GFSK
- 4. Work Current: <10mA (During Touch board is working)
- 5. Standby Current: <2mA
- 6. Sleep Current: <40uA
- 7. Charge Current: 100mA/200mA (with Backlight)
- 8. Standby Time: >100 days
- 9. Charge Time: 2~3 hours
- 10. Work time: ≥ 30/100hours (Shut down backlight)
- 11. Lithium battery life: 3 years
- 12. Key strength: 80+10g
- 13. Key life: 500 million clicks
- 14. Working Temperature: -10°C+55°C

Operations

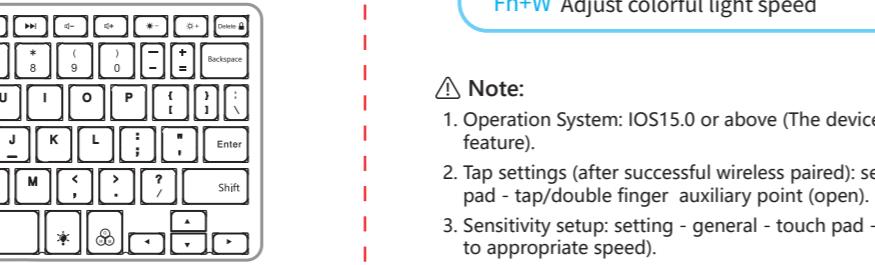
For the first time use, charge it for 3~4 hours to make sure sufficient power.

Keyboard use:

1. Press the switch to power on/off the keyboard.
2. Press the buttons "Fn+C" to enter bluetooth pairing mode, the indicator  will start to flash blue color.
3. Open Settings---Bluetooth---My devices. Tap "Bluetooth Keyboard" to connect.
4. After paired successfully, the indicator  will be turn Off.

 
 
 
 
 
 


Keyboard Layout



⚠ Note: The above is the function reference table, which shall be subject to the actual situation

Features

 Home/Esc	 Change Language	 Volume -
 Search	 Previous Track	 Volume +
 Select All	 Play/Pause	 Brightness -
 Copy	 Next Track	 Brightness +
 Paste	 Fn+Lock Screen	 Function key
 Fn+Virtual Keyboard On / Off		
 Fn+Touchpad On / Off		
Backlight adjustment (optional)		
Adjust three modes: press once to turn ON the light, press twice to make the light brighter, press three times to turn OFF the light;		
 Adjusting colorful light colors		
 Fn+Turn ON/OFF colorful breathing backlight		
 Fn+Adjust colorful light speed		

Note:

1. Operation System: IOS15.0 or above (The device must support Touch feature).
2. Tap settings (after successful wireless paired): settings - general - touch pad - tap/double finger auxiliary point (open).
3. Sensitivity setup: setting - general - touch pad - tracking speed (adjust to appropriate speed).
4. Touch pad (no physical buttons): no "drag" gesture function option.

1

2

3

4

Indicators Descriptions



 ① A Case indicator	Press "Caps Lock" on the keyboard, and the indicator turns white.
 ②  Bluetooth Indicator	Press Fn+C to enter Bluetooth pairing mode, the indicator starts to flash blue, after successfully paired, the indicator will be turn OFF.
 ③  Charging Indicator	The indicator is always on during charging, it will turn green or turn off after charging finished.
 ④  Power Indicator	Flashing blue means "Low Power".

 ① Tap	Press with a single finger until you feel a touch.
 ② Press	Press and hold with a single finger.
 ③ Drag	Drag and hold the item, then slide on the touch pad to move it.
 ④ Wake up the pad	Click the touch pad or any key if you are using an external keyboard.
 ⑤ Go to the home screen	Swipe the pointer with a single finger across the bottom of screen.
 ⑥ Open the dock	After the dock appears, swipe the pointer across the bottom of screen again.
 ⑦ Display side pull	Use a single finger to swipe the pointer over the right edge of the screen. To hide the side pull, swipe right again.
 ⑧ Zoom	Two fingers are placed close, spread out to pull large, pinch to shrink.
 ⑨ Open Control Center	Move the pointer with a single finger to the status icon at the top right, then click, or select the status icon at the top right, and then swipe up.
 ⑩ Open the Notification Center	Move the pointer near the top center of the screen with a single finger, or select the status icon at the top left, and then click.
 ⑪ Scroll left or right	Swipe left or right with two fingers.
 ⑫ Scroll up or down	Swipe up or down with two fingers.
 ⑬ Go to the app switcher	Swipe up with three fingers.
 ⑭ Open "Today" view	Swipe right with two fingers on the home screen or the visible lock screen.
 ⑮ Switch APPS	Swipe left or right with three fingers.
 ⑯ Auxiliary tap	On the home screen, tap the main mailbox or the "Camera" in the "Control Center" and other ten to display quick operation menu. Then press and hold the Control key and click the touch pad.
 ⑰ Turn on search from the home screen	Swipe down with two fingers.

2

 
 
 
3

 
 
 
 
 
 
 
4

105mm

Touch pad gestures



 ① Tap	Press with a single finger until you feel a touch.
 ② Press	Press and hold with a single finger.
 ③ Drag	Drag and hold the item, then slide on the touch pad to move it.
 ④ Wake up the pad	Click the touch pad or any key if you are using an external keyboard.

 ⑤ Go to the home screen	Swipe the pointer with a single finger across the bottom of screen.
 ⑥ Open the dock	After the dock appears, swipe the pointer across the bottom of screen again.
 ⑦ Display side pull	Use a single finger to swipe the pointer over the right edge of the screen. To hide the side pull, swipe right again.
 ⑧ Zoom	Two fingers are placed close, spread out to pull large, pinch to shrink.
 ⑨ Open Control Center	Move the pointer with a single finger to the status icon at the top right, then click, or select the status icon at the top right, and then swipe up.
 ⑩ Open the Notification Center	Move the pointer near the top center of the screen with a single finger, or select the status icon at the top left, and then click.
 ⑪ Scroll left or right	Swipe left or right with two fingers.
 ⑫ Scroll up or down	Swipe up or down with two fingers.
 ⑬ Go to the app switcher	Swipe up with three fingers.
 ⑭ Open "Today" view	Swipe right with two fingers on the home screen or the visible lock screen.
 ⑮ Switch APPS	Swipe left or right with three fingers.
 ⑯ Auxiliary tap	On the home screen, tap the main mailbox or the "Camera" in the "Control Center" and other ten to display quick operation menu. Then press and hold the Control key and click the touch pad.
 ⑰ Turn on search from the home screen	Swipe down with two fingers.

2

3

4

Cleaning and maintenance

In order to make your keyboard easier to use, please keep good usage habit and pay attention to protecting the keyboard.

Keyboard and cover care

The keyboard is relatively light and thin. Please be careful not to use it on uneven surfaces, avoid bending the keyboard. Do not apply liquid directly on the keyboard. Use a lint-free cloth dipped in alcohol or isopropyl alcohol to wipe the keyboard shell or maintenance. Clean your keyboard cover in this way often to make it look great.

Battery maintenance

Operating temperature: the operating temperature of the keyboard is 0°C~35°C. Lithium battery is very sensitive to high temperature, so keep it away from the sun and do not put it in a car.

Charging time: You can charge the battery any time even its power is zero. However, do not charge for a long time, which will reduce the battery life.

Troubleshooting

About connections

The keyboard only supports Bluetooth connection. If the keyboard and tablet are paired and connected to use, if the keyboard has the connection delay or drop delay.

1. Fully charge the keyboard for 3~4 hours.
2. Delete all Bluetooth connections on the tablet, eliminate signal interference, turn off the Bluetooth function, and restart the tablet.
3. Close and open the keyboard and press "Fn+C" to open the keyboard Bluetooth.
4. Open Settings---Devices---My Device, find the "Bluetooth Keyboard" and click to connect.

Use of touchpad

Before using, make sure the touch function is turned on. If the cursor moves randomly, use a lint-free cloth dipped in alcohol or isopropyl alcohol to wipe the touch pad. Keep your hands dry during use to avoid incorrect gestures recognized by the touchpad.

Due to the upgrade of the system version or special customization of the APP program, it is normal that some short keys cannot be used in different functions. Please refer to the product details introduction or the merchant customer service.

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.