

Bicycle Electric Horn

User Manual



Features:

1. Aluminum alloy, beautiful and exquisite
2. Can be easily installed on the bicycle
3. Super loud vibration anti-theft alarm
4. One-click bike search
5. 1600mAH large-capacity lithium battery, long standby time
6. Low battery reminder
7. Adjustable sensitivity

Package Including:

- Electric Horn --- 1
- USB Charging Cable --- 1
- Gasket --- 4
- Fixing Screws --- 4
- Remote Control --- 2
- Remote Control Hook --- 2
- Fixed Bracket --- 1
- Cable Tie --- 1
- Wrench --- 1
- User Manual --- 1

Function instructio



Electric Horn Charging Port

- 1: TYPE-C charging port
- 2: Charging indicator



Remote Control

- 3: Remote control indicator
- 4: Lock button, turn on the anti-theft alarm
- 5: Unlock button, turn off the anti-theft alarm
- 6: Sensitivity setting key
- 7: One key to find bicycle button

Installation Steps



Wire Control Button:

It can be installed and fixed on most bicycle handlebars of different thicknesses; Waterproof design, durable.



Instructions:

1. How to use the alarm horn?
The alarm horn needs to be controlled by a remote control, which can be locked and unlocked;
Long press the lock button to lock, the alarm will sound when the bicycle is touched;
Long press the unlock button to cancel the alarm mode.
2. One-click bicycle search
In the parking lot, if you need to quickly find the location of the bicycle parking, you can press the bell icon button on the remote control, and the alarm will sound.
3. Low battery prompt
When the battery is low, press any button on the remote control, the red indicator on the horn button will flash three times, please charge the product when this happens.
4. Sensitivity adjustment
The product sensitivity is set to high sensitivity by default. You can adjust the sensitivity by pressing the $\swarrow$ button. The light on the button flashes once, indicating that it is low sensitivity; flashing twice, indicating that it is medium sensitivity; flashing three times, indicating that it is high sensitivity.

5. How to charge?

Standard 5V charging, unlimited current, you can use the Android phone charging head to charge; the indicator light is red when charging, and the light is blue when fully charged.

6. How long can I use a full charge?

Long battery life, it can work continuously for about 3 months after being full.

7. About the remote control

The remote control battery is a dry battery, which can be replaced by yourself; The remote control distance: about 30m in an open environment.

8. Prevent accidental touch

When the alarm sensitivity is set to low sensitivity, after the bicycle is touched, the alarm will first sound an alarm bell, then touch it again, and continue to sound for 8 seconds when it is touched for the third time;
When the sensitivity is set to medium, after the bicycle is touched, the alarm will first sound an alarm bell, and then continue to ring for 8 seconds;
When set to high sensitivity, after the bicycle is touched, it will continue to ring for 8 seconds.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.