

Noise reduction level	Default noise reduction at power on	Built-in AI noise reduction
Leaking	Triple-click the button to switch between leakage and default noise reduction	Ice blue light flashes once
	Need to open manually, click three times again to exit the leak	Then the ice blue light is on
Mute	Double-click to mute, double-click again to restore	
Charge		Digital display charging

Receiver

Function/Status	Button	Lighting
Power on	Plug in the device and power it on	Ice blue light flashing
Power off	Unplug the device to cut off power	Lights out
Search for matches		Ice blue light flashing
Pairing successful		Ice blue light is always on

Step 1: Take out the transmitter charging case

and turn it on;

Step 2: Insert the receiver into the phone to

complete the connection;

Step 3: Switch the transmitter to the desired

effect, open the live broadcast APP on the phone to

carry out live broadcast and sales, etc.

Dimensions (transmitter) 41×25×19 (mm)

Rated power consumption 0.5W (DC5V/0.1A)

Charging port: Type-c charging port Standard

charging time: about 2 hours

Battery capacity: 600mAh/3.7v Working time: about

6 hours

Rated input: DC5V1A Dimensions: 69X57X34(mm)

Rated power consumption: 2.5W(DC5V/0.5A)

Default Recording Device> External Device.

2. The microphone cannot record for the camera APP that comes with the device?

. Some Android phones, generally 2% of the models have incompatible built-in cameras, and need to download Douyin Beauty Camera, etc.

Step 3: The video shooting APP can be used, but the microphone is blocked from obtaining audio permissions. This is not due to the quality of the microphone. Please contact the brand mobile phone. This product is compatible with most brands and models of mobile phones on the market

Note: Our company's products are constantly innovating, and any changes will not be notified separately

this product.

8. Avoid friction and collision between the machine and hard objects to avoid surface scratches, shedding or other hardware damage.

9. The product must not be exposed to sunlight, fire or similar overheating environments.

10. This manual contains important information, please keep it.

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
3. This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.