

Walkie Talkies



Model: DE-WK01

User Manual

Precautions

Thank you for purchasing our walkie talkies.

The following precautions should be taken when using product:

- ◆ Make sure the channel is correct every time you turn on the walkie talkie. To avoid unnecessary errors, please make sure all the walkie talkie remain on the same channel.
- ◆ Keep the walkie talkie upright and ensure its microphone is 2-3 inches away from your mouth when you're talking.
- ◆ Keep the device away from high temperature, dampness, flammable gas or gas station during use.
- ◆ Do not charge the battery in a flammable or explosive environment.
- ◆ Do not use the device near the radio to avoid interference.
- ◆ Please hold the device by the main body instead of antenna to avoid possible damages and impact on conversation.
- ◆ Don't frequently turn on and off the device during use. Adjust the volume to a proper level.
- ◆ To prevent any problem caused by electromagnetic interference or electromagnetic compatibility, please turn off the device on the areas that are marked with off the walkie talkie, e.g. airport, gas station or other occasion.
- ◆ To avoid the risk of burns, do not use the device if the antenna is damaged in any way.
- ◆ If the device didn't give you response after pressing a specific button, its keypad maybe locked, to unlock the keypad, just press and hold the Menu/Lock button for 3 seconds until the symbol disappears.
- ◆ This product contains small parts(such as belt clips) that may cause suffocation if swallowed by children.
- ◆ Consult your doctor before use if you are carrying any kind of personal medical device.
- ◆ Please do not disassemble or assemble it by yourself.

Product Description



Power/Volume button

Turn on/off the device
Adjust volume levels

Menu/Lock button

Select menu settings
Lock/unlock the keypad

PTT button

Make a conversation
Confirm menu settings

Call/NOAA button

Send a ringtone
NOAA Weather scan and alert


Up button and Down button

Alter setting

Flashlight/Alert button

Turn on/off the flashlight
Start-up alert

Scan button: Scan channels

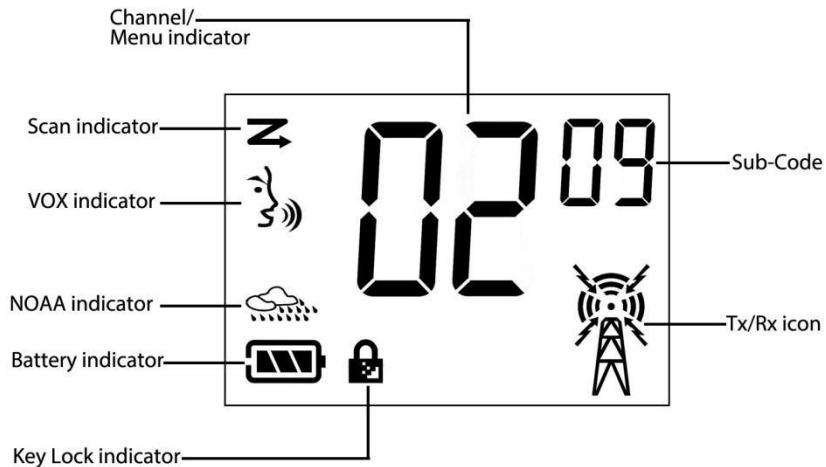

Belt Clip



1. Pry the elastic buckle



2. Push the belt clip upward

How to Charger

1. Please charge it before using it for the first time, please use a 5V 1A/2A charger.
2. There is a battery indication on the LCD screen. When the full capacity symbol turns into empty capacity , indicating that it needs to be charged.
3. Please charge in time. When the battery icon flashes, it means that the battery is low. When full charged, the battery icon will stop.
4. To make the battery last longer, when walkie talkies is not in use, please turn off the device.

How to Use

1. Power On / Off


Power On: Rotate left the power/volume button until hear a “click” sound

Power Off: Rotate right the power/volume button until hear a “click” sound

2. Channel Settings:

Channel: Short press  one time, the channel starts to flash, press  to set the channel, there are 22 channels for you to set, after selected, press PTT to confirm.

Sub-Code: Short press  2 times, the sub-code start to flash, press  to set the sub-code, you can set 01-99, OF means no code, press PTT to confirm.

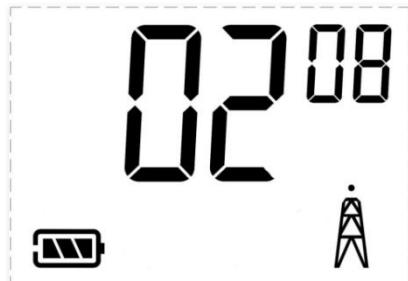

NOTE:

- To guarantee normal performance, make sure both the main channels and sub-codes of all walkie talkies are the same.
- You must set the sub-code to OF in order to communicate with other FRS radio stations that DO NOT have the sub-code.

3. How to Talk?

Pressing the PTT button, hold the walkie talkies 2-3 inches away from your mouth and speak directly into microphone. Don't cover the micro-phone when you're talking, and when you're finished, release the PTT.

4. Adjust the Volume (Please set a more reasonable volume level based on your current surroundings.)

Volume up: Rotate left the power/volume button after power on.

Volume down: Rotate right the power/volume button after power on.


5. VOX (voice-operated exchange), you can talk into a walkie talkie microphone instead of pressing the PTT button.

Set VOX: Short press  3 times to enter VOX setting , default is OF(off), press   to set the sensitivity level and save the setting by pressing PTT button.

3 = high sensitivity (fits for quiet occasion)

2 = medium sensitivity (fits for most occasions)

1 = low sensitivity (fits for noisy occasions)

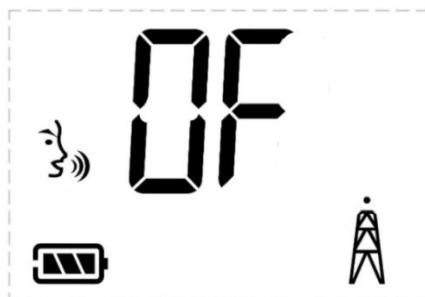

6. Call: Short press  to call your group members.


7. Flashlight: Short press  to turn on or off the flashlight.

8. NOAA Setting:

Long press and hold  for 3 seconds to enter the NOAA menu , it will scan 11 NOAA radio channels automatically. If you want to select NOAA

channel manually, short press menus button  to stop scan, then press

 to set your desired NOAA channel. Long press and hold  for 3 seconds to exit NOAA menu.

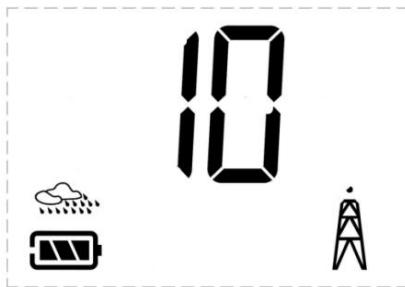


9. Channel Scan:

Long press and hold  for 3 seconds to scan channel automatically, also

long press and hold  for 3 seconds to exit channel scan menu.

When the device detects an available channel signal, it will automatically stop scanning and you will be able to hear the transmitted voice simultaneously. To enter this channel and respond the transmission, please press the PTT button within 5 seconds, otherwise the channel will scan again.

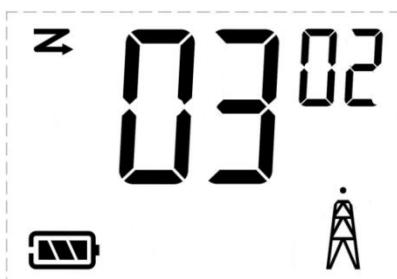

10. Lock the Keypad (Channel-lock) :

Long press and hold  for 3 seconds to lock or unlock the keypad (Channel-lock) . In the keypad locking state, Channel settings, Channel scan and NOAA is unavailable, you can still turn on /off the walkie talkie, press PTT to talk or receive signal, send a call and turn on/off flashlight.



11. Alert Setting: Long press and hold  button for 3 seconds to start-up alert, the flashlight will keep flashing and you will hear alert sound. If

you want to stop alert, please also long press and hold  button for 3 seconds.


12. Call Tone Setting:

Short press  4 times, screen will display  and “01” start to flash, press   to select the call tone(total 10 calling tone), press PTT to confirm.



13. Key Tone Setting:


Short press  5 times, screen will display  , and “ON” start to flash, press  to turn on or off the button sound, press PTT to confirm.

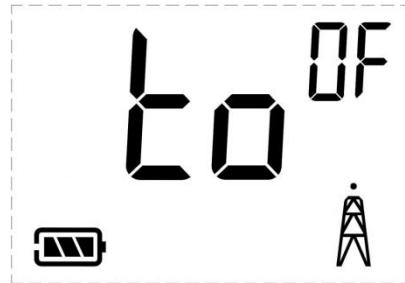

14. End Call Tone Setting:

Short press  6 times, screen will display  , and “ON” start to flash, press  to turn on or off the end call tone, press PTT to confirm.

“ON” means there will be a tone when PTT is released, “OF” means there will be no tone.

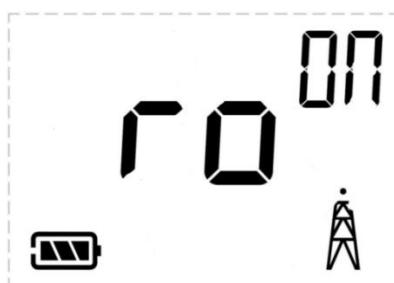

15. Factory Reset:

Please turn off the walkie talkie, then press & hold  button, turn on walkie talkie again at the same time.

Warranty

The manufacturer's warranty is void under the following circumstances but not limited to:

- Improper or inadequate maintenance or modification. Accident, misuse, abuse, contamination or other external causes.
- The use of unspecified adapter and accessories, loss or damage in transit.
- Damages occur as a result of one's failure to follow the instruction.
- This warranty does not apply to expendable or consumable parts.

Customer Service

We have a customer service team that guarantees hassle-free solutions to any issue you might have within 24 business hours.

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. Do not use this device when the antenna shows obvious damages. Hold this transmitter approximately 25 mm away from your face and speak normal with the antenna pointed up and away. Use the supplied belt clip for body-worn configuration as other accessories may not comply to the limits.