

使用说明手册

1、外观视图



2、功能描述:

1. 方向摇杆键: 向左右, 上下在不同的选项切换
2. A键: 游戏菜单选择时, 为确认键
3. B键: 游戏菜单选择时, 为返回键
4. START键/SELECT键: 菜单功能 (游戏中)
5. 充电方法: 请使用5V-2A充电器连接机器TP-C口充满时间: 5-8小时

3、基本功能

1. 显示屏: 7英寸IPS 1024*600
2. 内置电池: 3000mAh
3. 游戏功能: 支持PSP, PS1, NES, GBA, MD, SFC, MAME二十多个模拟器
4. 外响功能: 支持
5. TF卡扩展: 支持最大128G
6. 支持高清视频输出

4、主菜单功能

1. 设置: 语言设置, 主题风格, 关屏设置, 背光设置, 按键音设置, 恢复出厂设置, 系统信息
 - 游戏
 1. 方向键选中游戏菜单, 按START/A键进入游戏
 2. 游戏列表中按B键返回主页
 3. 在游戏中同时按SELECT/START键会出现游戏菜单, 用户可对游戏进行暂停/保存/载入/退出等操作
 - b. 设置
 1. 方向选中设置菜单, 按START/A键进入列表, 再按START/A键确认

5、硬件功能定义

5.1 详细参数

LCD	7英寸IPS 1024*600
游戏	支持: PSP, PS1, NES, GBA, MD, SFC, MAME, 128位街机等二十多个模拟器
电源供电	5V/2A
喇叭	内置喇叭, 8欧1瓦
扩展	支持TF卡扩充, 最大128GB
电池	3000mAh
耐温范围	-40度至85度
音频输出	支持3.5MM立体声耳机
视频输出	HDMI高清输出

备注:

1. 此机器图片供参考机器外壳以实物为准, 使用说明只提供参考, 机器软件升级按实物为准。
2. 如产品内容或参数有变更时, 请以当前产品为准, 恕不另行通知。
3. 本机出厂为零文件储存, 所有演示时外来所有文件(音频, 视频, 游戏, 图片等)必须在演示后立即删除, 本公司对此不承担任何责任。
4. 充电方法: 请使用输出5V-2A充电器, 连接数据线连接机器USB口进行充电
5. 执行标准: GB17625.1-2012, GB8898-2011, GB/T13837-2012
6. 0到14岁以下儿童需成人陪同下使用本产品。
7. 下载说明: 请按机器所支持的格式下载游戏, 在放到机器对应文件夹当中即可

保修条款

1. 商品自售出之日起七日内, 如发生性能故障, 商品机身及包装必须保持完整, 可换同种型号商品(须经检查), 但不包括人为损坏。

2. 商品自售出之日起保修一年, 终身维护, 配件不在保修范围内。

3. 保修服务只在正常使用下有效, 一切人为损坏(包括自行拆机, 使用不当)不在保修范围内。

4. 保修时需提供本卡, 未能提供本卡或私自涂改本卡, 本公司有权作报废处理。

包装配件			
彩盒	机器	TP-C	说明书
*1	*1	*1	*1


产品保修卡

用户姓名	性别	年龄
通信地址		
联系电话	邮编	
购买地点		
购买日期	销售单号	
品名及规格	机身编号	
经销商签名	用户签名	

警告 窒息危险-所有包装物料(如胶带、塑料袋、塑胶片、捆绑线、标签)以及机内细小配件, 勿让3岁以下儿童接触, 以免发生窒息危险, 并在成人监护下使用。
当环境温度≤0°C时, 应把机器移到室内且在室温下放置2小时后使用

Instruction manual

1、Appearance view

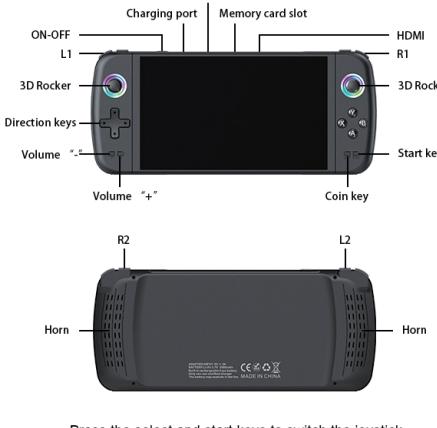

2、Function Description

1. Direction rocker key: Left and right, up and down in different options switch
2. Key A: The Game Menu Selection, for the confirmation key
3. B Key: When the game menu is selected, it is the return key
4. START/SELECT key: Menu Function (in-game)
5. Charging method: please use 5V-2A charger to connect the TP-C port of the machine. Charging time: 5-8 hours

3、Basic functions

1. Display: 7 inch IPS 1024*600
2. Built-in battery: 3000mAh
3. Game features: Supports PSP, PS1, NES, GBA, MD, SFC, MAME, and more than 20 emulators
4. Outward function: Support
5. HD video output support

4、The main menu function

1. Settings: language settings, theme style, screen off settings, backlight settings, button sound settings, factory reset, system information
 - Games
 1. The arrow key selects the game menu and presses START / A to enter the game
 2. Press B to return home page in the game list
 3. In the game, press SELECT + START to return to the game sub-menu, exit when selected, and then press A to exit the game
 - Settings
 1. Select the orientation setting menu, press START / A to enter the list, and then press START / A to confirm

5、Hardware Function Definition

5.1 Detailed parameters

LCD	7 inch IPS 1024*600
game Support:	Support: More than 20 emulators including PSX, NES, GBA, MD, SFC, MAME, 128 bit arcade, etc
Power	5v/2a
Horn	Built-in dual speakers, 8 ohms 1 watt
Extension	Support for TF card extensions, up to 128GB
Battery	3000mah
Temperature resistance range	-40 degrees to 85 degrees.
Audio output	Support 3.5 MM stereo headphones
Video output	HDMI HDMI output

Remarks:

1. This machine picture is for reference. The case of the machine is based on the physical object. The instructions for use only provide reference. The upgrade of the machine software is based on the physical object.
2. If there is any change in the content or parameters of the product, please refer to the current product without prior notice.
3. This machine is manufactured with zero file storage. All foreign files(audio, video, games, pictures, etc.) must be deleted immediately after the demonstration. We do not bear any responsibility for this.
4. Charging method: Please use the output 5V-2A charger, connect the data wire to the machine USB port for charging
5. Implementation standards: GB17625.1-2012, GB8898-2011, GB/T13837-2012
6. Children under 14 years of age need to be accompanied by an adult to use this product.
7. Download instructions: Please download the game in the machine's supported format and put it in the machine's corresponding folder.

Warranty clause

1. Within seven days from the date of sale, in the event of a performance failure, the fuselage and packaging of the commodity must remain complete and may be replaced by the

same type of commodity(subject to inspection), but not including man-made damage.

2. The goods shall be guaranteed for one year from the date of sale and shall be maintained for life, with accessories not covered by the warranty.

3. The warranty service is only valid for normal use, and all man-made damage(including self-demolition, improper use) is not covered by the warranty.

4. This card must be provided at the time of warranty. If this card can not be provided or privately altered, the company has the right to scrap the card.

Packaging Accessories			
Color Box	machine	TP-C	instruction
*1	*1	*1	*1

Product warranty card

User Name	sexua	lity	age
Communication address			
Contact number.	Zip Code		
Place of purchase			
Date of purchase	Sales Number		
Title and Specifications	Body number		
Distributor signature	User signature		

WARNING 窒息危险-所有包装物料(如胶带、塑料袋、塑胶片、捆绑线、标签)以及机内细小配件, 勿让3岁以下儿童接触, 以免发生窒息危险, 并在成人监护下使用。

When ambient temperature ≤ 0 °C, the machine should be moved indoors and placed at room temperature for 2 hours after use

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.