



GETTING STARTED

Note: This clock can NOT operate on battery only. The battery is for backup power in case of a power outage. See battery backup section.

1) Plug the power cord into the back of the clock. Then plug the other end into a standard electrical outlet. The display will turn on, and the clock is now ready to be set.

Important: The maximum input power is 5V 2A. Use the included power adapter or USB Type-C connected to a 5V-1A, or 5V-2A power adapter or USB power source.

2) If this is the first time setting up the clock. The clock comes with a button cell battery for the backup battery. Remove the thin clear plastic tab on the back of the clock, extending out from inside the battery backup compartment. This will allow the backup battery to start supporting backup power.

BATTERY BACKUP (OPTIONAL)

Note: This clock is designed to use electricity as the main power source. The battery is intended for backup power in case of a power outage. When using batteries only, the display will appear off to conserve the battery life. In the event of a power failure, the battery will continue to maintain settings and function. However to prolong battery life the display will appear to be off until the electrical power is restored.

- 1) On the back of the clock, remove the screw on the battery compartment. Then slide the battery tray out.
- 2) Insert 1 fresh "CR2023" button cell battery into the battery tray. Be sure the + side of the battery faces down.
- 3) Replace the battery tray compartment and screw.

WARNING

- INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



IMPORTANT:

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The required battery type is CR2032.
- Nominal battery voltage is 3 Volt.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (60°C / 140°F) or

incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

FCC REMARKS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ONE YEAR WARRANTY

NYL Holdings LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, NYL Holdings LLC will replace the clock at their discretion. NYL Holdings LLC will not be liable for any loss or damages, including incident or consequential damages of any kind: from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, these limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. To claim warranty, you must have a receipt as proof of purchase, and a payment (Check or Money Order to NYL Holdings LLC) for USD \$5.95 to cover the cost of return shipping. If you are having trouble with your clock, contact support by e-mail.

Attn:

CustomerService@NYLholdings.com

Customer Service / NYL Holdings LLC
65 Roosevelt Ave. (Suite 201)
Valley Stream, NY 11581