



2.4G Wireless Video Doorphone

User Manual V1.0

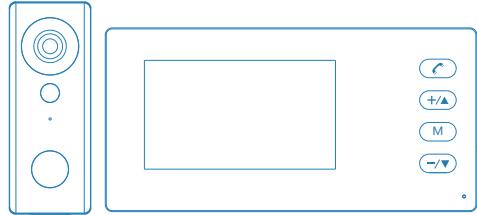


Product Description:

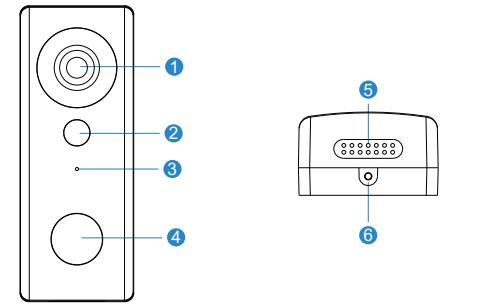

1) Camera 2) IR Lamp 3) MIC
4) Ring Button 5) Speaker 6) Anti-theft Hole


1

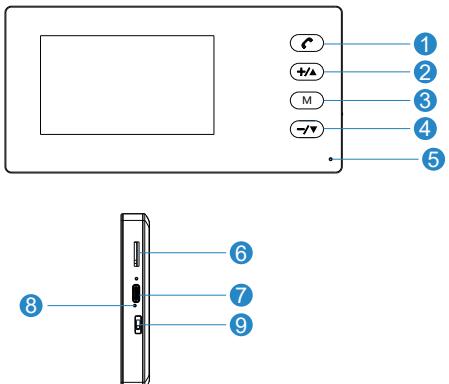

1) Power on 2) Volume+
3) Menu 4) Volume-
5) Microphone 6) TF Card
7) Tepy-C 8) Reset hole
9) ON/OFF

2

Connection:

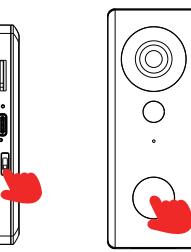

1. Turn the switch of indoor unit to "ON", then long press "M" button, the screen will show "connecting.....30", it is pairing mode.
2. Long Press the Ring button of outdoor unit, indicator light will flash.
3. When the indoor monitor displays "Connected... ✓", it indicates successful pairing.
4. When the visitor rings the doorbell, the indoor unit rings. pick up the handset to Talk with the outdoor unit; hang up the phone to end.


3

Buttons(Symbol) Indroduction:

Symbol	Indroduction	Symbol	Indroduction
	Short press-Menu Long press-pairing		Connection Singal
	Hang on Hang up		Volume
	-/page down		Power of outdoor unit
	+/page up		Power of indoor unit
	Photo		Two-way intercom
	Video		Pairing Unpair / unconnection
	Ringtone		Pairing... Connecting
	Setting		Pairing...✓ Connected

4

Indoor phone Operation:

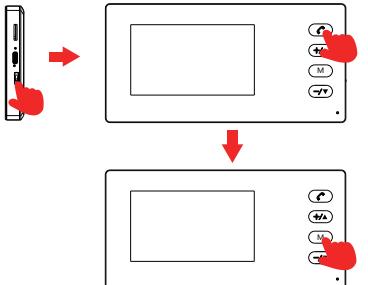

1. Turn the switch to "ON", the screen will be on.
2. Long press "OK" wake up the device; press "M" enter menu setting.



5

3. -/▼, +/▲ to choose
4. "OK" to confirm, "M" to back.
5. If there is no operation in 30 seconds, the display screen will automatically turn off. Press and hold the "OK" for 3 seconds to wake up.
6. Photo: When a visitor presses the doorbell, the camera will automatically capture the visitor's image and store it in the display memory. Note: Up to 50 images, loop coverage, save the latest photos.
7. Recording: This function requires inserting a TF card. ringing the doorbell, and the monitor will automatically turn on recording, loop coverage, save the latest videos.
8. Setting: click enter setting
 - a. Language settings: Built in multiple languages for choose
 - b. Display brightness: Adjust the brightness of the screen
 - c. Volume setting: Adjust the volume of the speaker
 - d. Version information: Display hardware version number
 - e. Date/Time setting: Set the display date/time
 - f. Format: Clear TF card recording files
 - g. Date/Time setting

YYYY MM DD hh mm
2024 06 08 08 08

Press -/▼, +/▲ to choose; press "OK" to confirm; once adjustment finished, press the "M" to back.

6

Reference:

- The device is a low-power product. If no one rings the bell, the device enters standby mode. The indoor unit cannot wake up the outdoor unit.
- Walls, windows, metal doors, etc. may weaken the signal. Please try to install the device in a strong signal range.
- Before use, please do the pairing between the outdoor unit and the indoor unit, and make sure install it in the best signal range.
- If the screen is too close to the doorbell, it will cause echoes. Please keep them away or lower the volume.
- This product is suitable for working temperatures ranging from -10 ° C to 60 ° C. Please do not use at temperatures that are too high or too hot. Do not use in excessively humid environments.

Kind reminder: indoor unit needs to be connected to an external power for long-term use. The battery is only for temporary use. Do not use for a long time without an external power.

7

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.