

设计版本号	产品名称   Product name	比例   scale	日期   Date	设计师   Designer	审核   Audit
Rev_V1_EN	DR-HAF008S_说明书	1: 1	20250520	Yan Ellen	alyssa
Hesung innovation 和生创新	材质印刷与技术要求 封面封底:80g书纸 内页: 80g书纸 印刷要求: 双面印刷, 文字线图清晰 装订方式: 骑马钉装订	字体   Fonts Manrope	尺寸   Size 105mm × 150mm		

\*此页删除不做印刷



裁切线
正折线
反折线
出血位
粘胶区域


图层使用规范:
1、备注信息图层为非印刷区域, 展示印刷物料基础信息。 2、刀板线、备注工艺、尺寸图展示印刷工艺部分。 3、画面信息层展示印刷展示图片与文字。 *电子文档为Adobe Illustrator制作
文件格式: model规格类目日期.AI (为可编辑原始文档) 文件格式: model规格类目日期.pdf (为文件转曲不可编辑文档)

设计师	审核	产品负责人	法规	采购

审稿 检查事项 会签以“√”形式确认 (会签前请勿修改)
审稿检查事项
商标机密
字符高度
工艺材质
颜色标识
产品方案
条码检查
厂址
全成分
警告标语
执行标准
产品尺寸
外/内箱尺寸
OEM信息
产品包装信息 请相关部门确认产品 包装等信息
*OEM信息: 委托方及被委托方 信息(名称、地址、 邮箱、电话、生/产 许可证、卫生许可 证)

# DREO | TurboPoly™ Table Fan 565S

## USER MANUAL

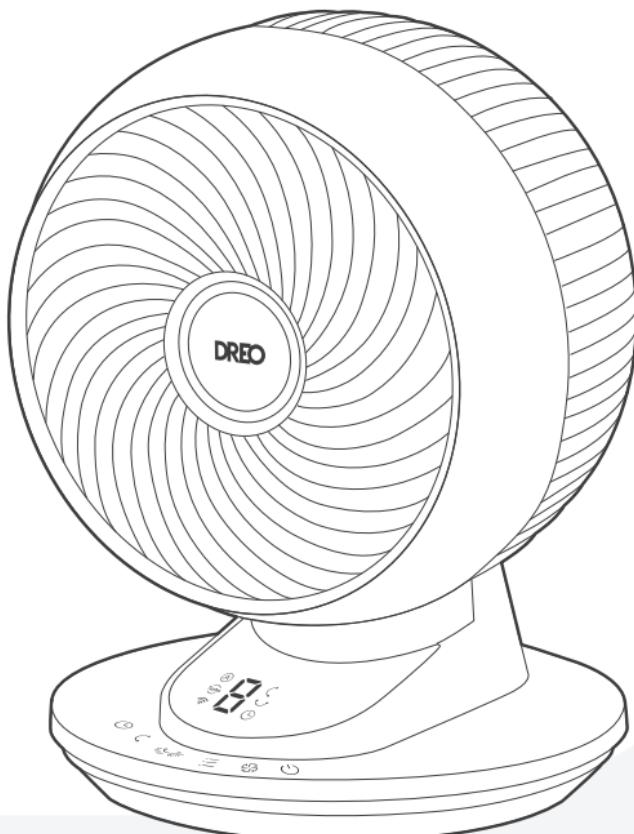

[www.dreo.com](http://www.dreo.com)

## Looking for help?

Contact us to get expert support.



[support@dreo.com](mailto:support@dreo.com)



(888) 290-1688



[www.dreo.com](http://www.dreo.com)

Mon-Fri, 9:00 am-5:00 pm PST/PDT

“

# Thanks for Choosing **DREO!**

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

# CONTENTS

**01**

IMPORTANT SAFETY  
INSTRUCTIONS

1-3

---

**02**

KNOWING YOUR  
APPLIANCE

4-5

---

**03**

CONNECTING TO  
YOUR APPLIANCE

6

---

**04**

USING YOUR  
APPLIANCE

7-10

---

**05**

CLEANING AND  
MAINTENANCE

11-14

---

**06**

TROUBLESHOOTING

15

---

**07**

DREO CUSTOMER CARE

16-18

---

# IMPORTANT SAFETY INSTRUCTIONS

01



READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.



**Do not** cover the air inlet and outlet while in operation.

**Do not** use the air circulator near flammables and combustibles.

## General Safety

1. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
2. Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## Operation Safety

1. Place the appliance on a flat, dry surface before use.
2. **Do not** immerse in water and any other liquids.
3. **Do not** use the appliance until the base is installed.
4. **Do not** insert your fingers, pencil and any other objects into the grilles under any circumstances.
5. **Do not** dismantle, repair, or modify. All servicing should be performed by qualified personnel.

# Electricity Safety

## WARNING:

1. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
2. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
3. Do not operate any air circulator with a damaged cord or plug. Discard air circulator or return to an authorized service facility for examination and/or repair.
4. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
5. **WARNING:** To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using a 3D Printer).
6. **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Air Circulator With Any Solid-State Speed Control Device.
7. Turn off the appliance before plugging.
8. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
9. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
10. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

The appliance shall not be modified by users, such as by adding supplemental filters to the appliance.

# FOR HOUSEHOLD USE ONLY

# READ AND SAVE

# THESE INSTRUCTIONS

## Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.


## Specifications

Model No.	DR-HAF008S
Input	120V~60Hz
Rated Power	36W
Battery Type	AAA

# KNOWING YOUR APPLIANCE

02

## Package Contents

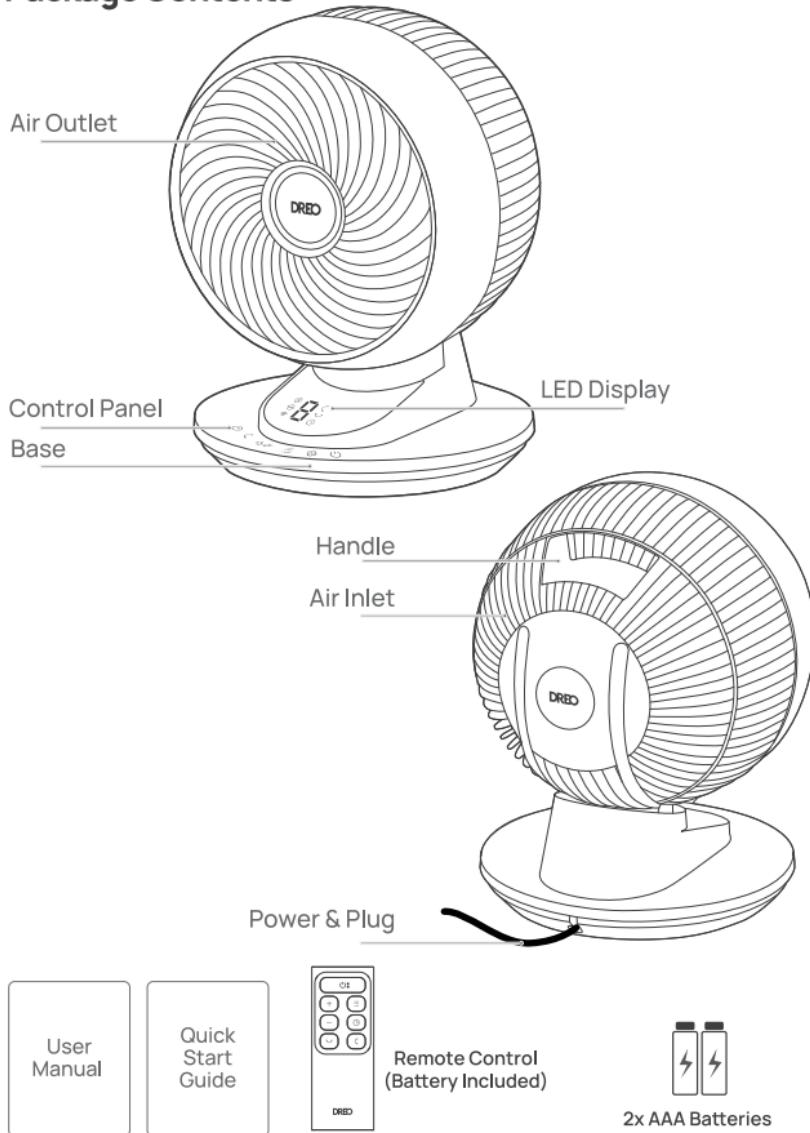

## Control Panel



### Power Button

- Turn power on/off
- Long press for 10 seconds to reset factory settings



### Fan Speed Button

- 1-9 levels-Turbo Mode



### Mode Button

- Switch between Normal/Auto/Turbo Mode
- Long press for 3 seconds to mute/unmute



### Horizontal Oscillation Button

- Adjust airflow direction (90°)
- Long press for 5 seconds to start network settings and device pairing



### Vertical Oscillation Button


- Adjust airflow direction (90°)



### Timer Button

- Select to set a timer (0-8h)

## LED Display

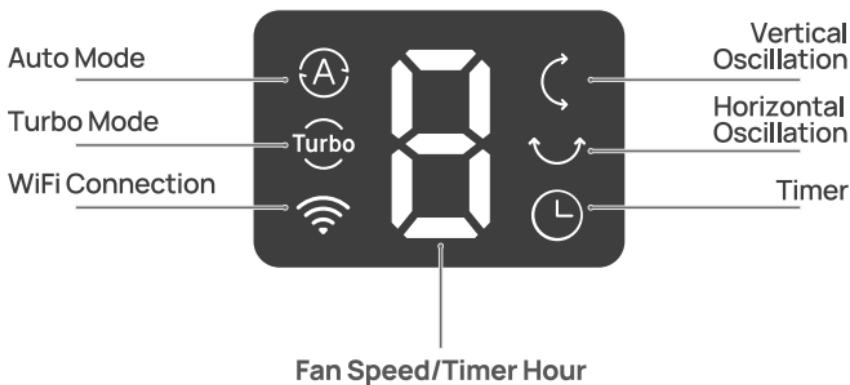

# CONNECTING TO YOUR APPLIANCE

# 03



Before connecting the appliance to your mobile device, please scan the QR code on the left or go to the app store and search “DREO”, then select and download the app.



Look for “**TurboPoly™ Table Fan 565S**” when connecting your new pedestal air circulator



You can use the DREO app to connect your appliance to **Amazon Alexa** or **Google Home**.

Please follow the in-app instructions to set up your voice assistant.


*NOTE: You must create a DREO account to access voice assistants.*

- 1 Launch DREO and sign in or create account by following in-app instructions.
- 2 Enable Bluetooth on your mobile device and plug in your appliance.
- 3 Hold  for 5 seconds to start WiFi connection settings.  
(Tip: The WiFi icon  will keep flashing when pairing.)
- 4 Tap + Add Device and select **TurboPoly™ Table Fan 565S**.
- 5 Follow in-app instructions to complete WiFi connection.
- 6 You're now ready to control the appliance on your app.  
(Tip: To restart connection settings, hold  again for 5 seconds)

# USING YOUR APPLIANCE

# 04


## Getting the Most out of Your Air Circulator

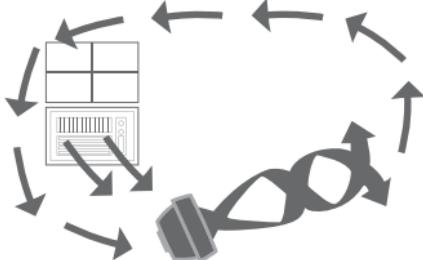

### Summer:

Use with Air Conditioner


Position the air circulator in front of your AC to circulate cold air and provide better cooling.

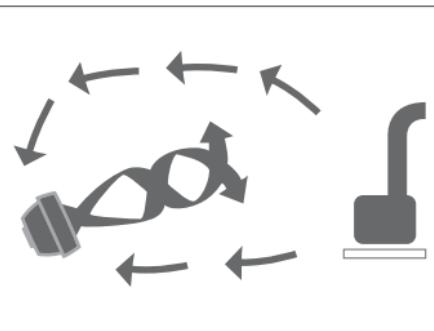

### Winter:

Use with Heater

Send the heat to corner of the room and circulate warm air faster.

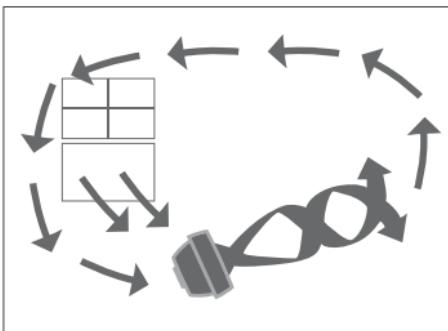

### Spring & Fall:

Circulation

Make the indoors as fresh and pleasant as the outdoors.

# Working Modes

(Press  on the remote)



## Normal Mode

Fan runs at the fixed speed.



## Auto Mode

Fan automatically increases speed when room temp is higher and decreases speed when temp is lower.



## Turbo Mode

Fan runs at the maximum speed.



## Natural Mode

(Available in the DREO app)

Fan speed goes up and down intermittently to replicate the natural breeze.



## Custom Mode

(Available in the DREO app)

Fan speed changes according to temperatures or time you desire.



## Sleep Mode

(Available in the DREO app)

Balance comfort and noise by automatically decreasing fan speed as you fall sleep.

If the fan speed is higher than 3, it will decrease two times, one speed every 30 minutes, then it will remain constant.

If the fan speed is 3 or below it will remain constant.

# Additional Features



## Timer

When the fan is ON/OFF, touch the timer button  on the remote control repeatedly to set a timer from 1 to 8 hours. When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

**Note:** When the auto off timer is enabled, display will return to fan speed after 3 seconds.

Display will show 8 if the timer is beyond 8 hours. To set a timer beyond 8 hours, please go to the DREO app.



## Child Lock

Long press  and  at the same time for 3 seconds to turn on/off Child Lock.

**Note:** Child Lock doesn't apply to operations from the remote control. You can also turn off Child Lock by re-plugging in, resetting to factory settings.



### Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.



### Firmware Update

Check the firmware version on the DREO app and update regularly for the air circulator to work more efficiently.

• Display will show "  " during the update process.  
Do not operate until the update is completed.



### Countdown Display


When long pressing buttons for Factory Reset, Child Lock, and Mute, a countdown will show on the display accordingly.



### Display Auto Off

Display turns off after 1 minute.  
Wake up the display with any button.  
To disable this feature, please go to the DREO app.

## Remote Control

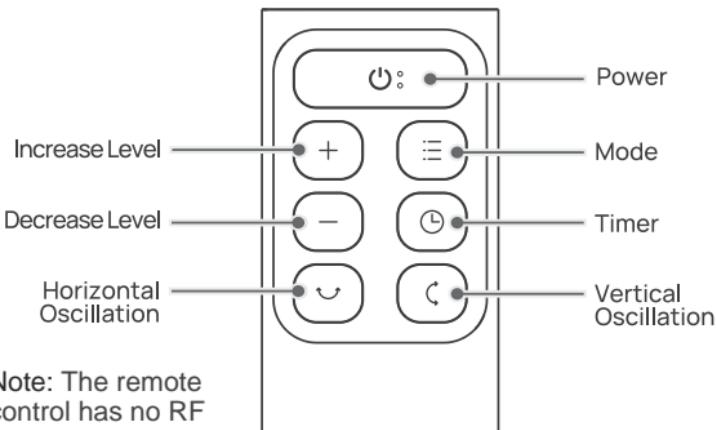


## Battery Replacement

1. Remove the battery cover in the direction indicated by the arrow.
2. Replace with two new AAA 1.5V batteries. Make sure that the positive(+) and negative(-) terminals are positioned correctly.
3. Push the battery cover back into place.



### WARNING

- Replace with new batteries of the same type when replacement is required.
- Remove the batteries when the remote control is unused for long period of time.
- Do not attempt to dismantle the batteries.
- Do not dispose the batteries in fire, batteries may explode or leak.
- Chemical burn hazard. Keep batteries away from children.
- Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

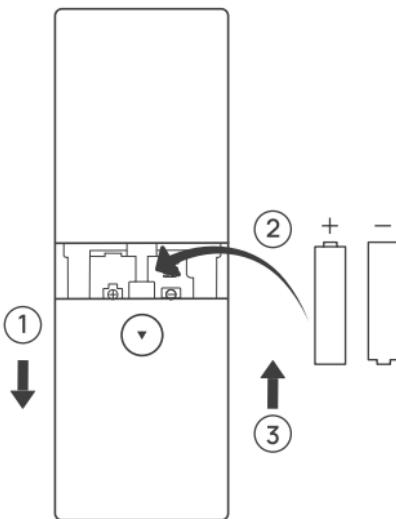

# CLEANING AND MAINTENANCE

# 05



## Outer Surface

Gently wipe off the dust with a soft, dry cloth.

### CAUTION



1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.


## Front Grille and Blades



### WARNING


To reduce the risk of electrical shock and injury to persons, turn off and unplug the appliance before any cleaning and maintenance.

1

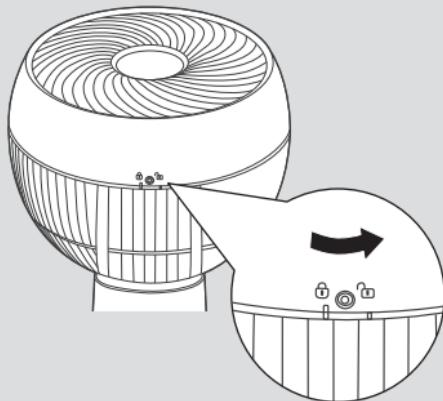


Remove the screw on the front grille, rotate the grille counterclockwise to take it off.

2

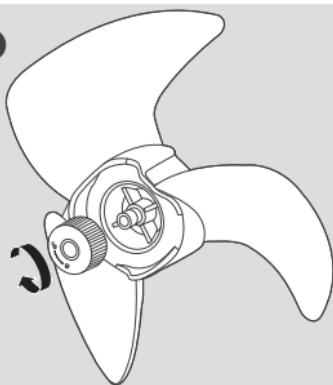


Remove the blade cap by rotating it as shown and take the blade assembly out of the shaft.

3

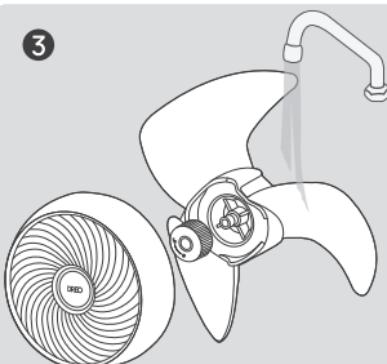


Rinse cap, blades, and grille under running water or with a clean, damp cloth.

4

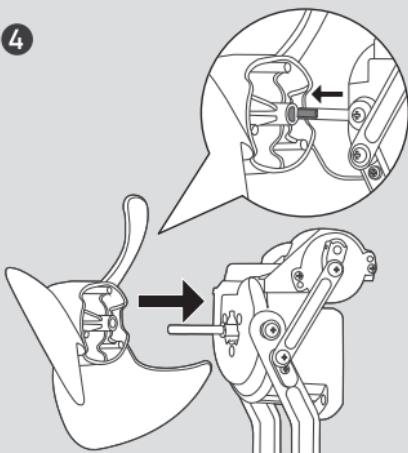

Dry up all parts, and insert the blade assembly back into the shaft by aligning the D-shaped points on the center.


5

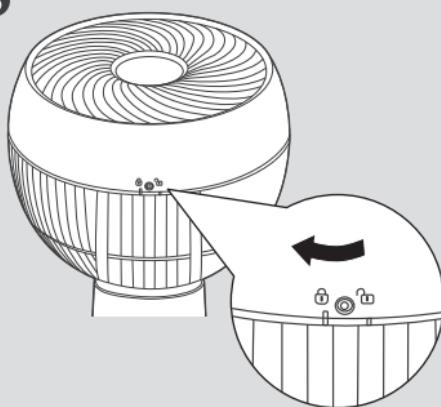

Align the point on the front grille with the right point on the casing, then rotate the grille clockwise and install the screw back in place.

## User Servicing Instructions (Fuse)

This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please cut off power and follow the below instructions or consult a qualified electrician.

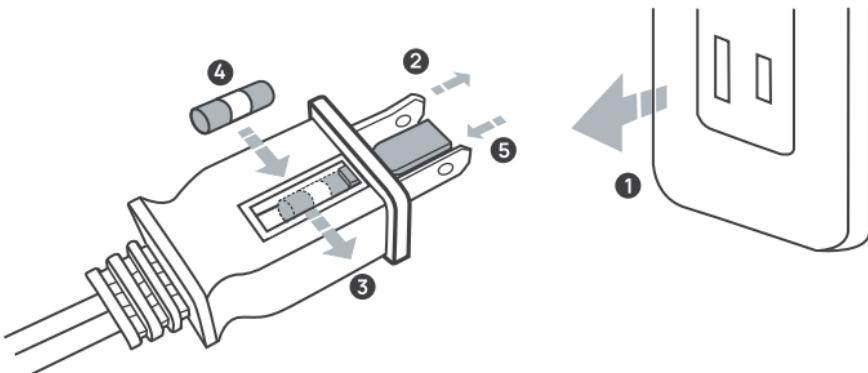

- 1 Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- 2 Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- 3 Remove fuse carefully. Push the fuse from the other side to remove the fuse.
- 4 Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.
- 5 Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

### WARNING

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

# TROUBLESHOOTING 06

## My air circulator won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the air circulator.

## My air circulator is shaky and wobbling!

Place the air circulator on a flat, level surface.

## My air circulator is making vibration and noise!

1. Place the air circulator on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.
3. It is normal that the fan makes a little noise when manually adjusting the fan head.

If your problem is not listed or still persists, please contact our Customer Support (**see page 18**)

# DREO CUSTOMER CARE

07

## 12-MONTH LIMITED WARRANTY

### What is Covered

DREO warrants to you that your product will be free from original defects in materials and workmanship for a period of twelve (12) months from the date of your purchase, when you use your product for intended purposes in accordance with this User Manual.

Please retain your proof of purchase. If you do not retain your proof of purchase, your warranty will start two (2) months from the date of manufacture printed on your product label.

### What is Not Covered

This limited warranty only applies to the original purchaser of your product and is non-transferable. This warranty is only valid if your product is used in the country in which you originally purchased it. In addition, this warranty will not apply, and DREO will not be liable for any costs, damages, or repairs, in connection with any of the following:

Accidents or use of your product with inappropriate force;

Damage or destruction caused by wrong voltage or unstable electric current;

Normal wear and tear;

Careless operation or handling, misuse, abuse, neglect, and/or failure to maintain or use your product in accordance with this User Manual;

Any partially or completely altered, modified and/or dismantled products;

Reduction in battery discharge time due to battery age or use (as applicable);

Products with altered or removed serial numbers;

Clearing any blockages from the product;

Purchases from retailers and distributors not authorized by DREO to sell this product;

Defects caused by or resulting from damages from shipping or handling by any third party not authorized by DREO to ship or handle your product; or

Defects caused by or resulting from repairs, service, improper maintenance, or alteration to your product or any of its components by anyone other than a repair person authorized by DREO.

Any service and customer support that DREO provides to you under this limited warranty will not extend the duration of this limited warranty.

### Warranty Limitations and Exclusions

ANY IMPLIED WARRANTIES RELATING TO YOUR PRODUCT, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE AND ARE OTHERWISE DISCLAIMED.

THIS LIMITED WARRANTY SHALL BE THE SOLE REMEDY OF THE PURCHASER OR USER OF THE PRODUCT, AND DREO SHALL NOT BE LIABLE FOR AN ALLEGEDLY DEFECTIVE OR DAMAGED PRODUCT EXCEPT TO REPAIR OR REPLACE IT IN ACCORDANCE WITH THIS LIMITED WARRANTY. DREO WILL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, INDIRECT, CONTINGENT, OR CONSEQUENTIAL DAMAGES OR LOSSES OF ANY NATURE THAT YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF YOUR PRODUCT.

Some jurisdictions do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction.

## Limited Remedies

If your product fails because of an original defect in material and/or workmanship during the warranty period, DREO will repair or replace (in DREO's sole discretion) your product.

To obtain warranty service on your product, contact us at support@dreo.com or at (888) 290-1688 (available from Monday-Friday, 9:00 AM-5:00 PM PST/PDT) for further instructions.

**IN THE EVENT OF AN ORIGINAL DEFECT IN MATERIAL AND/OR WORKMANSHIP, TO THE EXTENT PERMITTED BY LAW, THE REMEDIES SET FORTH IMMEDIATELY ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES.**

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Model No.: DR-HAF008S  
Rev\_1.0\_EN

### We're Here to Help!

-  (888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)
-  support@dreo.com
-  www.dreo.com

