


展开尺寸：420x185mm
折后尺寸(风琴两折)：140x185mm

Outdoor String Lights

User Manual

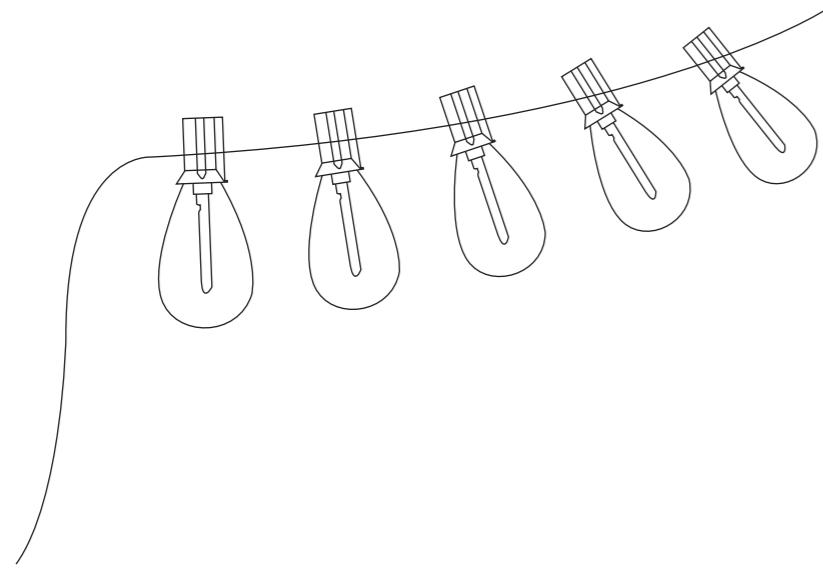

01

Troubleshooting

1. The remote control does not work

- a. Check if the remote control battery has power.
- b. Reset the remote control, then re-pair it.

Reset the remote:

Within 30 seconds after power-on, long press the turn on/off button on the pole for 3-5 seconds. Reset the remote successfully when the lamp fast flashes.

Re-pairing:

Within 30 seconds after power-on, long press the turn on/off button on the top right of the remote for 3-5 seconds. Re-pair the remote successfully when the lamp fast flashes.

2. Other issues.


Please call or email us, we will provide you with a satisfactory solution.

02

Operation Instructions


- Plug and Play.
- The dimmable string light can be used for brightness adjustment, mode switching and lighting timing through the remote control. 4 lighting modes: constant light, slow flashing, fast flashing and jumping flashing. (Note: AAA Batteries are included)
- If you encounter any problems, please contact us in time.
- The longest effective distance of the remote control is up to 15M. You can easily adjust the switch, brightness and speed of the light string without going to the plug.
- Maximum inter connectable system length: 1 strings S11-35 lights.
- To reduce the risk of fire, use only the bulb provided by the manufacturer, the replaceable bulb voltage is 0.3W.
- This string light is rated 11W. Just insert the power plug into an appropriate power socket to turn on the string light and unplug it to turn off the light. No need to installation bulbs.

Remote Control

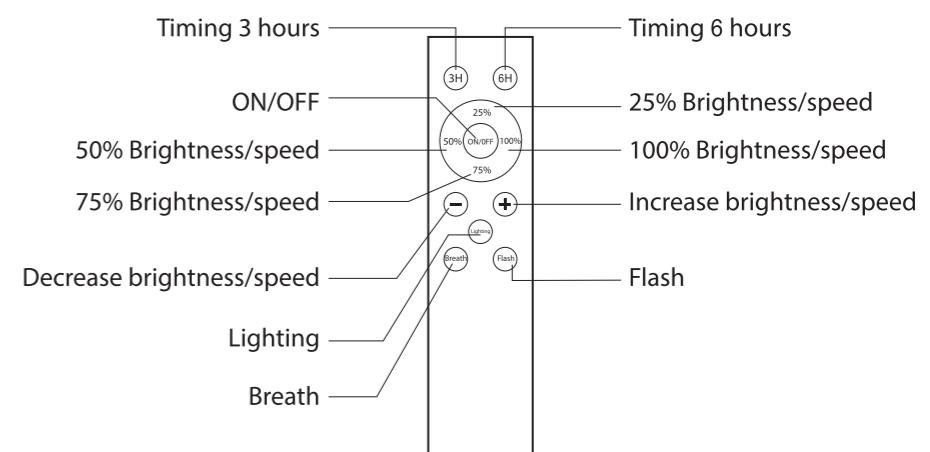


03


Installation

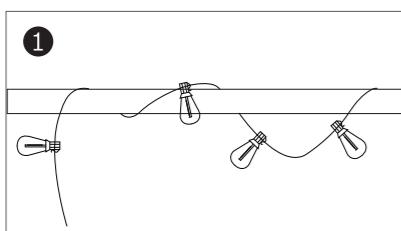

Install cable with the empty sockets in desired location.

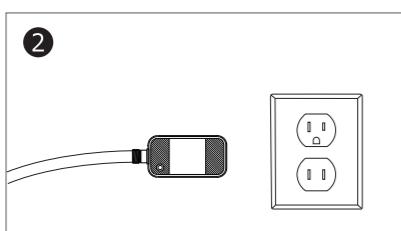

Connect the DC plug to the power source and the lights are on.

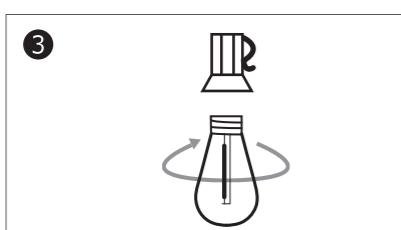

If need change the led light source. Please disconnect the power of the string light. Rotate to unscrew the bulb. Replace with a new light source.

SPECIFICATIONS

Light source	LED
Bulb type	S11
Voltage	DC 24V
Lamp Holder	E12
String length	200 FT
Color temperature	2700K
Quantity of bulbs	74 + 2 Spares

04

Warm Tips

Light strings can not be connected in series.

Safety

- Do not mount or place the string light near gas or electric heaters, fireplace, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring from the night or left it unattended.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not hang ornaments or other objects on the strand.
- Do not cover the product with cloth, paper or others when in use.
- This product employs an overload protected fuse to ensure safety use.
- The Plug/transformer for indoor use only.
- Do not connect the chain to the supply while it is in the packing.
- Do not remove or insert lamps while the chain is connected to the supply.
- Ensure that all lamp holders are fitted with a lamp"
- Replace failed lamps immediately by lamps of the same type as delivered or of a type specified by the manufacturer.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- Inspect the product carefully before use. Stop use in any cut, damaged, or frayed wire insulation or cords, cracks lampshades or enclosures.
- WARNING – RISK OF ELECTRIC SHOCK IF LAMPS ARE BROKEN OR MISSING. DO NOT USE

Package Contents

1x74* bulb
1xUser Manual

05

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution:
Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

06