


User Manual for Automatic Pet Washing Machine

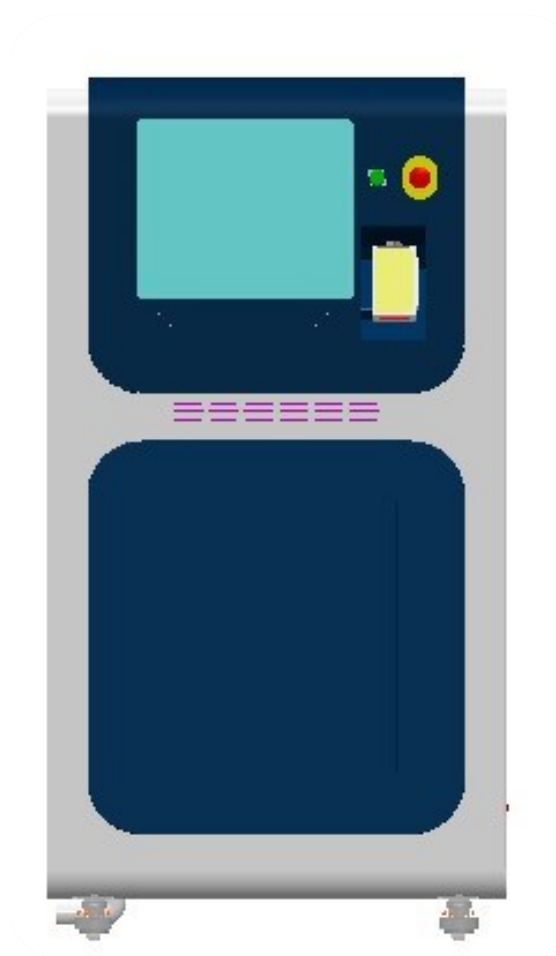

Index

Safety Instructions

Product Introduction

Product Installation

Operation Instruction

Emergency Handling

Maintenance and Cleaning

Troubleshooting

Technical Support and Contact

Safety Instructions

1. Electrical Safety

The automatic pet washing equipment must be connected to a power outlet with a proper safety ground. Since the equipment operates with high power consumption, a power cable of at least 4 square millimeters must be used. If the power cord is damaged, it must be replaced by the manufacturer, its service department, or similarly qualified professionals to avoid danger.

2. Handling Safety

For short-distance transportation on flat surfaces, the equipment may be manually pushed under safe conditions. For longer distances or transportation involving elevation changes, a forklift must be used.

3. Installation Safety

The equipment must be installed on a flat surface and must not be tilted. If there is a tilt of less than 1°, the leveling feet can be adjusted to ensure proper balance.

4. Cleaning Targets

The device is currently designed primarily for cleaning medium to large-sized pet dogs (such as Shiba Inus, Border Collies, etc.). For optimal cleaning results and the safety of the pet, it is not recommended for use with small dogs. If cleaning a small dog, please strictly follow the operating guidelines for small-breed bathing.


5. Prohibitions and Precautions

This device must not be used to clean cats under any circumstances. Additionally, before starting the cleaning process, ensure that the pet is not wearing any clothing or accessories; if present, they must be removed prior to washing.



6. Operational Safety

During operation, the owner should stay close to the equipment and monitor the pet to prevent and respond to stress reactions. Do not press the emergency stop button unless necessary, as this may disrupt the normal operation of the equipment.

Product Instructions

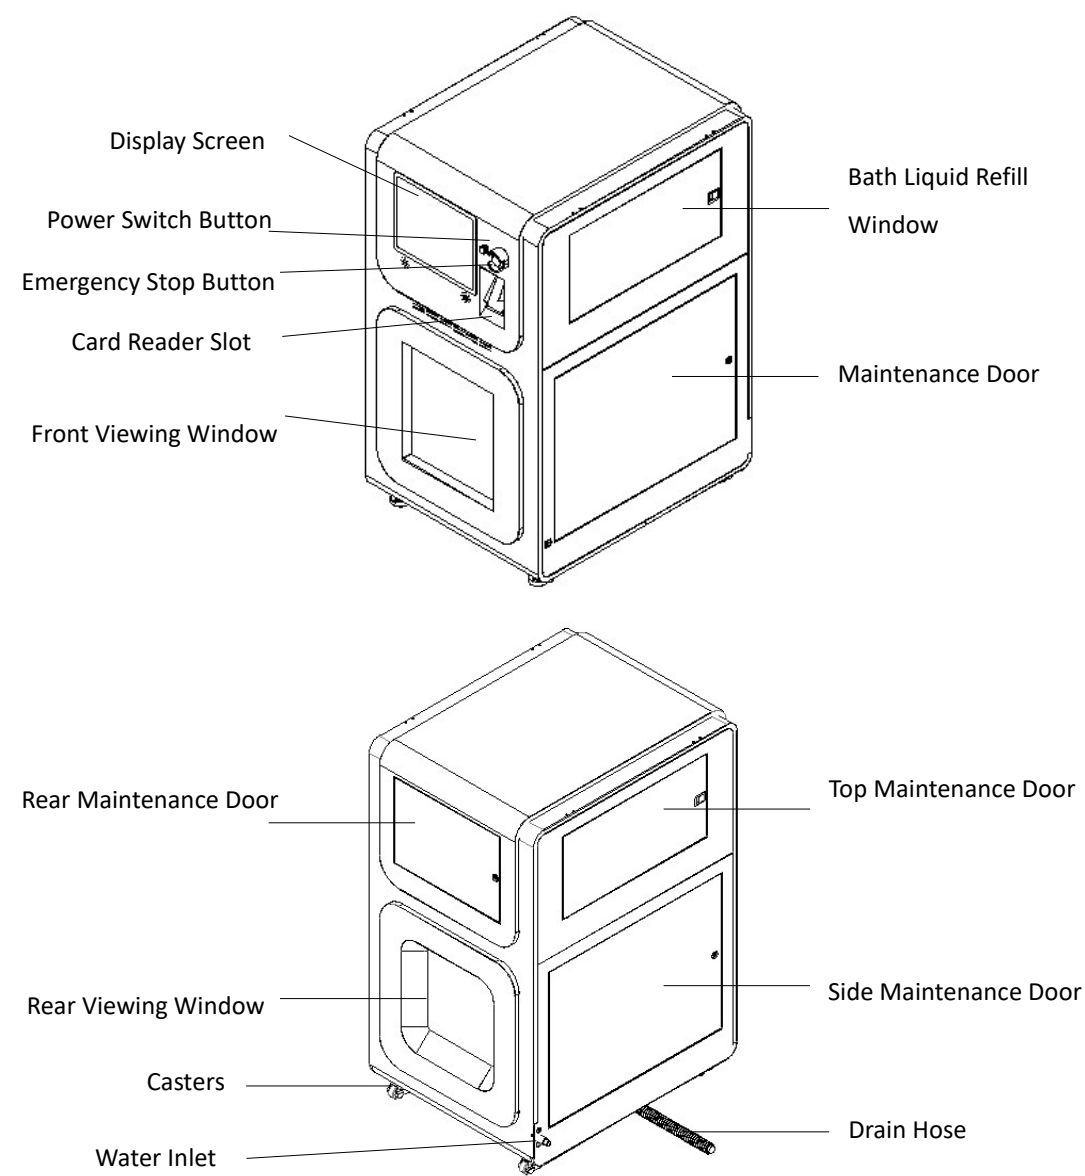

Accessories List with Icons:

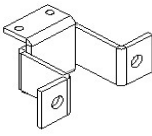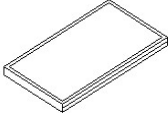				
Drain Hose	Water Inlet Hose	Hose Clamps	Wall Mounting Hooks	User Manual
1 piece	1 piece	2 pieces	2 pairs	1 book

△: Wall Mounting Hooks – used for securing the unit when installed against a wall.

Product Installation


Leveling Adjustment

The pet washing equipment must be installed at least 50mm away from the wall.



The maximum allowable tilt of the supporting surface is 1°. Uneven ground may cause instability of the equipment.

Please adjust as follows:

Ensure the equipment is placed level.

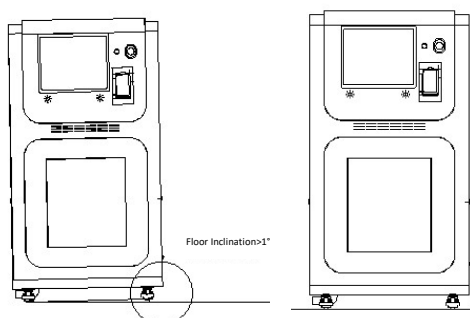

Check which side is tilted. Locate the leveling foot adjustment nut and rotate it manually to raise or lower the equipment accordingly.

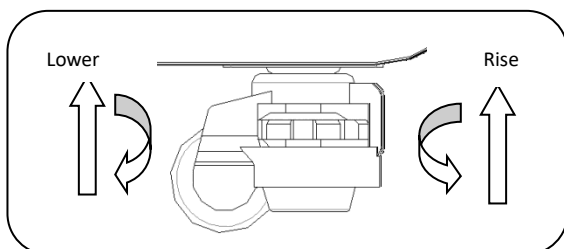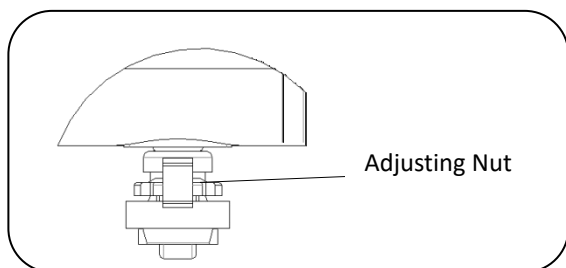


Rotate counterclockwise: Equipment rises

Rotate clockwise: Equipment lowers

Water Pipe Installation



- Drain Hose Installation:

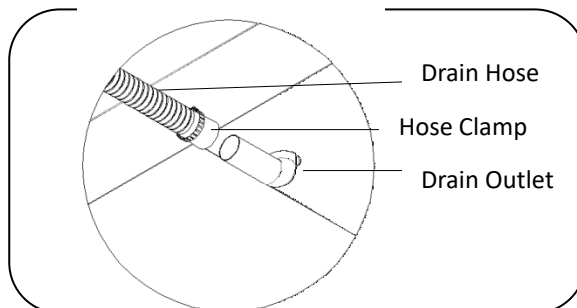

After leveling is complete, insert the drain hose firmly into the drainage outlet at the bottom of the unit. Once in place, secure it with a hose clamp.



- Water Inlet Hose Installation:

If a water tap is available within 1 meter, use the included water inlet hose—connect one end to the tap and the other to the equipment's water inlet. If not, use a soft hose with a 25mm diameter. Secure it with a clamp, and connect the other end to the water source.

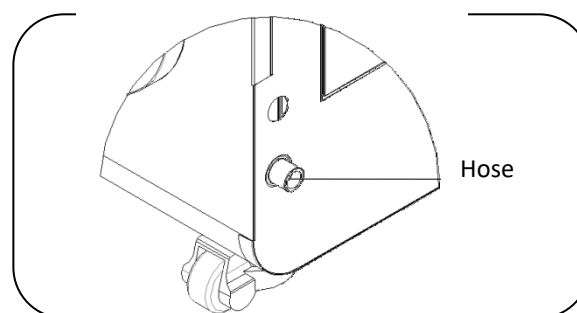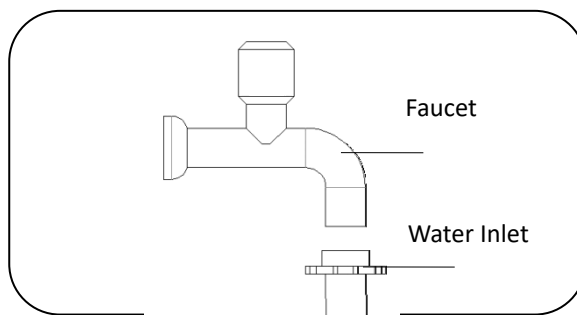


Operation Instruction

Operation Process: (on touchscreen)

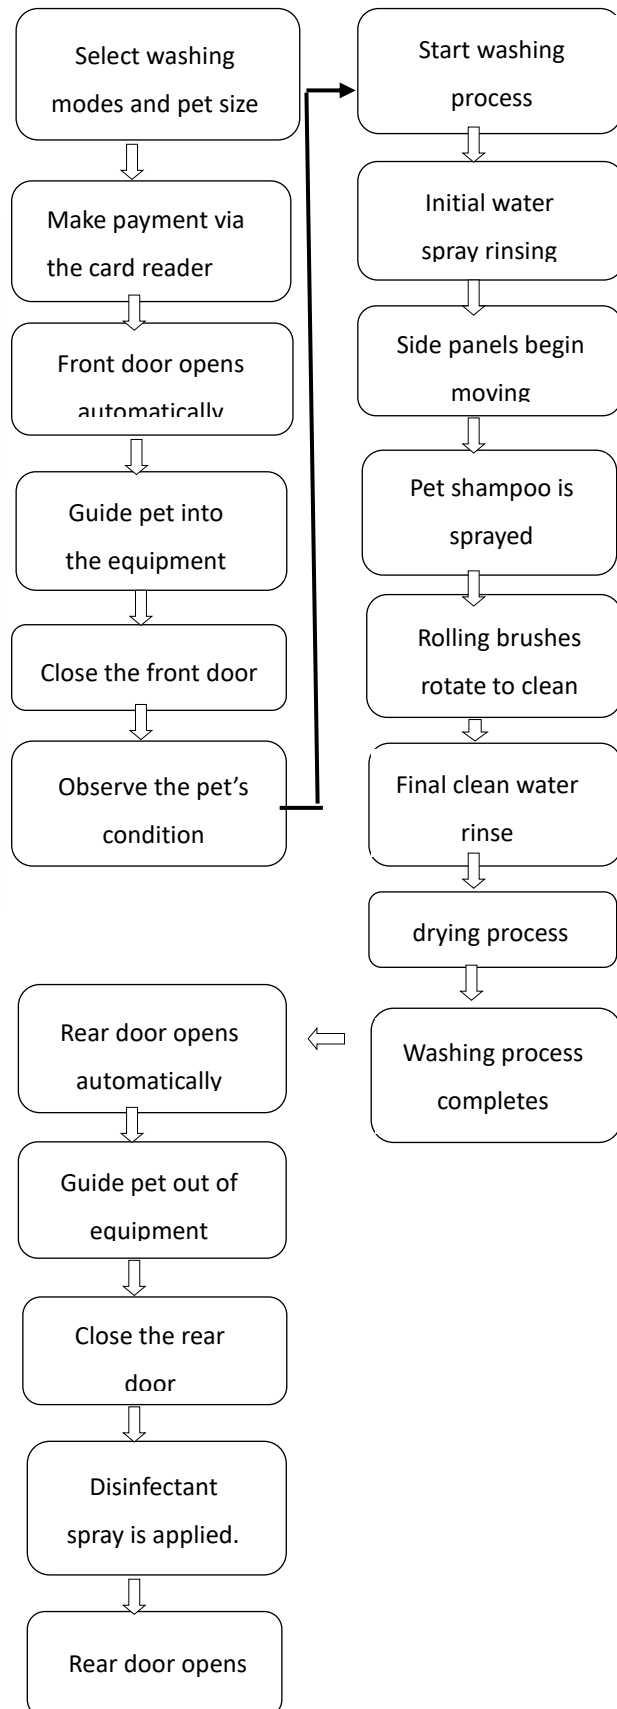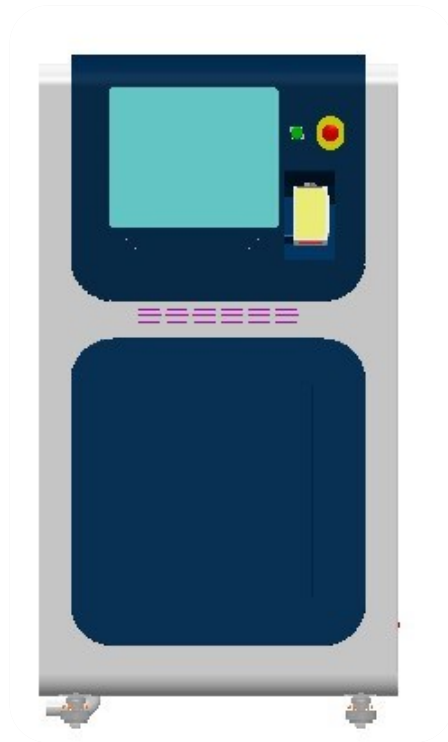


Emergency Handling

- **Power Outage During Operation:**

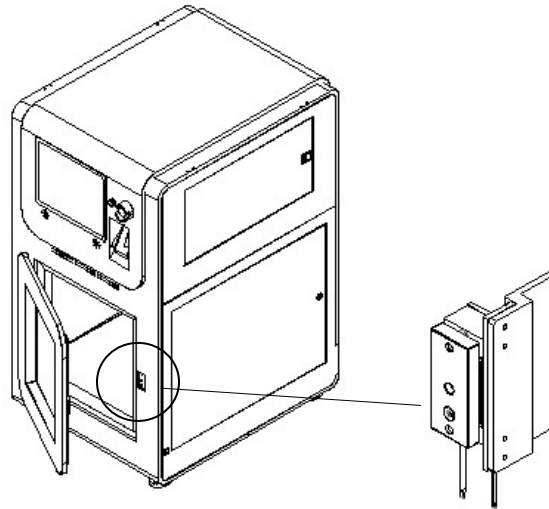

The front and rear doors use electromagnetic locks, which only remain engaged when powered. In the event of a power failure, the locks will release immediately, allowing the pet to exit safely.

- **Abnormal Pet Behavior During Operation:**

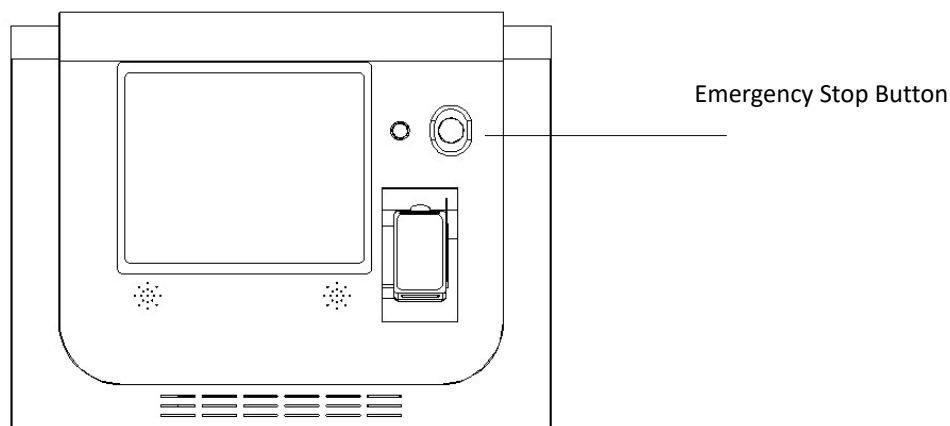

If the owner observes abnormal behavior through the viewing windows or display screen, or if the machine malfunctions, the emergency stop button located below the screen can be used to immediately halt the device.

Maintenance and Cleaning

To ensure optimal performance and extend the lifespan of the machine, regular maintenance is essential. The machine features an automatic rinsing and disinfection cycle after each use, minimizing the need for frequent manual cleaning. However, periodic checks and cleaning are still recommended.

1. **Regular Cleaning:**

- Although the machine performs automatic self-cleaning and disinfection after each wash, we recommend inspecting and cleaning the interior surfaces every few days or as needed based on usage.
- Wipe down surfaces with a soft cloth and mild detergent if visible residue remains.
- Ensure all parts are dry before closing the lid to prevent mold or odors.

2. **Bottom Filter Tray Cleaning:**

- The machine includes a removable bottom filter tray designed to capture pet hair, feces, and other debris during each session.
- Remove the tray regularly (e.g., every 2–3 uses) and rinse it under running water.
- Dry it thoroughly before reinserting.
- Do not operate the machine without the filter tray in place.

3. **Roller Brush Maintenance:**

- The machine is equipped with roller brushes on both sides of the wash room, designed to assist in moving and gently scrubbing the pet during cleaning.
- Check the roller brushes regularly for tangled hair, dirt, or other debris that may affect movement.
- Clean the brushes by removing hair buildup and rinsing with water if necessary.
- Ensure the brushes rotate freely and are not obstructed.
- If a brush shows signs of damage, excessive wear, or missing bristles, it must be replaced promptly to maintain effective cleaning and avoid stress to the pet.

4. **Drying System Check:**

- Inspect the drying vents periodically to ensure they are free of blockages.
- Clear any hair or lint buildup to maintain proper airflow.

5. **Water Tank & Hoses:**

- Clean the internal water tank (if applicable) monthly with a descaling agent.
- Inspect hoses for wear or leakage and replace them if necessary.

6. Touchscreen & Controls:

- Use a microfiber cloth to gently clean the touchscreen.
- Avoid harsh chemicals or abrasive materials.

7. Software Updates:

- Keep the machine connected to the internet to receive the latest firmware updates.
- Follow on-screen prompts or refer to the user portal for updates.

8. Annual Inspection:

- Have the machine professionally inspected once a year to ensure all systems are operating safely and efficiently.

Troubleshooting

Issue	Possible Cause	Solution
No power	Power cord unplugged	Check the connection
No internet	WiFi disconnected	Check the connection

Technical Support and Contact

Customer service contact

Allviews Technology LLC

Customer Support Phone: 1-510-5841810 (Mon-Fri, 9am-6pm PST)

Email: allview.office@allviewstech.com

Website: www.woofwooflux.com; www.allviewstech.com

Address: 1125 E Broadway Rd. Tempe, AZ 85282

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

“ This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada ’ s licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device. ”

1. “ L ’ émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d ’ Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L ’ exploitation est autorisée aux deux conditions suivantes:

1. L ’ appareil ne doit pas produire de brouillage ;
2. L ’ appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d ’ en compromettre le fonctionnement. ”

IC RF Exposure statement

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.