


正面

V1


Ring Remote for Phone

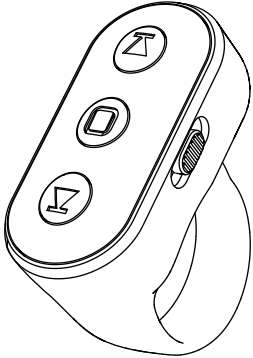

F3


What can this remote do?

A. Shorts Video Scrolling like TikTok/YouTube etc
B. eBook Turning Pages
C. Phone Camera Remote

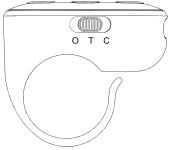


Mode selection
O - Power on/off
T - Function A and B
C - Function B and C

How to wear the ring remote

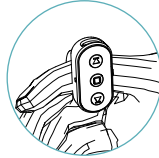

wear on index finger

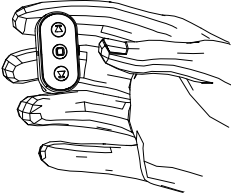


wear on middle finger (preferred)

USB C Port point to outside


Connect with phone/tablet

1.Power on the remote, led blue flash, ready topair

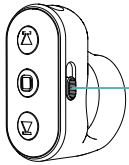


Power on/off

2.Activate phone wireless
3.Find 'F3' on the list and click to connect, once paired, the led will be off

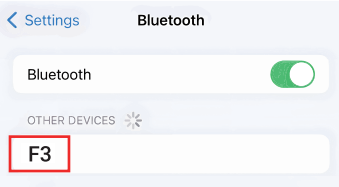


Settings Needed before use if iPhone or iPad


Need turn on Accessibility: 【Settings -> Accessibility -> Zoom -> On】

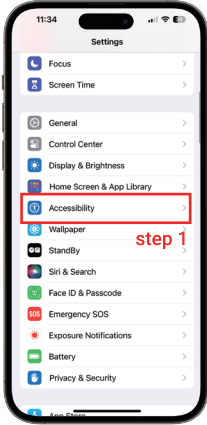

step 1

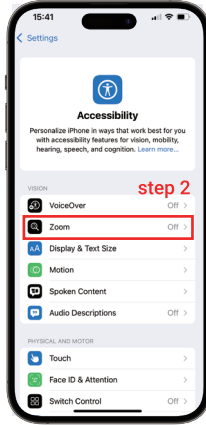

step 2




step 3

1.After enabling the zoom fionction, the screen will zoom in.

2.Double-tap the screen with three fingers to restore.


Feature A: Shorts Video Scrolling

1. Set remote to T mode



2.Button instruction as below


(1) Video in portrait mode

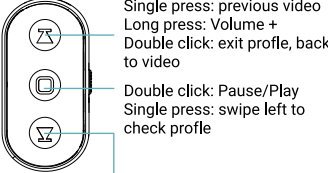


Single press: previous video
Long press: Volume +
Double click: exit profile, back to video

Double click: Pause/Play
Single press: swipe left to check profile


Single press: next video
Double click: Like the video
Long press: Volume -



(2) Video in Landscape mode

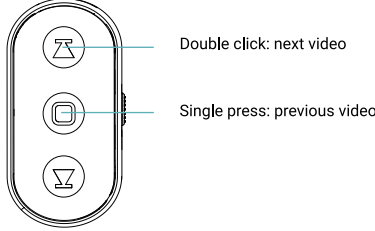


Double click: next video
Single press: previous video

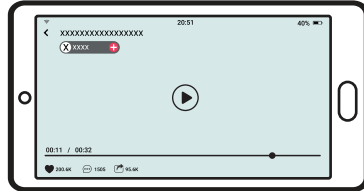

反面

*Record Reels in Shorts APP

 1. Access to reels recording via hand
2. Trigger the video via middle button as below details



Trigger button


APP	Tiktok	Youtube	Instagram	Facebook
Function				
Video/Photo triggle	Long press	Long press	Long press	Long press
Camera flip	Tripple press	Tripple press	Tripple press	Tripple press

Notice:
1. Some phones/tablets may not supported, for examples Samsung S6 Lite Tablet not support YouTube
2. For camera flip, some App support camera flip during video recording, some NOT
3. If want to use zoom function, need to change mode to C mode, once zoom done, need to change back to T mode

FCC information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help
NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

RF exposure:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.




FCC ID: 2BPGR-F3

Feature B: eBook Turning Pages

The remote compatible with most ebook app like Amazon kindle app, Libby, Google play books, Wattpad. For some ebook app, please check the turning pages settings, like Wattpad, default is scrolling, need to change it Paging.

1. Use as page turner, you can choose T or C mode

A. Shorts Video Scrolling like TikTok/YouTube etc
B. eBook Turning Pages
C. Phone Camera Remote

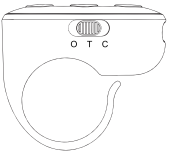


Mode selection
O - Power on/off
T - Function A and B
C - Function B and C

Specification

Product name: ring remote for phone
Model: F3
Pairing name: F3
Wireless range: 10 meters
Battery capacity: 55mAh
USB charging interface: USB C
Material: Plastic
Product size: 35*30*18mm


2.Below is the button instruction in different mode

in T mode

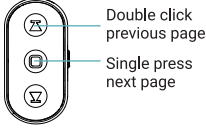


Double click previous page
Single press next page


in C mode

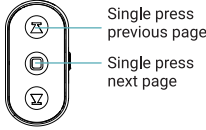

 Single press previous page
Single press next page




T mode

 

C mode


Feature C: Phone Camera Remote

 1. Set remote to C mode



C mode

2.Below is the button instructions

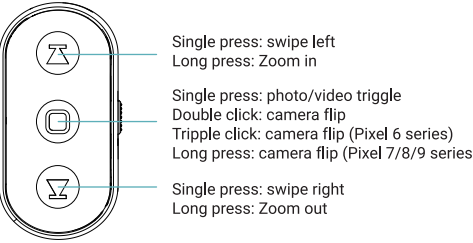

Single press: swipe left
Long press: Zoom in

Single press: photo/video triggle
Double click: camera flip
Tripple click: camera flip (Pixel 6 series)
Long press: camera flip (Pixel 7/8/9 series)

Single press: swipe right
Long press: Zoom out