

User Manual

Product structure

Working mode Diagram

Repeater Mode & AP Mode

FAQ

VERSION: 1200M2504V15
LANGUAGE: English

PRODUCT STRUCTURE

LED Explanation

Action	Status	Indicator description
Power on for 30 seconds	Power on	Indicator blinking slowly
The indicator slowly blinks to steady on	Extended	Indicator steady on
Hold down the reset button for 5 seconds	Reset	Indicator fast blinking and then turn off.
Connect the network cable	WAN/LAN	Indicator steady on



Function description

Reset: This button is used to restore The Repeater's factory default settings. With the repeater powered on, hold the Reset button for about 5-6 seconds and then the repeater will automatically restart.

WAN/LAN: One 10/100Mbps RJ45 Ethernet port is used to connect an Ethernet-enabled device to a Wi-Fi network, such as Internet TV, DVR, Gaming console and so on. Under AP Mode configuration, we recommend connecting the network cable to the router after the setup is completed.

OPERATION BEFORE SETTING

Open your mobile settings and turn off mobile data.

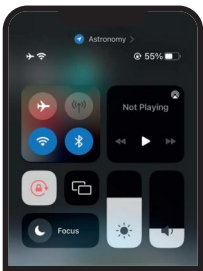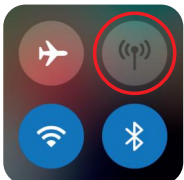

— 1 —

Working mode Diagram

Note: If you need to connect the network cable, please connect the network cable after the configuration is completed.

Repeater Mode: As a wireless signal extender

A. Extend your Wi-Fi signal without using any cables to reduce wiring troubles.

 


B. Extend your Wi-Fi signal with a cable, connect your device and extender stably.



AP Mode: As a wired signal extender (access point)

Get better Wi-Fi speed by connecting the router and the extender with network cable in the poor Wi-Fi signal area.




— 2 —

Quick Installation Guide

When the machine works normally, use the mobile phone to search and connect to WiFi pro_XXXXXX (XXXXXX is the last 6 numbers of the repeater MAC address)

Note: If the mobile phone does not automatically jump to the setting page after connecting, please input "192.168.11.1" in your mobile browser.


The colors on the UI page are for reference only.

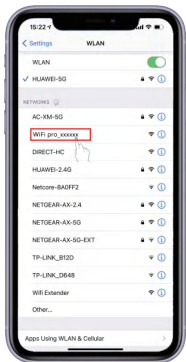

— 3 —

Wi-Fi Repeater mode setup


Step1: Click repeater mode to enter the network search page.

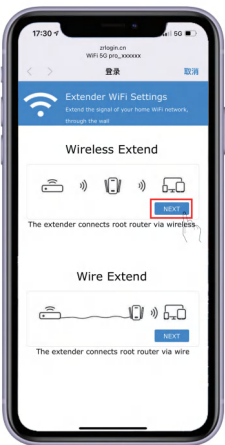

— 4 —

Step2: Select the wireless signal you want to expand. If it is a hidden network, you need to add it manually.


Step3: Enter your router connection password and click "NEXT". If you don't want the same name as your router, please choose and input the new name.

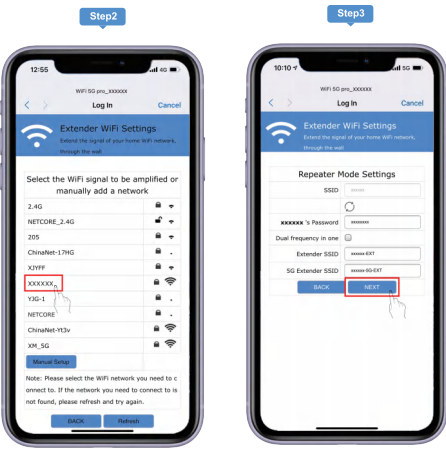

— 5 —

Step4: Click the "Finish" button to complete the relay mode configuration (The extended WiFi's password is the same as the routers' by default)


Step5: Complete Repeater Mode setting.

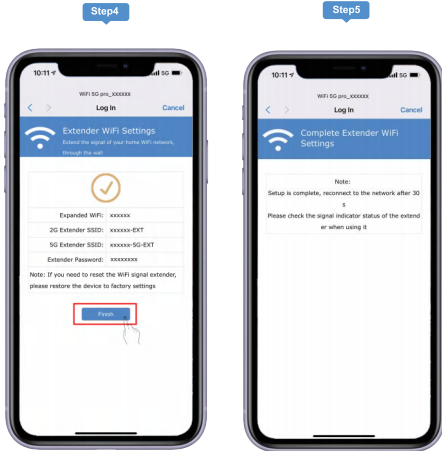

— 6 —


AP mode Setting

Step1: Click to Select "AP" mode to enter the setting page.

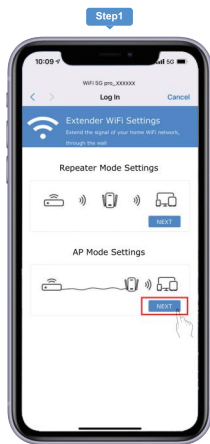

— 7 —


Step2: Set the wireless name and password with more than 8 digits (the wireless name and password can be set according to personal preference).

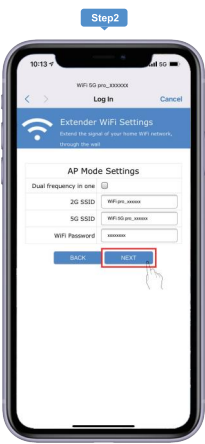

— 8 —

Step3: Click the "Finish" button to complete the AP mode configuration.

Step4: Complete AP mode setting.

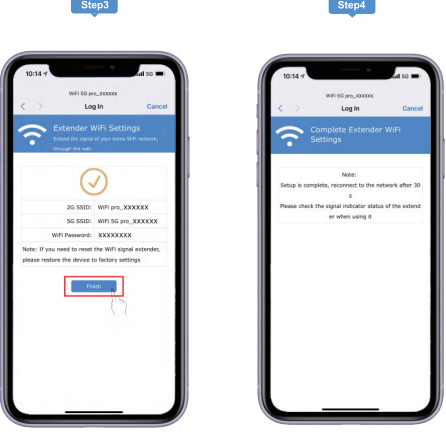

— 9 —

FAQS and SUPPORTS

Q1: Where shall I place the WIFI extender?

A: We suggest that after setting up successfully, please move this WiFi extender on the halfway between your router and your weak signal area. The location that you choose must be within the range of your existing WiFi router network.

Q2: Does this Extender will reduce my wifi speed?

A: The WiFi extender is used to extend the WiFi range (which your main router WiFi can't cover). It does not increase WiFi speed. Sometimes, the WiFi speed may reduce due to external influences, such as microwave oven or thick wall. We suggest you place it at different position for a better signal.

Q3: What can I do if I cannot access the web management page?

A: There are many kinds of reasons caused this situation. Please try the methods below to log in again:
(1). Make sure your phone/PC is connected to its wireless network "WiFi pro_XXXXXX" during setup.
(2). Or open your browser on your phone/PC, enter 192.168.11.1 in the address bar to set up.
(3). If you still can't access the web page, please reset the extender, then connect your computer or smartphone to its wireless network "WiFi pro_XXXXXX" and begin to set up again.

— 10 —

Q4: What is the password for setting up the extender?

A: When you connect "WiFi pro_XXXXXX", there is no need to enter the password, you can connect it directly. After setting up, when you connect to the new extended network, the password is the same as your root router password.

Q5: How to reset the WIFI extender?

A: Plug in the extender and wait about 30s, then press and hold the Reset button for 5 seconds, the Indicator flashes quickly, and the machine restores to the factory mode.

Kindly Remind:

- ▲ Do not attempt to disassemble, repair, or modify the device.
- ▲ The socket-outlet shall be installed near the equipment and shall be easily accessible.
- ▲ Keep the device away from water, fire, humidity or hot environments.
- ▲ If the product encounters any problems during use, please feel free to contact us.

折页尺寸: 75*100 mm

— 11 —

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.