

mportant Safety Instruction

2. Keep these Instructions

3. Heed all Warnings. 4. Follow all instructions. 5. Do not use this apparatus near water. 6. Clean only with a dry cloth.

7. Do not block any ventilation openings.Install in accordance with the manufacturer's instructions 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus(including amplifiers)that produce heat. 9. Do not defeat the safety purpose of the polari or grounding-type plug. A polarized plug has two lades with one wider than the other. A grounding type plug has two blades and a third grounding

prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. 10. Protect the power cord from being walked on or pinched particularly at plugs.convenience receptacles, and the point where they exit from the 11. Only use attachments/accessories specified by

12. Unplug this apparatus during lightning storms or hen unused for long periods of time. 13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has peen exposed to rain or moisture, does not operate

normally, or has been dropped. **Special note:** When placing your unit on a lacquered or natural fihish, protect your furniture with a cloth or other protective material.

Additional Warnings: The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids such 'appareil ne doit pas etre expose aux ecoulements

Caution marking is located at the rear or bottom of the apparatus. Attention marquage est situé sur le paneau arriere ou inferieur de l'unite. The marking information is located at the rear or bottom of apparatus. Le marquage est situe sur le

paneau arriere ou inferieur de l'unite.

liquide tel qu'un vase ne doit etre place sur l'objet.

FCC Warnings

WARNING:Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful nterference, and (2) this device must accept any interference received, including interference that may cause

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursual to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interfergenerates, uses, and can radiate radio frequency ener and, if not installed and used in accordance with the nstructions, may cause harmful interference to radio communications. However, there is no guarantee that nterference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is encouraged Reorient or relocate the receiving antenna.


 Increase the separation between the equipment and Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV chnician for help. FCCRadiationExposureStatement his equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your

This equipment complies with ECC radiation exposur equipment should be installed and operated with inimum distance 20cm between the radiator& you u aux éclaboussures et aucun objet ne contenant de


> This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Make sure you read all the safety information before you use this product. Sound bar main unit AUX audio cable USB Cable

Digital optical cable Power adapter Mounting screws Remote control User's guide

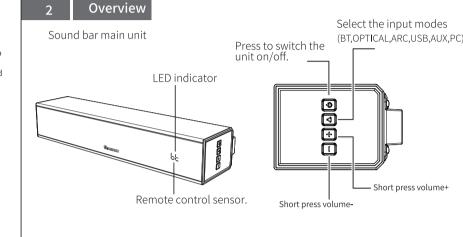

Digital ARC audio in _____ Line in socket

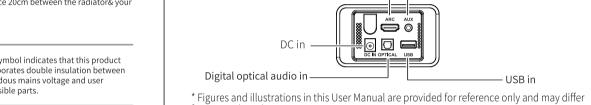

1 What's in the box

3 Sound Bar LED Indicato


The LED indicator on the sound bar gives you information about the status of the sou Standby Mode 0-50 Volume 0~50 BT Input ხ 69 : Music Mode 0PE 5 83 Optical Input Movie Mode arc ARC Input ٤٩ 3 News Mode ՍՏե UO-6 USB Input Voice Intensity 0~6

ዖር

PC Input

AUX Input

RUX

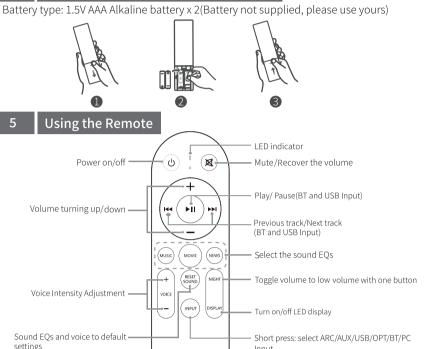

Long press 3 seconds: BT reset

6 Using &Connect to your TV

Step 1, Turn on the TV and check the optical cable, confirm whether there is red light

Note: The optical cable inserted into optical socket will produce a snap.

at the end of the optical cable, If the optical cable has red light and then connect the cable to the soundbar. (Remove the white cover on cable).


Step 2, Turn on the sound bar, press the "INPUT" on the sound bar remote (or soundbar "∆" Button), then select the input mode "OPT" which is shows on the LED display.

Step 3, Turn on the TV, press the home on the TV remote, go to **TV setting** →audio(sound)→TV speaker--select external speaker or turn off TV speaker,

save the **setting**, then back to **audio** (sound setting)---select **expert setting**

---digital audio output (or optical output)---select PCM (some TV called **SPDIF** or **optical**), Save the **setting**.

Step 4, Play TV show to test the sound bar.

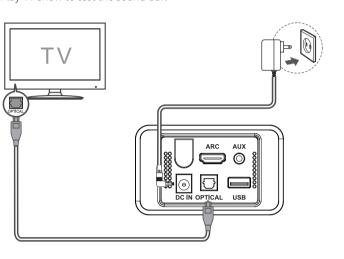

Kindly Note: for optical connection, please change TV audio output to PCM(or SPDIF and optical) and external speaker, otherwise you will get cracking noise or no sound.

Setting Steps (PCM & ARC Setting) ngs > Sound > Expert Settings > Digital Output Audio Format > PCM ettings > General> External Device Manager > Anynet+(HDM1-CEC)> ON Settings > Audio > TV Speakers > OFF Settings > Audio > Digital Audio Out > PCM Settings > System > CEC > Enabled Settings > Display & Sounds > Audio Output > Speakers > Audio System ettings > Display & Sounds > Audio Output > Digital Audio Out > PCM Settings > Display & Sounds > Audio Output > Pass Through Mode > OFF Settings > Channels & Inputs > External Inputs > BRAVIA Sync > BRAVIA Sync Control All Settings > Genera-Devices > HDM1 Settings > SIMPLINK(HDM1-CEC)> ON All Settings > Sound > Advances Settings > Digital sound output > PCM All Settings > Sound > Sound Out > Use Wired Speaker > HDM1(ARC)Device Settings > Audio > Audio Output > Auto TCL ROKU Settings > Audio > Digital Audio Format > Select Stereo Settings > Audio > TV Speakers > Select Disabled Hisense ROKU Settings > Audio > Digital Audio Out > Select Stereo Settings > Audio > TV Speakers > Select Disabled ONN ROKU Settings > Audio> Digital Audio Format > Select Stereo Settigs > Display & Sounds > Audio Output> TV Speakers > Select OFF Fire 4-Series and Settings > Display & Sounds > Audio Output > Digital Audio Format > Select PCM Settings > Display & Sounds > HDM1 CEC Device Control > ON

TV Settings > Audio > Advanced Settings > Digital Audio Out > Select PCM

Settings > Sound > Advanced Settings > Digital Audio Out > Select PCM

Menu > Audio Settings > Advanced Audio > TV Speakers > Select OFF

Settings > Devices Preferences > Sound > Digital Output > Select PCM

Settings > Display & Sounds > Audio > Surround Sound > PCM

ettings > Display & Sounds > HDM1 CEC Device Control > ON

Kindly Note: TV settings may differ according to TV models difference, if the listed

support@wohomeshop.com, or contact the TV manufacturer for help, thank you!

method can not work, or your TV is not listed, please contact us via service mail:

Settings > Audio > Digital Output Format > Stereo Settings > Audio > Audio Mode > Select Stereo

Menu > Audio Settings > Advanced Audio > HDM1 > Select DIGITAL Menu > Audio Settings > Advanced Audio > Digital Audio Out > Select PCM

Settings > Devices Preferences > Sound > Speakers > External Audio System

Settings > Sound > Advanced Audio Settings > TV Speaker & ARC > Select ARC

Settings > Sound > Advanced Audio Settings > Digital Audio Out > Select PCM

TV Settings > System > T-Link > Select ON


Hisense (Powered | Settings > Sound > Speakers > Select ARC

(some TV choose **CEC**, the activate the **ARC**), Save the **setting**(refer to page 6). Step 4, Play TV show to test the sound bar.

---digital audio output ---select ARC

6b ARC

LED display.

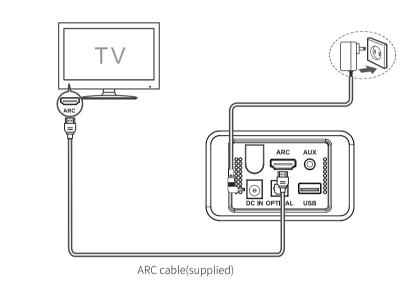

Step 1, Turn off the sound bar and TV, connected the sound bar to the TV through

Step 2, Turn on the sound bar, press the "INPUT" on the sound bar remote (or

soundbar "△" Button) then select the input mode "ARC" which is shows on the

→audio(sound)→TV speaker--select external speaker or turn off TV speaker,

Step 3, Turn on the TV, press the home on the TV remote, go to **TV setting**

save the **setting**, then back to **audio** (sound setting)---select **expert setting**

6c AUX Step 1, Choose line in cable (3.5mm to 3.5mm) or RCA cable connect the soundbar to your TV.


Step 2, Turn on the sound bar, press the "INPUT" on the sound bar remote (or soundbar "△" Button), then select the input mode "AUX" which is shows on the LED display.

Step 3, Turn on the TV, press the **home** (or menu) on the TV remote, go to **TV setting** audio(sound)→TV speaker--select external speaker(turn off TV speaker), save the

setting.(For some TVs, please back to audio(sound)→select analog output→

select the "Variable", save the setting).


Step 4, Play TV show to test the sound bar.

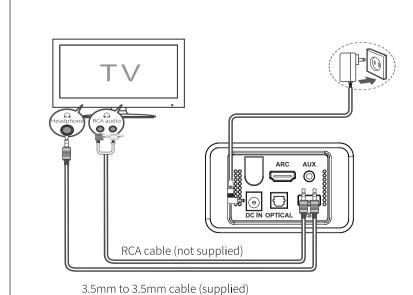

6d BT

Step 1, Press the "INPUT" on the sound bar remote (or soundbar "△" Button), then select the input mode "BT" which is shows on the LED display, the "BT" will be flash. Step 2, Turn on BT on the BT device. (see the device's manual for more information) Step 3, Select "G91" from the device BT list, connect it. When your BT device is connected, the LED display will stop flash.

Step 4. Play music from the BT device to test the sound bar.

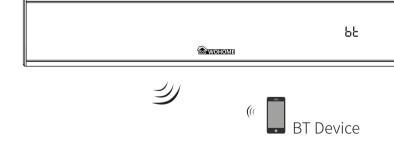

* You cannot connect more than one BT device at a time.

* If your device requests a password, enters the default "0000".


* Only work with the device which can output BT signal, it can not work with some devices can not output BT signal such as headphones.

* Long Press "INPUT" on the remote or " Δ " on the sound bar for 3 seconds to reset the BT. when the connection fails or " **G91** "cannot be found in the device list.

6e USB


Step 1, Connect your USB drive to the USB jack on the soundbar.

Step 2, Press the "INPUT" on the sound bar remote (or soundbar" Δ " Button), then select the input mode "USB" which is shows on the LED display. Step 3, Play music to test.

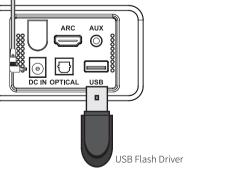

Connect to PC Step 1, Connect soundbar to the USB port of your PC via USB cable. Step 2, Press INPUT button and switch to the PC Mode.

Tips: It is not supported to connect the soundbar USB port through Type C port

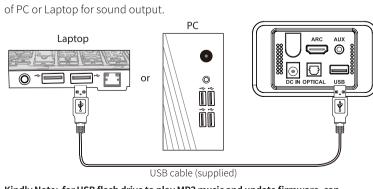

Kindly Note: for USB flash drive to play MP3 music and update firmware, can compatible with PC.

7 Specifications

Model G91 Power Supply DC15V Speaker 2.25" x3 0~50 Volume Level BT Version 5.3 Distortion <1% Product Weight 1.375 kg 387(L)x 90(D)x 70(H) mm **Product Dimension**

8 FAQ and trouble shooting

Answer: Press the home (or menu) on the TV remote, go to TV setting→audio (sound)→TV speaker--select external speaker(turn off TV speaker), save the setting, then back to audio(sound setting)---select expert setting---digital audio output(or optical output)---select PCM(some TV called SPDIF or optical), Save the setting, then try again. More detail ,refer page 6, or your TV manual.

ring noise or static sound when see a video from Youtube, Netflix, HE

Answer: Please disable the Dolby and DTS on your APPs or TVs, if you do not know how to set, please contact the APPs support or us for help.

Answer: Please press the menu or home button on the TV remote go to the TV setting→sound(audio)---select sound (audio) delay---adjust the delay time to try, this will fix the issue.

Answer: Please kindly note the max volume of this soundbar is very loud, there are several Answers that you can try to fix the problem:

1, Please make sure your sound source volume is high, if the sound source is in low volume, you will not get loud sound, so we suggest you adjust the TV and APPs volume to max.

3, Please kindly use your phone to connect the soundbar through to play the music to test the sound.

4, Please unplug and plug the adapter to restart the soundbar to test again. 5, Disable the hearing protection setting on your devices such as phone, tablet,

Answer: Please kindly note the soundbar we offered is entry-level, for small rooms not for Audiophile, can not be compared to the soundbar priced at \$200 or above. If the sound quality is very poor, you may receive the defective unit, please contact us, we will guide you to update the firmware to fix the issue.

Answer: Sure, you can connect this soundbar to your Amazon Echo through BT connection, please scan below QR code to find the connect method **Kindly Note:** Except the BT, you can also use the aux cable to connect the soundbar to your Amazon echo dot. (Please note BT connection only for music play, the soundbar DOES NOT have the built-in Alexa)

by Android)

Panasonic

by Android)

Sharp (Powered

ROKU TV Stick

Fire TV Stick

Answer: Please use the attached adapter to connect the speaker to the socket, wait about 3 seconds, the LED display will show "--", press the "POWER" button on the remote to turn on the speaker. If the LED display does not show "--". it means that the adapter is dead, please contact us and we will send a new adapter to you soon.

Answer: Please note both headphones and soundbar only can receive the audio signal, can not output, so you can not connect the soundbar to headphones to

Answer: Sound bar can not support TV remote or universal remote, but here is a solution: please kindly use AUX or RCA cable connect the sound bar to your TV headphones jack or RCA jack, then you can use your TV remote or cable remote to control the volume, more detail, please refer the AUX cable connection guide on the 6c (manual), please kindly try.

Kindly Note: When you contact us, please kindly provide your Amazon order ID, model number, address, and exact issue with us.

Web: www.wohomeshop.com Email: support@wohomeshop.com

NOTE: One year warranty, 45 days money back guarantee, lifetime technical support, 100% satisfaction service, please feel free to contact us for any questions.

For more information, please follow us: