


KIDS ELECTRIC GOKART

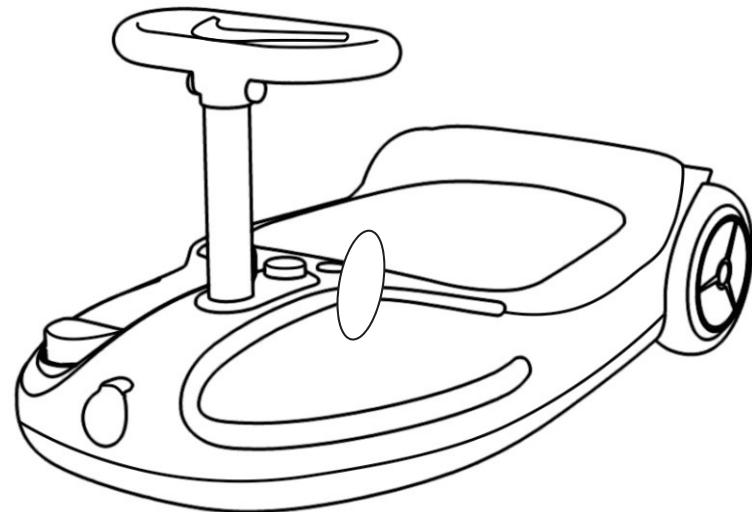

BLUETOOTH SPEAKER

The aigo Joyride E7 Kids Go-Kart features a powerful built-in wireless speaker, allowing you to enjoy music while riding.

PAIRING THE SPEAKER

1. Turn on your Kids Go-Kart. The speaker will “ping” to indicate it is ready for Bluetooth pairing.
2. Place the Kids Go-Kart and your Bluetooth device within 3 feet (1 meter) of each other.
3. Ensure Bluetooth is enabled on your phone or music device. Refer to your device manufacturer’s instructions if needed.
4. Once Bluetooth is enabled, select “aigo Joyride E7” from the list of available devices.
5. The speaker will say “paired” once successfully connected.
6. The pairing mode will remain active for two minutes. After that, it will exit automatically if no connection is made.
7. If pairing fails, restart the Kids Go-Kart and repeat the steps.
8. If your smartphone is out of range or the Kids Go-Kart’s battery is low, the speaker may disconnect and say “disconnected.” Please reconnect by following the steps above.

NOTE:

Once paired, the speaker will remember the device and automatically reconnect the next time it is in range.

The Kids Go-Kart can pair with up to two devices.

LISTENING TO MUSIC

After pairing, you can stream music directly from your device.

Control volume and tracks using your phone.

Refer to your device manual if any issues occur.

THANK YOU FOR CHOOSING THE E7 KIDS GO-KART.

To ensure safe and optimal use of this product, please read this manual carefully. It contains important information on installation, safety precautions, product specifications, and maintenance.

This product should only be used under adult supervision.

Product Information

Product Name: HappyRoll E7 Joyride Kids Go-Kart

Model: E7 Joyride

Age Range: 3+

Q.C.: PASSED

SAFETY WARNING



Always wear proper protective equipment, such as helmets, which should fit properly with the chin strap in place to provide full protection for your head.

Avoid obstacles and slippery surfaces that could result in a loss of balance or traction and cause a fall.

Do not start on rocky, slippery, sandy, gravelly, sloped, or wet surfaces.

Riders should be at least 3 years old and 36" tall.

The maximum weight load is 110 lbs.

Adult supervision is required. Always wear shoes.

Never use near or around motor vehicles.

Do not ride at night.

CHARGING PRECAUTIONS

1. Fully charge the battery for at least 2 hours before first use.
2. Charging must be performed by an adult.
3. Do not allow children to handle the charger. Insert the charger's DC plug into the port first, then connect to power.

The Go-Kart cannot be used while charging.

4. After each use (1–2 hours), recharge promptly. Charging time: 4–5 hours
5. Slight warming of the charger and battery (below 140°F / 60°C) is normal.
6. Do not charge if connectors are wet or damaged.
7. Always use the original charger and battery supplied with the product.
8. Do not drop, disassemble, or expose the battery to fire, water, or high temperatures.


Stop use immediately if swelling or leakage occurs.

9. If not in use, charge the battery at least once per month. Disconnect the battery for long-term storage.
10. Only use the original charger. Output: 25.2V / 0.4A

PRODUCT SPECIFICATIONS

- Product Name: KIDS ELECTRIC GOKART
- Product Size: 27" x 14" x 13" (inches)
- Net Weight: 16.5 lbs
- Battery: 21.6V 2.0Ah Lithium-ion
- Motor Power: 100W
- Recommended Age: 3 years and up
- Maximum Load: 110 lbs
- Power Requirement: AC 100V–240V, 50/60 Hz
- Charger Output: 25.2V / 0.4A

The E7 Joyride Kids Go-Kart is fully charged when the indicator light on the charger turns from red to green, as shown below.

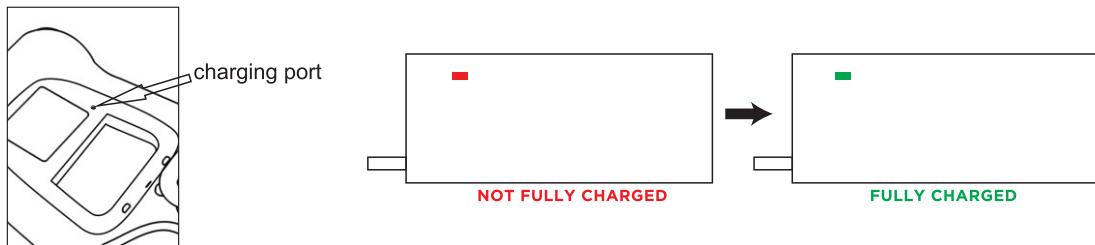


PRODUCT SPECIFICATION

Do not allow children to handle the charger.


When charging, first insert the charger's DC plug into the charging port, then plug the charger into a power outlet.

The go-kart cannot be operated while it is charging.


COMPONENT OVERVIEW

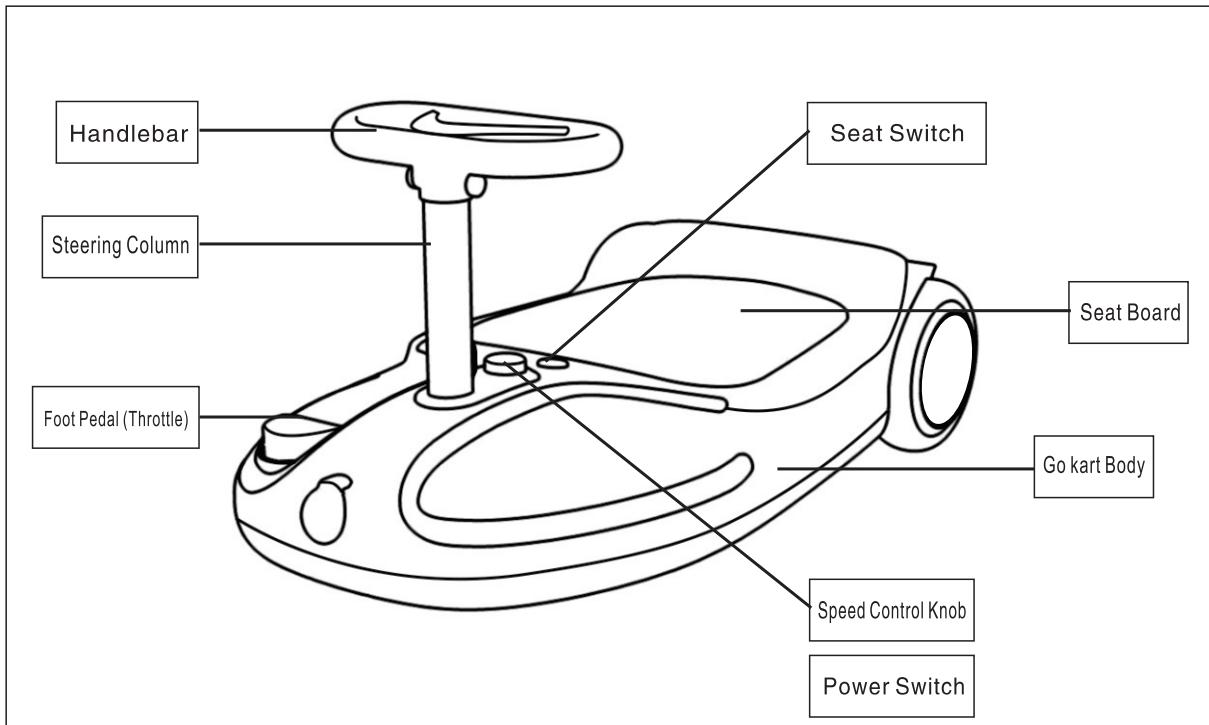

COMPONENT OVERVIEW

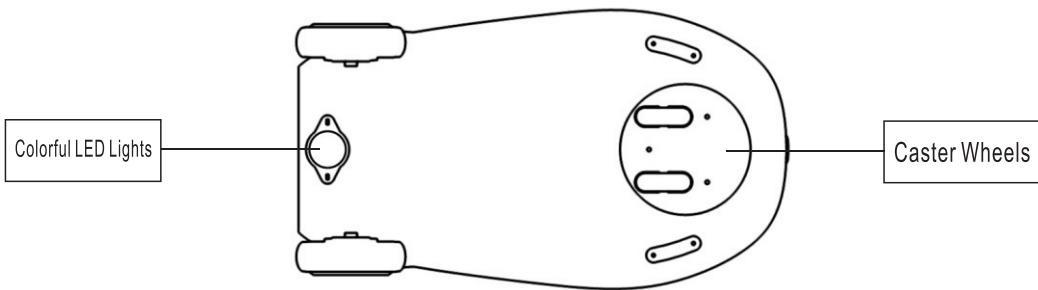


PARTS LIST DIAGRAM

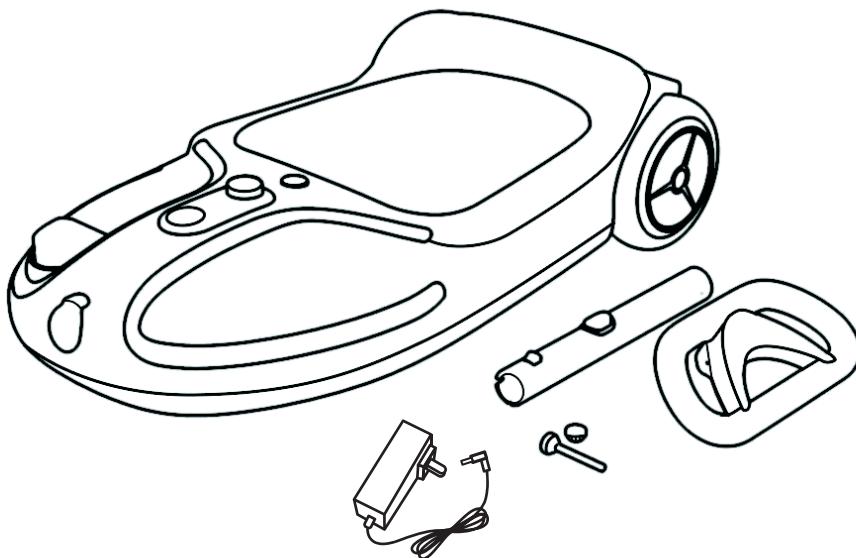


1. Gokart Body
2. Seat Board
3. Handlebar
4. Steering Column
5. Screws
6. Charger


ASSEMBLY INSTRUCTIONS

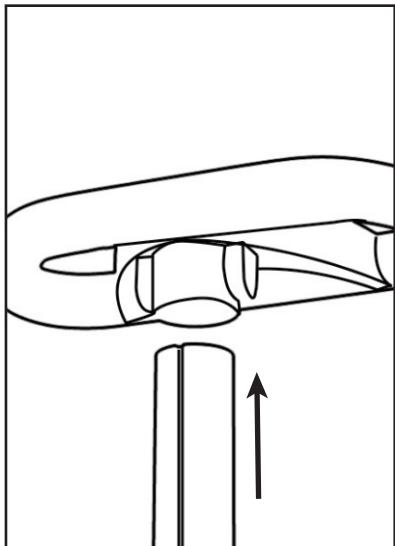


Insert while aligning the groove with the stopper slot.

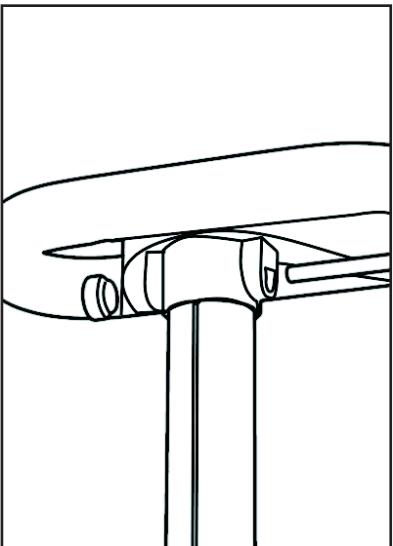


Align the screw with the nut and tighten.

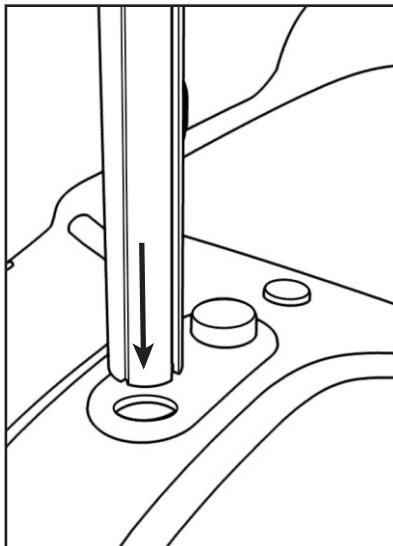


Insert the rod into the groove.

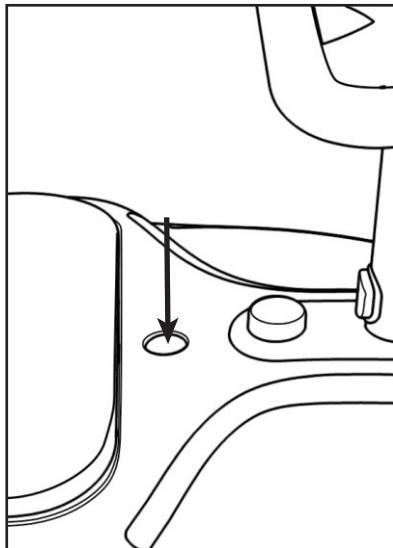


Press the switch to lift the seat.

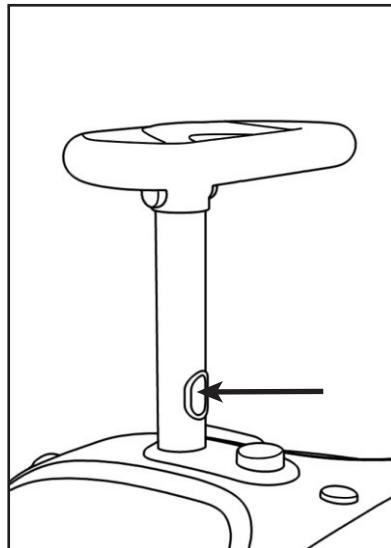


Press the button to disconnect
the steering rod.

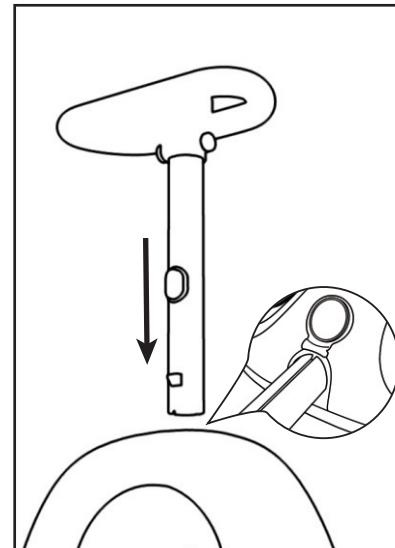


Align the rod with the groove
and insert.

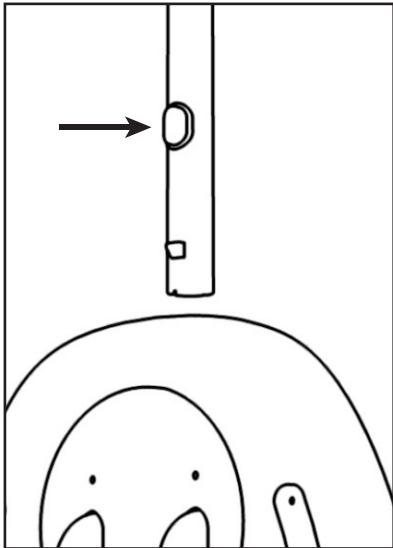

Press the button to disconnect the rod.

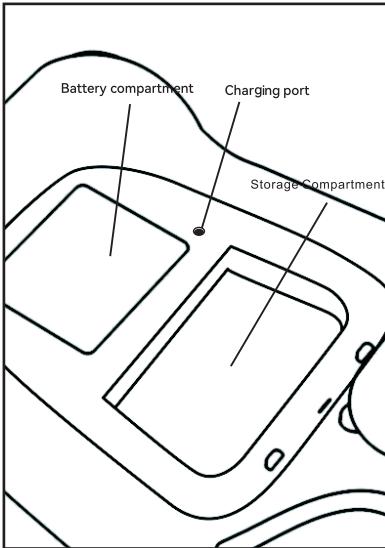


Underneath the seat cover.

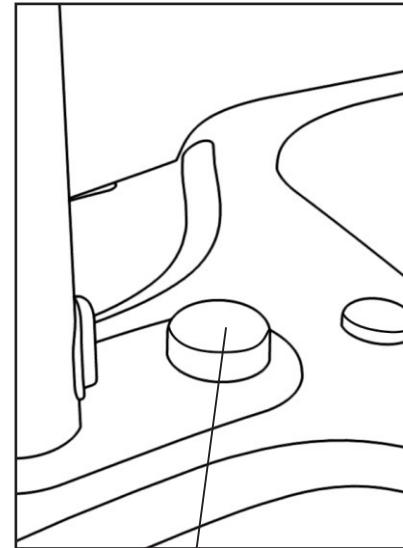


Power Button Instructions:

- Press and hold the power button for 3 seconds to turn the device on.
- The device starts at low speed by default
- Press once for medium speed. A voice prompt will say, "Medium speed."
- Press again for high speed. A voice prompt will say, "High speed."
- Press and hold again to turn the device off.
- The unit will automatically shut off after 5 minutes of inactivity.

SPEED & LIGHTING CONTROL INSTRUCTIONS

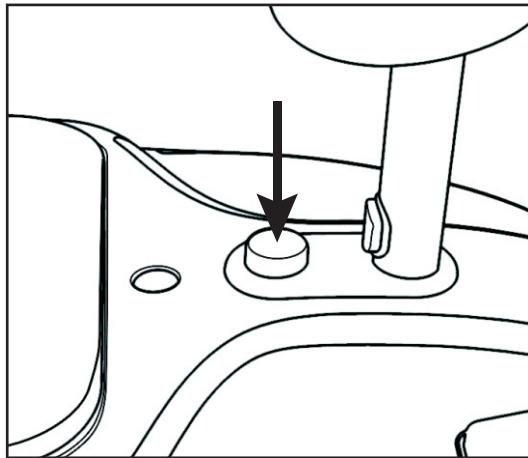


1. Press and hold the power button for 3 seconds to power on.
2. Press once for medium speed. A voice prompt will say "Medium speed".
Speed: 3.2 mph
3. Press again for high speed. A voice prompt will say "High speed."
Speed: 5 mph
4. Press and hold the power button to turn off. The ambient light will flash once, indicating the device is shutting down.

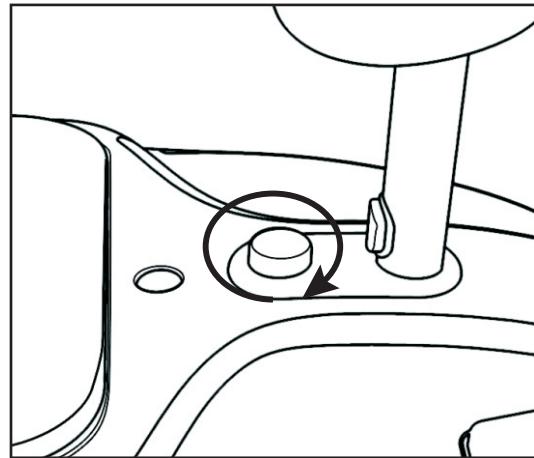

Ambient Light Control:

- When the device is turned on, rotate the power button in any direction once to activate the ambient light.
- Rotate the button once again to switch to another lighting mode. Continuous rotations will cycle through various lighting options.
- To turn off the ambient light, simply rotate the button once in the opposite direction.

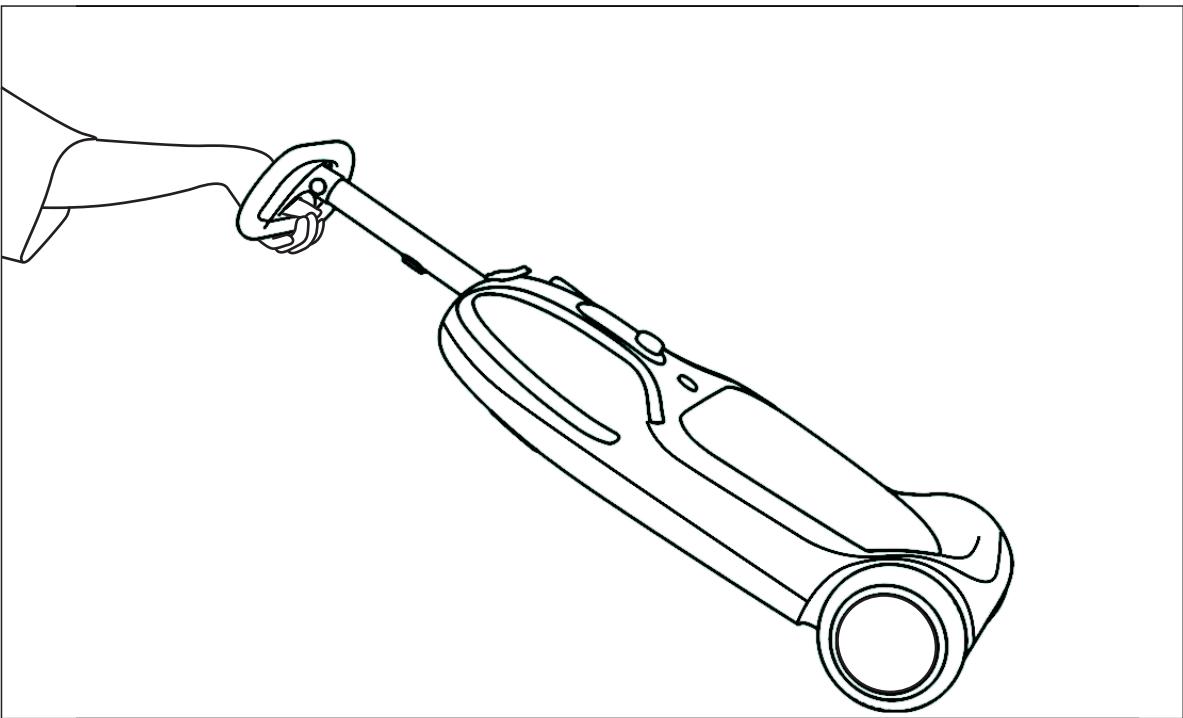

MAINTENANCE:

To ensure safe use and prolong the lifespan of the Go-Kart, regular maintenance is essential:

1. Apply grease or lubricant to all moving parts regularly.
2. Do not store or use the Go-Kart in damp, cold, or high-temperature environments for extended periods.
3. Regularly check for loose screws or damaged components.
4. During assembly and use, ensure all parts are securely and correctly installed.
5. Clean the Go-Kart periodically. Do not wash metal parts with water—use a soft, damp cloth instead.

WARRANTY LIMITATIONS:

This warranty covers defects in materials and manufacturing, in accordance with local warranty laws. During the warranty period, the manufacturer will determine whether to repair or replace the product.

Please note:

- * Damages resulting from improper use, incorrect assembly, operational errors, or normal wear and tear are not covered under this warranty.

Warranty Claim:

- * A valid proof of purchase is required to submit a warranty claim. Please store the warranty card in a safe place.
- * If a warranty issue arises, the manufacturer and dealer will collaborate to determine whether to repair or replace the product.
- * This version ensures clarity and smooth flow of information.

Federal Communications Commission(FCC) Compliance Statement for USA

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver,

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Responsible party information:

Aigo Global Inc.

Address:3090 Bristol St, Suite500 Costa Mesa,CA 92626, USA

Tel:+1 657 643 2220