

快速指南 Quick Start Guide



开机：请同时长按左边与右边眼镜腿触摸位5秒（提示音：开机、组对成功）；眼镜停止充电时自动开机（提示音：开机）。

POWER ON: Please press the touch positions on the left and right glasses legs for 5 seconds at the same time. (Prompt tone: Power on and paired) Automatic power on when glasses stop charging. (Prompt tone: power on)



long press the touch positions on the left and right for 5 seconds



关机：请长按左边或右边眼镜腿触摸位6秒；眼镜蓝牙关机（提示音：关机）；无蓝牙连接5秒后或眼镜充电时自动关机。

POWER OFF: Please long press the touch positions on the left or right glasses leg for 6 seconds. (Prompt tone: power off) Automatic shutdown after 5 seconds without Bluetooth connection or when glasses are charging.



please long press the touch positions on the left or right glasses leg for 6 seconds alone



蓝牙连接：

1. 眼镜开机，打开手机蓝牙，搜索设备名称M**并连接。
2. 眼镜与手机配对成功，提示音：连接成功。
3. 眼镜与手机断开连接，提示音：连接断开。

Bluetooth connectivity:

- Turn on the glasses, turn on the mobile phone Bluetooth, find the device name M** and connect.
- Glasses and mobile phone are paired successfully, prompt tone: Connection succeeded.
- The glasses are disconnected from the mobile phone, and the prompt tone: the connection is disconnected.



- 切换语言：未连接蓝牙状态下，单击左边或右边眼镜腿触摸位三下，切换成中文提示音，再单击三下恢复英文提示音。
- Language switch : Under the condition of Bluetooth disconnection, click the touch position of the left or right leg three times to switch to Chinese prompt tone or English prompt tone.



1. 接听电话：左/右镜腿双击触摸键接听。
2. 挂断电话：通话状态双击左/右镜腿触摸键挂断。
3. 拒接电话：来电状态长按触摸键左/右镜腿3秒松开。

- Answer the phone: double click the touch position on the left or right leg to answer.
- Hang up: double click the left or right leg touch position to hang up.
- Reject the call: long press the left or right leg touch position for 3 seconds to reject the call.




开启语音助手：待机或听音乐时，长按左/右镜腿2秒触摸键2声后松开。
关闭语音助手：执行语音命令后马上退出。

- Turn on the voice assistant: when in standby or listening to music, long press the left or right leg touch position for 2 seconds and release it for 2 times.
- Close voice assistant: exit immediately after executing voice command.



1. 音乐播放/暂停：双击左/右镜腿触摸键。
2. 上一曲：左镜腿三击触摸键接听。
3. 下一曲：右镜腿三击触摸键接听。

- Music play / pause: double click the left or right leg touch key.
- Previous song: three click on the touch position on the left leg.
- Next song: three click on the touch position on the right leg.

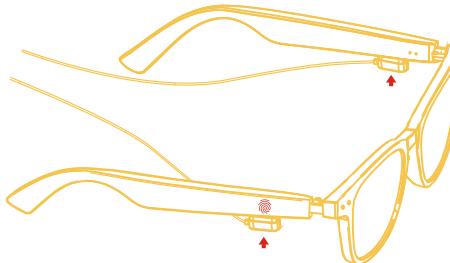

1. 眼镜无操作，手机蓝牙无连接状态5分钟自动关机。
2. 充电中：红色LED灯常亮。
3. 充满电：蓝灯30秒后并灭灯。

- Automatically power off if no operation of the glasses or no connection with bluetooth in 5 minutes.
- Charging: the red LED is on.
- Fully charged: blue light is on for 30 seconds and then turn off.

快速使用说明书

声明：
首先对您使用本公司的产品表示感谢！在使用本产品前，请务必仔细阅读并遵守以下注意事项，以确保设备在正常安全环境下展示最佳性能，并避免出现危险和不当操作。为了更好的服务，本用户手册的内容因为产品的性能和消费者发生的变更，将不另行通知。

提示：
1. 使用本产品前请仔细阅读说明书，并保留本说明书。
2. 首次使用，请先将产品充满电再使用。
3. 如果产品长期（超过两周）未充电，使用前请对产品充电。

警告：
1. 请勿以任何理由拆解或维修改装本产品，否则可能会导致起火、电击穿损至您损坏本产品。
2. 请勿将设备置于温度过高或过低的（-10°C以下或50°C以上）环境下。
3. 请勿将本产品接触液体或浸泡在液体里。
4. 请勿将本产品放在阳光下长时间暴晒或长时间放于高温车内，否则容易变形、镜片老化过快、电池爆裂等。

Introduction:
Thanks for choosing our product! Please carefully read this manual book before using so that the product can be used in the best way and avoid dangerous and illegal operation. It will not be advised if some contents of this manual book changed for a better function or performance.

Reminding:
1. Please carefully read this manual book before using and remain it for future consulting.
2. Please charge the product fully for the first time.
3. Please charge it before use when the product doesn't charge for a long time (more than 2 weeks).

Warning:

- 1. Do not dismantle or repair the product for any reason, or it will cause fire, electronic breakdown or a complete damage to the product.
- 2. Do not put the product in a temperature less than -10°C or above 50°C. The device may lost function when the temperature beyond the range.
- 3. The temperature range of charging is 10°C ~ 45°C. Charging adaptor is DC 5V. The max current of charging is 100mA.
- 4. The device uses unremovable battery built-in. Do not remove or replace the battery or cause damages.
- 5. Disconnect the power from the device and unplug the charger from the power socket after fully charged. Do not charge for more than 12 hours.
- 6. Do not throw the battery into domestic waste or may cause fire and explosion. Please deal with the device complying the local laws and regulations.
- 7. Do not disassemble the device and battery. Do not bump, squeeze the device or throw the device into fire. Please do not use the device if find a serious expansion.

QUICK TIPS

5. Do not put the charger's magnetic suction close to any metal or cause a short circuit.
6. Do not use water to clean the product or soak the product in the water for ultrasonic cleaning.

Important Information for safety and warning:
1. Fire, explosion or other hazards may be caused by using unapproved batteries, chargers and adaptors. Please use the accessories approved by the manufacturer or recommended by the device.

2. Please use the device under a temperature range -10°C ~ 50°C. The device may lost function when the temperature beyond the range.

3. The temperature range of charging is 10°C ~ 45°C. Charging adaptor is DC 5V. The max current of charging is 100mA.

4. The device uses unremovable battery built-in. Do not remove or replace the battery or cause damages.

5. Disconnect the power from the device and unplug the charger from the power socket after fully charged. Do not charge for more than 12 hours.

6. Do not throw the battery into domestic waste or may cause fire and explosion. Please deal with the device complying the local laws and regulations.

7. Do not disassemble the device and battery. Do not bump, squeeze the device or throw the device into fire. Please do not use the device if find a serious expansion.

8. In order to avoid hearing loss, please do not use high volume for a long time. Please comply with relevant laws and regulations. Do not use it in the dangerous and special environments such as gas stations, oil depots, chemical warehouses and the environments where flammable and explosive oil and gas or chemicals are stored; And the environments where wireless electronic devices are strictly prohibited such as hospital operating rooms, emergency rooms, etc. In order to avoid damage to the device and medical instruments, please keep away from pacemakers, hearing aids, cochlear implants and other medical equipment when using this equipment. Please keep a distance of more than 15 meters between the device and pacemakers.

9. Please consult with doctor or manufacturer when using device near medical equipment.

10. Please comply with all safety warnings and regulations regarding the use of this device while driving. Please do not use the device outdoors in thunderstorm to avoid lightning strike.

11. Do not use the charger in bathroom or the place with high humidity or cause electric shock, injury, fire and charger damage.

12. For the glasses with replaceable lens, please go to the optician's shop for professional replacement to avoid damaging the frame if need to replace the optical lens.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction