

FCC ID: 2BPSE-XF40H

Instructions for Power On and Off:

Power On: Press and hold the power button for 5 seconds. Wait patiently for about 20 seconds to enter the operation interface.

Power Off: Press and hold the power button for 7 seconds to display the power-off menu. By default, press the A button to turn off the device.

Note: Please exit the game before powering off.

Charging Instructions:

When the red light on the host is on, please charge it in a timely manner. Connect the charging cable to the DC interface for charging. When it is fully charged, the red light will automatically turn off.

Note: Do not press the reset button during the charging state. The charger must not exceed 5V2A.

Function Shortcut Combinations:

Fix System Bugs: L1+L2+R1+R2+(select*3)

Shortcut Combinations during the Game (except for PSP and NDS):

Save Game Progress: SELECT+R1

Load Saved Game Progress: SELECT +L1

Exit the Game: SELECT+START*2

Display FPS: SELECT+B

Pause the Game: SELECT+A

RA Menu: SELECT+X

Game Acceleration: SELEC+R2 (Hold to accelerate, release to stop accelerating)

Game Screenshot: SELECT+Y

Instructions for PSP Game Buttons:

PSP Menu: SELECT+B

PSP Save Game: Press SELECT+B to enter the PSP menu, select 1.settings > 2.system > 3.Auto loadsavestate > 4.slot 1> 5. Back > 6. save state for successful saving >7. Exit to menu to exit.

Instructions for NDS Game Buttons:

Press R2 to switch between vertical and horizontal screen display.

Press L2 to display the full-screen switch.

Press the right joystick: Use the stylus to click.

Press the left joystick: Enter the game background menu.

How to Unlock the Child Mode?

Press the START key, select UNLOCK USER INTERFACE MODE, press A, and press AAABA in sequence to unlock it.

How to set up a WiFi connection between two machines?

1. ①Insert the adapter first. ②Press the start key in the main interface to enter the setting interface, find the network setting to connect an available wifi. ③Record the IP address for later use, and then find a double game. ④Enter the game interface and press "select"+“X” key to enter the setting interface and then press the “B” key. ⑤Find host to start the network game. ⑥At this time the first console is set up.
2. The other machine also needs to plug in the adapter first to connect to wifi, after the connection is successful, find the same game to enter the game interface, and press “select”+“X” to enter the setting interface and then press “B” key. ①Find “connect to Netplay host”. ②Enter the IP address of the first host press the “X” key to enter the game. ③At this time the two hosts show the same screen indicates that the connection is successful, select the double mode to enter the game.

How to Switch the Emulator Core?

If the game cannot run, the main reason is that the emulator core does not support the game, which can be solved by changing the emulator core. Please select the game name with an error in the game list, hold down the "A" key for two seconds, select the second-to-last item "Advanced Game Options", and try to change the first item "Emulator" to a different core. If all the cores in the list cannot run the game, there may be a problem with the game ROM. Please provide feedback to me so that I can correct it!

Core Selection Suggestions:

- (1) CPS1, 2, 3: Give priority to the FBAlpha2012 core, followed by the FBNeo core and other FBA cores;
- (2) FBNeo: Give priority to the FBNeo core, followed by FBAlpha2012 and other FBA cores;
- (3) MAME: Give priority to the FBNeo core, followed by MAME2010, and then other cores;
- (4) GBA: MGBA supports shortcut combinations, and GPSP supports game modification.

How to Set Global Settings, Single Emulator Settings, and Single Game

Settings?

EE has three methods for setting games. The first is the global settings: Set it in the "Game Settings" section of the ES menu; the second is the emulator settings: "Game Settings-PERSYSTEMADVANCED CONFIGURATION" corresponds to different models; the

third is the single game settings. Press and hold the A button on the game name and set it in the "Advanced Game Options" that appears. Note the priority: Individual game settings > Emulator settings > Global settings.

How to Change the Theme?

Press START to pop up the selection menu, select User Interface Settings, press A to enter the settings: Background Theme, and switch to the theme you like.

Adjustment of the Game Display Aspect Ratio:

- (1) Press START to pop up the selection menu, select Game Settings, press A to enter the settings, pull down to select the game screen aspect ratio, and select the appropriate screen aspect ratio.
- (2) X/Y: Select according to the screen resolution. For example, if the resolution is 720x720, it is exactly a 1/1 ratio. If the "Game Display Aspect Ratio" is set to 1/1, all games will basically be displayed in full screen (some games have black edges by themselves and cannot be fully displayed).
- (3) CORE PROVIDEO: The default resolution of the emulator core corresponds to the default resolution of the game model. This setting can ensure that the game screen is fully displayed according to the original ratio without distortion. For example, if an arcade vertical shooting game is displayed horizontally, it will be stretched to full screen in the X/ mode, resulting in serious screen distortion. However, using COREPROVIDEO can ensure that the original ratio remains unchanged. Also, for GB and GBC games, if you use X/Y full screen, they may be seriously distorted.

How to Add a Game to the Favorites?

Select the game you want to collect in the game list, hold down the A key to pop up a menu, select Add to Favorites, press the A key to confirm, and the selected game will be added to the favorites list.

How to Adjust the Screen Brightness?

Press the START key to pop up the selection menu, select System Settings, press the A key to enter the System Settings menu, select Brightness. The left key of the directional pad is to decrease the brightness, and the right key of the directional pad is to increase the brightness.

How to Convert the Language?

Press the start key to pop up the selection menu, select System Settings, Language, press A to enter the language selection, select the language suitable for you, press A to confirm.

Changing the language requires a restart. After selection, return to the previous menu, enter the exit option, and select Restart.

How to Set the B Side in an fds Game?

Some fds games require setting the B side to start. If you open the game and are prompted to set the B side, press L1 to set the B side, and the game will load normally.

How to Add a Game?

Insert the TE card into the computer, enter the disk named EEROMS, put the downloaded game into the corresponding emulator folder, put the game image into the media/screenshot folder, and then find the file named gamelist.xml. You can choose to open it with Notepad, add the newly added game to the list by imitating the existing game information, and then save it. Eject the TF card from the computer, insert it into the device, start it, and the newly added game will appear. (If the EEROMS disk is not displayed on your computer, select This PC on the desktop, right-click, select Manage, Disk Management, scroll down to this disk, select it, right-click, and assign a drive letter to it.)

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.