


157G铜版纸双面印刷风琴折页

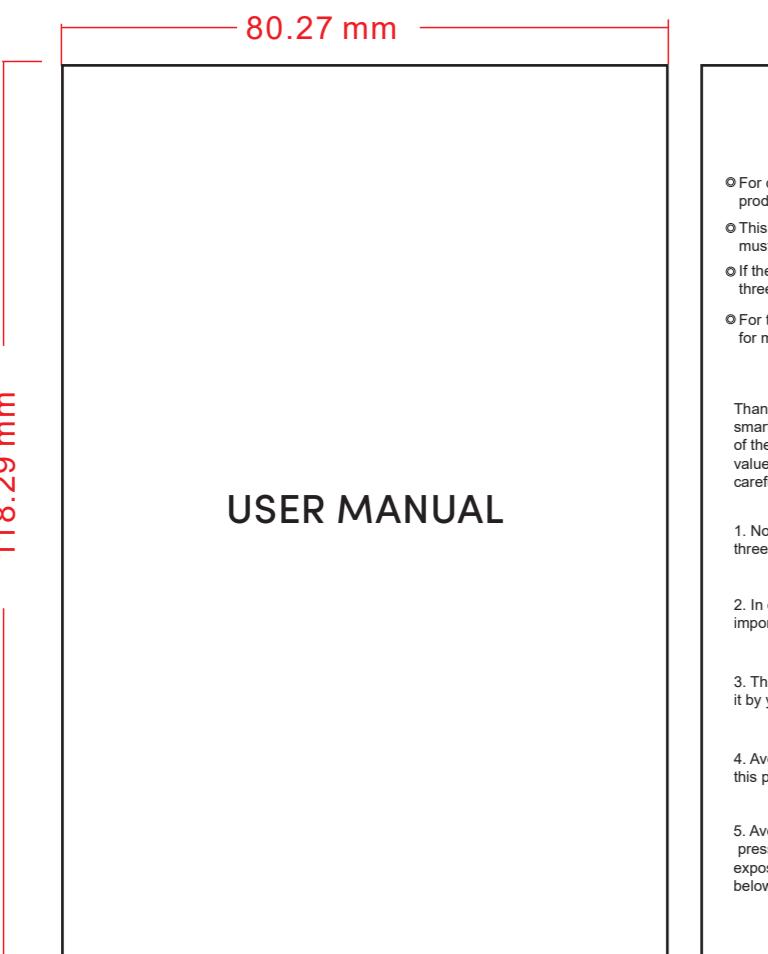

Charger Adapter Requirements

- For charger adaption, please refer to the input voltage/current value of the product description .
- This product only supports chargers of the above specifications, and the charger must comply with the United States national standard.
- If the machine is not used for a long time, please charge for the machine once in three months and fully charge it then turn it off and place it.
- For the machine that has been placed for a long time, it needs to be pre-charged for more than 30 minutes the electric state will be show.

Precautions

Thank you for purchasing our product! This product is installed with an Android smart operating system. This user guide briefly introduces the various functions of the product, allowing you to operate freely and fully appreciate the value-added enjoyment this product brings to you. Please read this user guide carefully before using it.

- Note that the new battery can reach its best performance only after twice or three time full charge and discharge cycles.
- In order to prevent data loss, it is recommended that users regularly back up important data, especially before firmware upgrades or product repairs.
- This product is a high-precision electronic product, please do not disassemble it by yourself.
- Avoid strong beating, water droplets and water splashing, and collision with this product.
- Avoid using this product in the following environments: high temperature, low pressure, low temperature, humidity, dust, strong magnetic field and long-term exposure to sunlight. We recommends that you use this product in an environment below 3000 meters above sea level, 0° to 35°C, and humidity of 5% to 95%.

6. Please use the batteries, chargers and accessories allowed by the manufacturer. Using any other types of accessories will violate the warranty regulations and may be dangerous.

◆ The nominal battery life of this product refers to the longest battery life that can be achieved under the minimum power consumption environment. The actual battery life may vary due to usage and environment (such as turning on WiFi, Bluetooth, screen brightness, volume) and other factors, and there are also slight differences in individual products.

◆ The reasons for the difference between the nominal disk capacity of this product and the actual capacity are as follows:

- The error caused by the calculation algorithm: the hardware manufacturer calculates according to $1MB=1000KB$, while the software calculates according to $1MB=1024KB$. For example, for a product with a nominal 8GB hardware, the capacity recognized by the software is $8*1000MB=1000B/1000B/1024MB/1024KB/1024B=7.45GB$, so there will be a calculation error of 0.55GB. The larger the capacity of the product, the algorithm error The bigger it is.
- The Android operating system will take up part of the disk space.

◆ The nominal battery capacity of this product is calculated by calculating the amount of charge in the actual charging and discharging process, using third-party tools to detect the battery capacity, due to current fluctuations, there will be large errors, so it is not used as a criterion.

First boot guide

This guide will help you quickly select language, time zone, set up WiFi network, user and computer name and other information. You can follow the prompts in the guide and set user-friendly settings to open your value experience.

Button definition

◆ Power button:
In the shutdown state, press and hold the power button for 3 seconds to turn it on.

6. In the power-on state, short press the power button to turn off the screen and sleep, and short press the power button again if the screen needs to be activated.

In the power-on state, long press for 3 seconds to enter the shutdown prompt interface, long press for 10 seconds to force power off.

Bluetooth connection

- Click the "Settings" function to enter the setting list interface, click to select the "Bluetooth" menu;
- Media Volume: Swipe the progress bar to adjust the volume of media;
- Call volume: Swipe the progress bar to adjust the volume of call ringtone;
- Notification volume: Swipe the progress bar to adjust the volume of notification sound;
- Alarm volume: Swipe the progress bar to adjust the volume of alarm;
- Other prompt sounds: you can turn on or off the screen lock prompt and touch prompt;

Virtual button

HOME button Click to return directly to the main interfaceBack button Click to return to the previous interfaceBackground key Click to view, switch, and close background programs Menu key Swipe up to bring up menu options

Display setting

Click the "Settings" function to enter the setting list interface, click to select the "Display" menu

- Support setting multi-screen;
- Manage functions such as synchronizing data for existing accounts.

Drop down notification bar

User Click to quickly switch the current user Settings Click to quickly call up the system settings Wi-Fi Click to quickly turn Wi-Fi on or off Bluetooth Click to quickly turn Bluetooth on or off Do not disturb mode Click to quickly turn on or off the do not disturb

◆ The nominal battery capacity of this product is calculated by calculating the amount of charge in the actual charging and discharging process, using third-party tools to detect the battery capacity, due to current fluctuations, there will be large errors, so it is not used as a criterion.

Wi-Fi wireless connection

- Click the "Settings" function to enter the setting list interface, and click to select the "Network & Internet";
- Slide the switch to turn on the Wi-Fi function, and the system will automatically scan the Wi-Fi hotspot signal of the accessory;
- Select and click the Wi-Fi signal that can be connected, enter the corresponding password, and click "Connect".

Startup mode

- Screen lock mode: You can select the screen lock mode of sliding, pattern, PIN code, and password respectively;
- Display size: Make the items on the screen smaller or larger. Some apps on the screen may change position.
- Charge the tablet for more than 30 minutes, and then press to turn it on.

Sound settings

Click the "Settings" function to enter the setting list interface, click to select the "Sound" menu;

- Pair new device", and the system will automatically scan the Bluetooth signal of the accessory;
- Third-party applications: uninstalled
- System application cannot be installed

User

Click the "Settings" function to enter the setting list interface, click to select the "Users" menu

- Add account: You can add accounts for applications in the system;
- Manage functions such as synchronizing data for existing accounts.

Location information

Click the "Settings" function to enter the setting list interface, and click to select the "System" menu, select "Advanced", select "Reset options".

- Swipe the switch to turn on or off the positioning function;
- If the personal computer is a Windows 7 or higher operating system, the computer will automatically install the MTP driver when it is connected to the computer for the first time;
- If the personal computer is a Windows XP operating system, before connecting to the computer, the system must install Windows Media Player 11 to support the connection.

Connect to the computer

The product of this machine can be connected to a personal computer via a USB cable to perform data copy or delete operations.

- Swipe the switch to turn on or off the positioning function;
- If the personal computer is a Windows 7 or higher operating system, the computer will automatically install the MTP driver when it is connected to the computer for the first time;
- If the personal computer is a Windows XP operating system, before connecting to the computer, the system must install Windows Media Player 11 to support the connection.

Security Settings

Click the "Settings" function to enter the setting list interface, click to select the "Security" menu

- Automatic rotation: you can set to lock the current screen orientation, or automatically rotate the screen orientation according to the device orientation.
- Font size: The size of the font displayed by the system can be set;

Can turn on the phone, can't charge

- There is a small hole next to the power button, poke it with the tip of your teeth, and then press and hold the power button for ten seconds to turn it on.
- Device application management: Can set whether to allow the installation of local applications.

Language and input method

Click the "Settings" function to enter the setting list interface, click to select the "System" menu.

- Language: the system language can be switched;
- Input method: You can set the system default input method and set the function of each input method;

Account management

Click the "Settings" function to enter the setting list interface, click to select the "Accounts" menu.

- Add account: You can add accounts for applications in the system;
- Manage functions such as synchronizing data for existing accounts.

Reset

Click the "Settings" function to enter the setting list interface, and click to select the "System" menu, select "Advanced", select "Reset options".

- Restoring factory settings will erase all user data, programs, local data, etc., please pay attention to back up.

Date and time

Click the "Settings" function to enter the setting list interface, click to select the "System" menu, and select "Date and Time" menu.

- Automatically determine the date and time: Swipe to open the function, which can realize the system automatically synchronizes the date and time when the system is connected to the network. Swipe to close function, can realize manual setting of date and time;
- Automatically determine the time zone: Swipe to open the function, which can realize the automatic synchronization of the time zone when the system is connected to the network. Swipe to close function, can realize manual setting of time zone;
- Use 24-hour format: Swipe to open the function, the time can be displayed in 24-hour format;
- Use 12-hour format: Swipe to open the function, the time can be displayed in 12-hour format.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

Specific Absorption Rate (SAR) information:
This IDS-2000 Monitor (120SA-L) meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement: The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 10mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.