


QUICK REFERENCE GUIDE

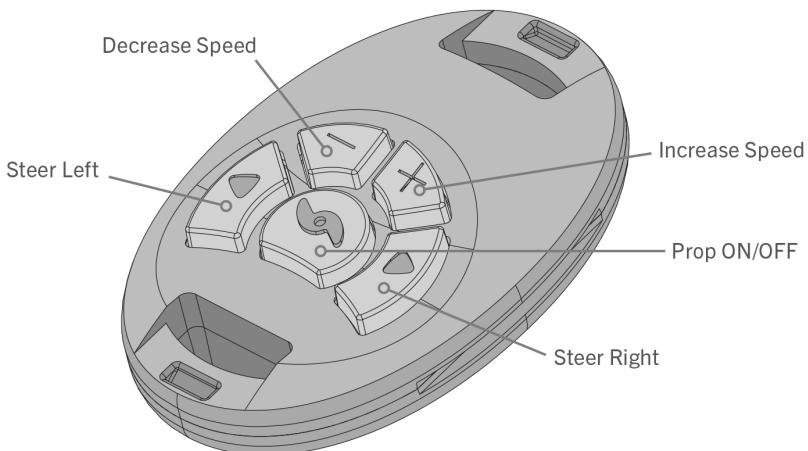

BUTTONS

Prop ON/OFF - This button is located in the middle of the remote. It turns the Prop on or off. Press the button once to turn the Prop ON; press the button a second time to turn it OFF. The button does not need to be held down.

Steer Left & Steer Right - These buttons are located to the right and left of the Prop ON/OFF button and have an arrow symbol. They cause the motor to turn in the desired direction as long as the button is held down. If the Steer Right or Steer Left button is held for more than seven seconds, the steering will automatically stop until the button is pressed again.

Increase Speed & Decrease Speed - The Increase Speed and Decrease Speed buttons are located above the Prop ON/OFF button and are identified with a positive and negative symbol. Pressing and releasing these buttons causes the speed to increase or decrease by increments of 1. The speed is adjustable from level 0-10. At level 0, the prop will be ON, but not turn.

ADDING REMOTES

To “learn” the ID number of additional remotes, follow these steps:

1. Using a small, blunt object such as a pen or screwdriver, press and hold the Learn button located on the side of the receiver. The receiver will emit a continuous tone.
2. Press any button on the remote. The receiver will beep 4 times confirming that it has “learned” the remote successfully.

NOTE: Receiver can store up to 10 different remotes. “Learning” the same remote will not overwrite previously “Learned” remotes.

FCC Caution:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.