

# Model Name: 893max

## Garage door remote control

### Step 1: Identify Color of Button

Locate the opener hanging in your garage and identify the color of the learn button on the back.



### Step 2: Programming Initiation

Press and hold buttons **III** and **II** until the LED Flashing 4 times (Execute Step3 immediately).



### Step 3: Choose Code Type

Choose the button you want to program and press it 1-4 times according to the color of the learn button.

Learn Button Color	Number of Presses
Yellow	1
Purple	2
Orange	3
Red	4
Green	



### Step 4: Confirm

Press any button on the remote (except the one chose in step 3) to Confirm, then the LED will turn off.

### Step 5: Garage Door Opener Learning

Press the learn button on the back of opener, after the learn LED glow steadily, press & hold the remote button you chose in step 3 until the opener lights flash or 2 clicks are heard, then the remote is programmed.



**Warm Tips:** Try instructions for a different color of learn button  
When this remote cannot work with your garage door opener.

## Troubleshooting

### I cannot program this remote to my garage door opener.

**Solution 1:** Make sure your garage door opener is manufactured by the Chamberlain Group, and it has a yellow, purple, orange, red or green learn button.

**Solution 2:** Be sure to press any button other than the remote button for confirmation after performing step 3.

**Solution 3:** Make sure the Learn LED glow steadily when performing step 5.

**Solution 4:** Your garage door must be closed before you start to program remote, otherwise programming maybe failed.

**Solution 5:** Try to program the remote using other button of the remote.

**Solution 6:** Please get close to your garage door opener when you first program this remote.

**Solution 7:** Maybe the memory of the opener is full, please clear it then program again.

### It worked well but stopped working after a few weeks.

**Solution1:** Replace a CR2032 Lithium Battery when remote stops working after a few days.

**Solution2:** Try to long press the remote button and wait for the opener to engage before letting go.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.