

D Press the [MODE] button for the fourth time to enter the pause duration (intensity setting). Adjust the pause time by pressing the [UP/DOWN] buttons. Each press adjusts the duration by 5 seconds, the maximum value being 600 seconds and the minimum value being 20 seconds.
 ## After setting this, you can enter the next group of mode settings as needed, or you can continue pressing [MODE] to return to the LCD home page if not needed.

7 MAINTENANCE AND UPKEEP

Scent diffusers require regular cleaning and maintenance every 1-2 months when in normal use. Below is the method for cleaning.

Spray nozzle cleaning:

- * Use 95% "alcohol + cotton swab" to gently wipe the nozzle, removing the residue of essential oil liquefaction
- * Cleaning the atomizer core can be cleaned by soaking a cotton swab in 95% alcohol and wiping the core with it, or by soaking the atomizer core in alcohol and then allowing it to dry.


Oil bottle cleaning:

- * Before changing essential oils each time, clean the oil bottle with alcohol and allow it to dry completely.
- When equipment is not used for a long period, it is necessary to clean the internal nozzles and other components thoroughly.
 - * Add 95% industrial alcohol to the empty bottle.
 - * Turn on the device and run it for 10-15 minutes.
 - * Turn off the device, pour out the alcohol from the bottle and let it dry before reassembling the device.
 - * Power off storage, unplug the power supply, to prevent electrostatic damage to the circuit.

6 REPLACE THE ATOMIZER CORE

The atomizer head assembly is divided into: atomizer head, essential oil bottle, oil suction tube, filter and atomizer core.

Operation steps: First, unscrew the essential oil bottle, pull out the oil suction tube, and remove the atomizer cover with a holding tool like tweezers. The white part on top is the atomizer core. Wipe the essential oil dry with a dry cloth, then pinch the atomizer core and unscrew it to the right to

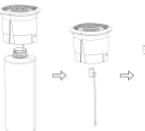

remove it. Next, replace it with a new atomizer core, and then reassemble all parts back into the device.

Hint: Please pay attention to aligning the oil tube with the atomizer core hole inside the atomizer cover when reinserting it, and ensure all components are tightened to prevent detachment.

PACKAGING ACCESSORIES

Aroma device × 1, Power cable × 1, Gasket × 1, Replacement atomizer core × 1, Magnetic card × 1, User manual × 1, External connecting tube × 1, Wrench × 1, Quick-connect fitting × 1

8 WARRANTY POLICY

Replacement/Maintenance is guaranteed for one year from the date of purchase.

If you need to replace components for free within the warranty period, the device must be under normal use conditions and the failure must be due to manufacturing reasons to provide warranty. During the warranty period, component fees covered by the warranty are waived. This warranty does not include consumables such as oil. To obtain warranty service, please be sure to contact the after-sales department during the warranty period and present the original or copy of the valid warranty card and the official commercial invoice to the relevant departments.

The following situations do not enjoy free warranty service:

- ① Damage & problems caused by Accidents & Fire!
- ② Not used properly and wrong operation.
- ③ Repaired by non-professionals, causing some parts damaged.
- ④ Damaged during transportation.
- ⑤ Without our warranty card.
- ⑥ Without proper cleaning for a long time.
- ⑦ The machine is overworked.
- ⑧ Machines & Parts not from us.
- ⑨ Machines not purchased from official channels.
- ⑩ Send the machines back without permit from the manufacturer.



SAFETY PRECAUTIONS FOR USE

Safe use:

- After loading the essential oil, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.
- During the transportation of the equipment, it is necessary to empty the essential oils from the bottles to avoid oil leakage and damage to the equipment.
- This device cannot be used for air humidification and cannot be filled with water;
- Please place it in a location inaccessible to children and pets.
- Store in a dry and cool place, do not use this device in high temperature or humid environments.

Forbidden:

- Do not cover the equipment in use.
- Prohibit the use of overloaded power outlets, power cords, or damaged power plugs, as this may damage equipment or even cause fires.
- Essential oils should not be ingested and should be kept away from contact with the eyes. In case of eye contact, rinse thoroughly with plenty of water; if there is a strong sensation, seek medical attention immediately.
- Please do not disassemble the equipment. If any abnormalities are found in the product, please contact us promptly.


User Manual

Smart
Scent Diffuser

XX

Screen Version

Scent machine

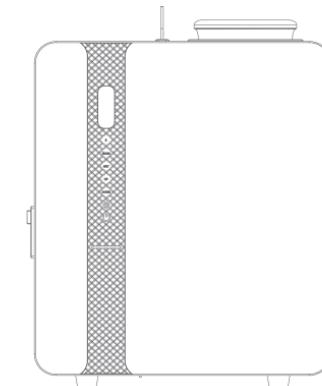


[Please read the manual carefully before use]
and keep it properly

This device is designed for simple and convenient operation. Please read the instructions carefully and follow the user manual.

1

INSTALLATION

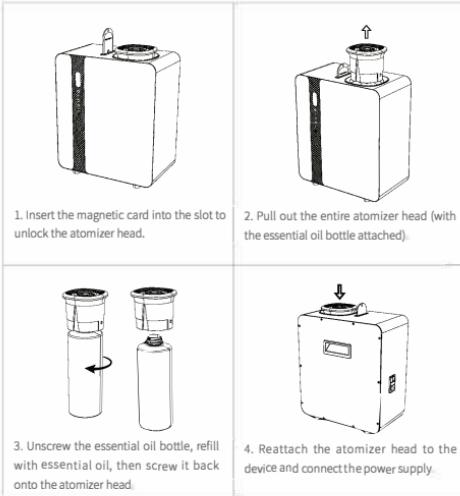

PRODUCT INFORMATION

Size: 296×162×355mm	Weight: 7Kg	Power: 25W
Voltage: AC 100-240V	Capacity: 1000ml	Coverage: 5000-8000m ²

01

2

DISPLAY SCREEN/LIGHTS/BUTTONS

	Backlight: The backlight and button lights remain on when powered on. Returns to home screen after 15 seconds of inactivity.
	Bluetooth Indicator: Blue light: Bluetooth connection successful. Off: Bluetooth disconnected. Blue flashes twice: Bluetooth receives data from the app.
	Parameter Switching Button: Mode settings, working frequency, and page navigation.
	Settings Button: Configures time, day of the week, etc.
	Increase Buttons: Adjust numerical values.
	Decrease Buttons: Adjust numerical values.
	Fan Switch: Blue button light: Fan function on. Red button light: Fan function off.
	Start/Pause Button: -Blue button light: Operation started. -Red button light: Operation paused.
	Essential Oil Level Indicator: Green: "High" oil level. Yellow: "Medium" oil level. Red: "Low" oil level.

02

3

APP CONTROL (BLUETOOTH MODE)

After Bluetooth connection, the device immediately switches to Bluetooth mode and operates according to the Bluetooth settings:

Scan the QR code with your phone to download and install the "Art Diffuser" APP → Go to the page → Select "Start Adding" → Go to the "Search and Connect" page, search for and connect to the device.

Note: It is recommended to allow all APP permissions, including location services, Bluetooth connection, and sending notifications.

All devices | Available devices within the phone's Bluetooth range are displayed in the "All Devices" group, click on any device icon to connect to that device, after successful connection, it will jump to the device details page.



My Devices | Devices that have been connected are displayed in the "My Devices" group, devices not currently within Bluetooth range are shown in gray.

Device Status Page:

-Toggle: The phone can turn the device's operating status on/off with one click.

-Factory Reset: The phone can reset to factory settings with one click.

-Working Mode: Click "Add" to create up to 5 working modes, click the switch button in the upper right corner of the mode window to turn the mode on/off, long press the mode window to select delete mode, click the mode window to customize and edit days of the week, time periods, and frequency.

Day Setting | Select the desired days.

Time Period Setting | Adjust the dial to select the working time period.

Note: If the time period needs to cross 00:00, it must be set as two consecutive time periods (the end time cannot be less than the start time), for example, 23:00-02:00, set as two groups: 23:00-23:59, 00:00-02:00.

Frequency Setting | Adjust the dial to select the working frequency.

Operating time range: 1~30 seconds; Pause time range: 60~500 seconds.

4

SYSTEM TIME SETTINGS

-Press the [SET] button for the first time to enter the hour setting.

The hour digits will flash, adjust the hour time by pressing the [UP/DOWN] buttons.

-Press the [SET] button for the second time, the hour is confirmed and set, and move to the minute setting.

The minute digits will flash, adjust the minute time by pressing the [UP/DOWN] buttons.

-Press the [SET] button for the third time, the minute is confirmed and set, and move to the workday setting.

The workday digits will flash, adjust the workday time by pressing the [UP/DOWN] buttons.

-Press the [SET] button for the fourth time, confirm that the system time setting is complete.

3

WORKING MODE SETTINGS

A First, press the [MODE] button, the LCD display shows the factory setting time, this machine can set 5 working modes. For example: set 8 am-10 am, 11 am-12 pm, 1 pm-2 pm. Crossing over 00:00, set two time periods, such as the first period 08:00-23:59, the second period 00:01-06:00.

The first time you press the [SET] button, you enter the start time setting for the first time period, the hour digits flash, and you adjust the hour by pressing the [UP/DOWN] buttons.

Press the [SET] button for the second time, the hour setting is completed. The minute digits flash. Adjust the minute by pressing the [UP/DOWN] buttons.

Upon the third press of the [SET] button, the minute setting is completed, and move to set the work day. Pressing the [UP] button once will display the symbol "▲" at the top of the LCD screen in the day of the week column, indicating that the workday is selected. If "▲" is not displayed, it means it is not selected. Then press [DOWN] to move right and continue setting other day combinations.

B Press the [MODE] button for the second time to set the off time.

The first press of the [SET] button enters the setting of hour, adjust the hour by pressing the [UP/DOWN] buttons; the second press of the [SET] button completes the hour setting, and the minute digits begin to blink, adjust the minute by pressing the [UP/DOWN] buttons.

C Press the [MODE] button for the third time to enter the spray duration (intensity setting). Adjust the intensity by pressing the [UP/DOWN] buttons, select the appropriate intensity, with each press adjusting the duration by 5 seconds, the maximum value is 200 seconds, and the minimum value is 5 seconds.

03

04

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.