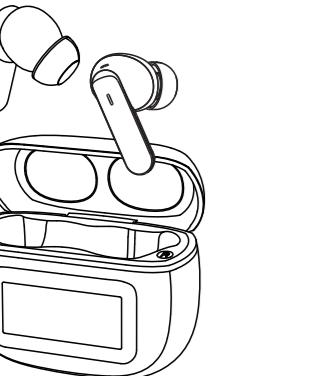
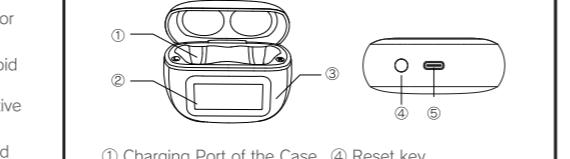
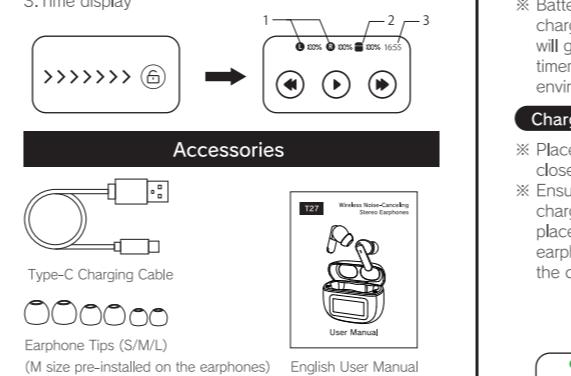
 


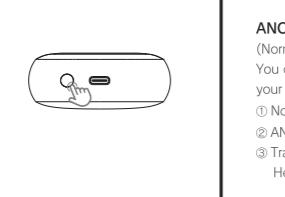
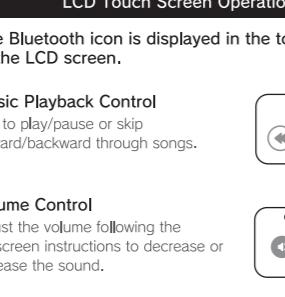
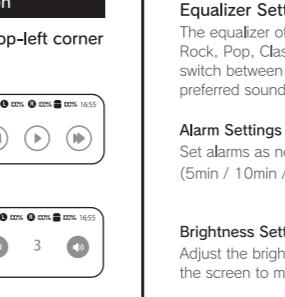
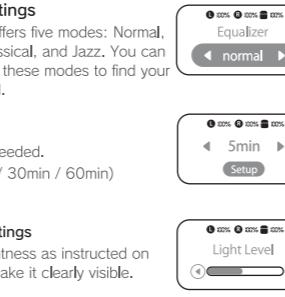
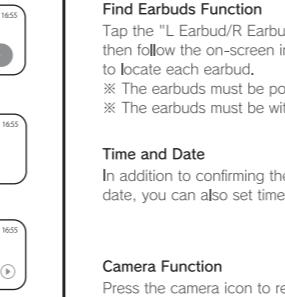
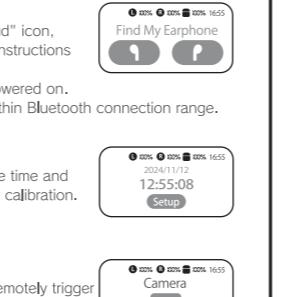
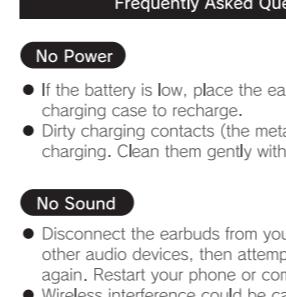
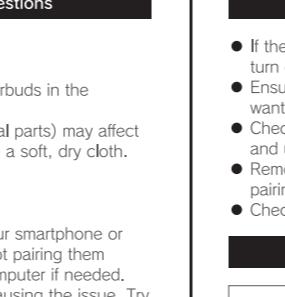
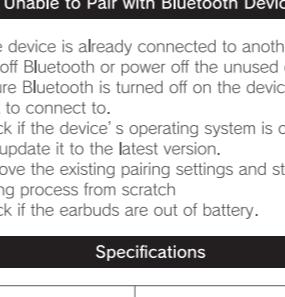
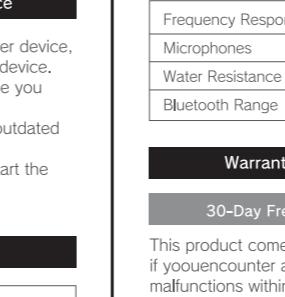
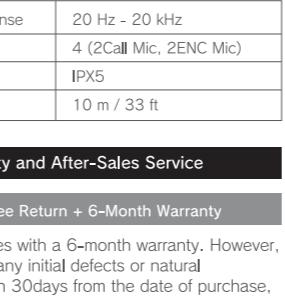
T27 英 说明书

尺寸: 65*80 mm

材质: 80g铜版纸

折叠方式: 风琴二十二折页

<p>T27 Wireless Earbuds</p>  <p>User Manual</p>	<p>Personal Precautions While Using</p> <p>To prevent accidents, please adhere to the following guideline. Carefully read the manual and use this product safely.</p> <ul style="list-style-type: none">To protect your hearing, do not use this product at high volumes for extended periods.Always use manufacturer-approved installation components, accessories, and replacement parts.Do not open the casing of the product without authorization. Unauthorized modifications void the warranty.Avoid subjecting the product to strong impacts or pressure.Use the product only under the operating conditions specified in the technical data.Keep liquids and conductive objects away from the product and its connection ports.When unplugging the charger, hold the plug instead of pulling on the charging cable.This product may interfere with hearing aids, pacemakers, other medical devices, fire alarms, automatic doors, and other automated control systems. Avoid using this product near such equipment to prevent malfunctions or accidents. <p>Regarding Lithium-Ion Rechargeable Batteries</p> <ul style="list-style-type: none">Do not disassemble, open, or crush secondary cells or batteries.	<p>Product Overview</p> <p>Charging Case:</p>  <p>Accessories:</p>  <p>LCD Touch Screen</p>  <p>Charging Instructions</p> <p>Before the first use, please fully charge the product using the included Type-C cable.</p> <p>1. Remaining battery display of the earphones 2. Remaining battery display of the charging case 3. Time display</p> <p>Charging the Earphone Case</p> <p>Connect the Type-C cable to the charging case's Type-C port.</p> <p>Plug the charging cable into a USB port on your computer, or use a commercially available USB-compatible power adapter and connect it to a power outlet.</p> <p>Charging the Earphones</p> <p>Place the earphones into the charging case and close the lid.</p> <p>Ensure the earphones are correctly placed in the charging case. If the left and right earphones are placed incorrectly, the charging contacts on the earphones will not connect to the charging pins in the case, resulting in the earphones not charging.</p> <p>Low Battery Alert</p> <p>When the earphone battery level drops below 20%, you will hear a voice prompt saying "Battery Is Low, Please Charge." We recommend charging immediately. When the charging case battery level falls below 10%, the LCD screen will display a red battery indicator icon.</p> <p>Personal Precautions While Using</p> <p>Rotate the earphone body and insert it into your ear.</p> <p>Instruction Manual</p> <p>Power on</p> <p>Method 1: When the earbuds are removed from the charging case, you will hear the English prompt "Power on", and they will automatically power on Bluetooth pairing.</p> <p>Method 2: Press and hold the touch button (when disconnected) to manually turn on the earbuds. The Bluetooth icon (top-left corner of the charging case's LCD screen) will display a white symbol with an overlapping [X].</p> <p>Power off</p> <p>Method 1: Place both earbuds into the charging case and close the lid to automatically power them off.</p> <p>Method 2: Press and hold the touch button (when powered on but disconnected) to manually turn them off. You will hear the English prompt "Power off". You can place the earbuds back into the charging case. On your Bluetooth device's Bluetooth settings screen, select "T27" and disconnect, then restart the compatible device.</p> <p>Pairing</p> <p>Power on the earbuds, then go to the Bluetooth settings on your device → "Bluetooth" → "T27" from the device list.</p> <p>Once connected, you will hear the English prompt "Connected", and the Bluetooth icon in the top-left corner of the charging case's LCD screen will change to a white symbol.</p> <p>Reset</p> <p>If the connection is not working or you want to return to the initial state, follow these steps: When the left earbud is not paired, press the touch button on the left earbud five times. You will hear the English prompt "Power off", then place the earbuds back into the charging case. On your Bluetooth device's Bluetooth settings screen, select "T27" and disconnect, then restart the compatible device.</p> <p>The earbuds will automatically re-pair with the compatible device.</p>
--	---	--

<p>Earphone Operation Instructions</p> <table border="1"><tr><td>Left Earbud</td><td>Control Device</td><td>Right Earbud</td></tr><tr><td>Play/Pause</td><td>Tap Once</td><td>Play/Pause</td></tr><tr><td>Previous Track</td><td>Double Tap</td><td>Next Track</td></tr><tr><td>Answer/End Call</td><td>Double Tap</td><td>Answer/End Call</td></tr><tr><td>ANC</td><td>Triple Tap</td><td>ANC</td></tr><tr><td>Activate Voice Assistant</td><td>Press Four Times</td><td>Activate Voice Assistant</td></tr></table> <p>Charging Case Multifunctional Operations</p> 	Left Earbud	Control Device	Right Earbud	Play/Pause	Tap Once	Play/Pause	Previous Track	Double Tap	Next Track	Answer/End Call	Double Tap	Answer/End Call	ANC	Triple Tap	ANC	Activate Voice Assistant	Press Four Times	Activate Voice Assistant	<p>LCD Touch Screen Operation</p> <p>The Bluetooth icon is displayed in the top-left corner of the LCD screen.</p> <p>Music Playback Control</p> <p>Tap to play/pause or skip forward/backward through songs.</p>  <p>Volume Control</p> <p>Adjust the volume following the on-screen instructions to decrease or increase the sound.</p>  <p>ANC Mode Settings</p> <p>(Normal Mode / ANC Mode / Transparency Mode)</p> <p>You can select the optimal noise cancellation mode based on your usage.</p> <ul style="list-style-type: none">Normal mode: The default modeANC Mode: Cancels noise for better focus.Transparency Mode: Hear surroundings without removing earbuds.  <p>Equalizer Settings</p> <p>The equalizer offers five modes: Normal, Rock, Pop, Classical, and Jazz. You can switch between these modes to find your preferred sound.</p>  <p>Find Earbuds Function</p> <p>Tap the "L Earbud/R Earbud" icon, then follow the on-screen instructions to locate each earbud.</p>  <p>Frequently Asked Questions</p> <p>No Power</p> <ul style="list-style-type: none">If the battery is low, place the earbuds in the charging case to recharge.Ensure Bluetooth is turned off on the device you want to connect to.Check if the device's operating system is outdated and update it to the latest version.Remove the existing pairing settings and start the pairing process from scratch.Check if the earbuds are out of battery. <p>No Sound</p> <ul style="list-style-type: none">Disconnect the earbuds from your smartphone or other audio devices, then attempt pairing them again. Restart your phone or computer if needed.Wireless interference could be causing the issue. Try moving the earbuds closer to the audio source.Stay away from phones, microwaves, or Wi-Fi routers, as they may cause interference.Nearby Bluetooth devices may also cause interference. Turn off Bluetooth or power off other devices to resolve the issue. <p>Find My Earphone</p>  <p>Time and Date</p> <p>In addition to confirming the time and date, you can also set time calibration.</p>  <p>Camera Function</p> <p>Press the camera icon to remotely trigger the shutter button on connected devices such as smartphones.</p>  <p>Language Settings</p> <p>Switch between languages of your choice.</p>  <p>Wallpaper Settings</p> <p>You can set the wallpaper to an image of your choice.</p>  <p>Specifications</p> <table border="1"><thead><tr><th>Parameter</th><th>Specification</th></tr></thead><tbody><tr><td>Input</td><td>5V = 1A</td></tr><tr><td>Output Power</td><td>5 mW</td></tr><tr><td>Charging Time</td><td><1.5 hours (10-minute charge = 2 hours playback)</td></tr><tr><td>Bluetooth Version</td><td>5.4</td></tr><tr><td>Playback Time(varies by volume level & content)</td><td>Up to 40 hours</td></tr></tbody></table> <p>Warranty and After-Sales Service</p> <p>30-Day Free Return + 6-Month Warranty</p> <p>This product comes with a 6-month warranty. However, if you encounter any initial defects or natural malfunctions within 30 days from the date of purchase, please contact us for a free replacement or a full refund.</p> <p>After-Sales Service Guide</p> <p>If you have any questions about the device, encounter technical issues, or suspect a malfunction, please contact your distributor.</p> <p>When making an inquiry, please provide the following information to help us respond as quickly as possible:</p> <ul style="list-style-type: none">Order numberIssue/symptoms of the malfunction <p>Frequency Response 20 Hz - 20 kHz</p> <p>Microphones 4 (2Call Mic, 2ENC Mic)</p> <p>Water Resistance IPX5</p> <p>Bluetooth Range 10 m / 33 ft</p> <p>Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.</p> <p>FCC Radiation Exposure statement</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>	Parameter	Specification	Input	5V = 1A	Output Power	5 mW	Charging Time	<1.5 hours (10-minute charge = 2 hours playback)	Bluetooth Version	5.4	Playback Time(varies by volume level & content)	Up to 40 hours
Left Earbud	Control Device	Right Earbud																													
Play/Pause	Tap Once	Play/Pause																													
Previous Track	Double Tap	Next Track																													
Answer/End Call	Double Tap	Answer/End Call																													
ANC	Triple Tap	ANC																													
Activate Voice Assistant	Press Four Times	Activate Voice Assistant																													
Parameter	Specification																														
Input	5V = 1A																														
Output Power	5 mW																														
Charging Time	<1.5 hours (10-minute charge = 2 hours playback)																														
Bluetooth Version	5.4																														
Playback Time(varies by volume level & content)	Up to 40 hours																														