



BIMUVA

Baby Swing User Manual

WS-HB18-9



IMPORTANT! KEEP IT FOR FUTURE REFERENCE.

Before installing and using, please follow the instructions carefully to ensure the safety of your baby.

Parts Instruction

Product Specification:

Product Name:	Baby Swing
Model Number	WS-HB18-9
Input Voltage :	100-240V~
Output Voltage:	5V---
Output Current:	1A
Frequency:	50/60Hz
Application :	Children up to a weight of 9 kg or unable to sit up unaided
Main Material :	Polyester, plastics, aluminum alloy
Certificate:	ASTM F2088-24,ASTM F2167-22

Product Features:

1. Swinging from side to side, with five gears mimicking human movement.
2. Protecting baby's spine design on the basis of human engineering.
3. Power supplied by safe 5V low voltage adapter.
4. One-button installation and disassembly, simple and convenient to use.
5. Seat part made of environmental-friendly super soft fabric and non-textile, cozy, breathable and safe & washable seat fabric.
6. Made of aluminum alloy with light weight and strong hardness guaranteeing safety for baby.
7. Controlled by IMD digital touching screen or remote controller, easy to operate
8. With motion lock and safety belt for protection.
9. With built-in soft nature sounds & Bluetooth enabled for music.

Parts Instruction

Make sure that all of the following parts listed are included in the box. If any part is missing, please contact us before operating. No tools are required for assembly.



Toys * 2
Toy bracket * 1



Seat frame * 1



Pillow mat * 1



Support of the base * 1



Remote controller * 1
Adapter * 1,
2 m USB line * 1
Key controller * 1



WARNING

This product contains a button or coin cell battery.

A swallowed button or coin cell battery can cause internal chemical burns in as little as two hours and lead to death.

- Dispose of used batteries immediately.
- Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Installation

Step 1 Take out all parts.



Step 3 Screw 4 reinforcement screws on the back of the base.



Step 5 Put the seat cushion on and attach the Velcro on the back.



Step 7 Adjust seat belt with Velcro on both sides.



Step 2 Fit the metal pipes on both sides to the main unit.



Step 4 Connect two curved steel pipes, make sure that the holes on the pipes are in the same side.



Step 6 Install the base on the base (shake it from side to side to connect the D-shaped port to the pipe fittings of the base).



Step 8 Install the bracket for toys.



IMPORTANT!

1. Adult assembly required

2. Please read all instructions before assembly and use of the product

3. Care should be taken in unpacking and assembly

Examine product frequently for damaged, missing or loose parts
4.5. DO NOT use if any parts are missing, damaged or broken.



WARNING!

1. Do NOT use this product once your child can sit up unaided or weighs more than 9kg (approximately 0-8 months).

2. NEVER leave the child unattended. Always keep your child in view.

3. Do not use the product once your child can sit unaided.

4. It is dangerous to use this product on an elevated surface e.g. a table.

5. Never use this product on an elevated surface (e.g. a table).

6. Always use the restraint system.

7. This product is not intended for prolonged periods of sleeping.

8. This product does not replace a cot or a bed, when your child needs to sleep, it should be placed in a suitable cot or bed.

9. DO NOT let children play with this product.

10. DO NOT move or lift this product with the baby inside it.

11. Be aware of the risk of open fire and other sources of strong heat such as electric bar fires, gas fires, etc in the vicinity of the product.

12. To avoid strangulation, DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

13. All assembly fittings should be unfolded completely and tightened properly before using the product.

14. DO NOT use the product if any parts are broken, torn or missing.


15. DO NOT use accessories or replacement parts other than those approved by the manufacturer.

16. The supply terminals are not to be short-circuited.

17. To prevent possible injury by entanglement, remove the toys when the child starts trying to get up on its hands and knees in a crawling position.

18. To avoid suffocation, remove plastic bag and packaging materials before using this product. The plastic bag and packaging materials should then be kept away from babies and children.

Assembling Guide

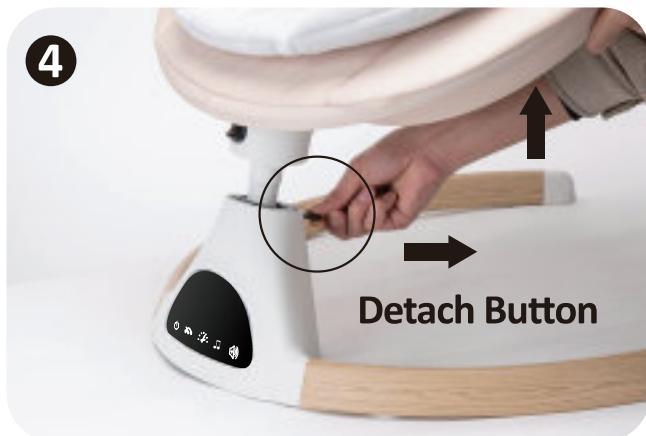

Use Wall Plug or Powerbank



⚠️WARNING

Please use AC power adaptor provided by the manufacturer. Unauthorized AC power adaptor may damage product.
Alternatively, you can power product with powerbank.

Use Touchscreen Panel



⚠️ WARNING

Do not operate the touchscreen with wet, oily or dirty hands. If the screen has any moisture or if your fingers are wet, the touch screen may not respond or an incorrect operation may occur. A damage may result and it is not covered under warranty.

1. Power ON/OFF
2. Swing speed. 5 swing speed available.
3. Timer. 3 settings: 8/15/30 mins.
4. Music on/off. (Tap to switch music, long press 2-5 seconds to turn off music)
5. Adjust the volume level.

Connecting via Bluetooth

1. Power on to connect to Bluetooth;
2. Turn on Bluetooth function of mobile phone, search BT-Baby or WS-HB18 cradle, hear Bluetooth connection success message;
3. Turn on music in the mobile phone, our swing will play the currently selected music, and the swing volume can also be controlled by the volume key of the phone.

Use Remote Control



Power



Stop



Volume Up



Play / Pause



Volume Down


Swing Speed



Music



Timer

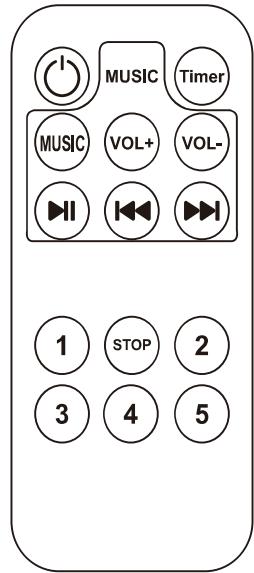

Care and Maintenance

1. The product can be wiped with wet cloth and soapy water.
2. Do not use undiluted neutral detergent, gasoline or other organic solvent to wash the product. It may cause damage to the product.
3. Do not use bleach.
4. From time to time, check your product for worn parts, torn material or stitching. Replace or repair the parts as needed. If the product is not in use for a long period of time, please store it in the shade where your child cannot access it.

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Bluetooth Version	5.1 Classic (BR/EDR) mode only
Antenna Type	PCB
Antenna Gain	-0.58dBi

Bluetooth Name: BT-baby or WS-HB18, one of them.

Turn on the mobile phone to search for Bluetooth signals BT-baby or WS-HB18, and then use the mobile phone to pair bluetooth and connect.

⚠️WARNING

Fall hazard:

Babies have suffered skull fractures falling while in and from bouncers.

- Use bouncer • on floor
- ALWAYS use restraints and adjust to fit snugly, even if baby falls asleep.
- NEVER lift or carry baby in bouncer.



Suffocation hazard:

Babies have suffocated when bouncers tipped over on soft surfaces.

- NEVER use on a bed, sofa, cushion, or other soft surface.
- NEVER leave baby unattended



To prevent falls and suffocation:

- ALWAYS use restraints and adjust to fit snugly, even if baby falls asleep.
- STOP using bouncer when baby starts trying to sit up or has reached 9KG, whichever comes first.
- To avoid injury ensure that children are kept away when unfolding and folding this product
- Do not let children play with this product.
- Transformers used with the infant swing are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.
- The infant swing shall only be used with the recommended transformer.

FALL and STRANGULATION HAZARDS:

Infants have suffered head injuries Falling from swings and have strangled in straps

- ALWAYS use restraints. Adjust to fit snugly.
- STOP using product when infant attempts to climb out (approximately 8months).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet

SUFFOCATION HAZARDS:

Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway. ALWAYS keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.

⚠️ **WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- This product contains a CR2025 ,DC 3V coin battery. A coin battery can cause serious internal chemical burns if swallowed.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 132°F(60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

CAUTION

To prevent battery leaks, which can bum skin and eyes:

- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.
- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.

WARNING

- The power terminals must not be short-circuited.
- Do not use adapters other than those supplied with this product to power the product.
- Keep children away from working adapter.
- Check the adapter cable connection regularly.

Clean & Maintenance

Clean

1. Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
2. Washable fabric
 - Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.

Maintenance

1. Please check this baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and connect/install it again if necessary.
2. This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry, and store it in a cool and dry place, avoiding direct sunshine for a long time.

Troubleshooting

Fast self-inspection solution below

No.	Trouble	Solution
1	Not energized	<ol style="list-style-type: none">1. Check whether the adapter and DC cable are firmly connected. If loose, connect them firmly.2. DC cable may be damaged. Please contact customer service to replace DC cable.
2	The power lamp keeps flashing/high voltage alarms	Use matchable adapter with an output voltage of 5V and 1A
3	Motion lock stuck	Check the motion lock. Pull it up to unlock the seat frame.
4	Overstring/Strike	Power off and restart it again

Note: For other trouble, please contact our customer service for help.

Never disassemble and repair the swing by yourself.

After-sales Service

Thank you for purchasing our product. If you have any questions or product failure in the process of using this product, please contact us in the Amazon mail immediately.

This product has a free return and exchange service for 6 months. You can take photos or video and communicate with us through Amazon message. We will return and exchange the goods for you in time.

Out of the warranty scope:

1. Damage caused by improper use of overloading, etc
2. Damage caused by natural disasters, such as irresistible external forces
3. Manmade vandalism



Warranty Card

Product Model		Customer Name	
Product Name		Customer Phone Number	
Purchasing Date		Fault Description	
Customer Address			