


# Air KeyChain

## User Manual



## 01. Getting started

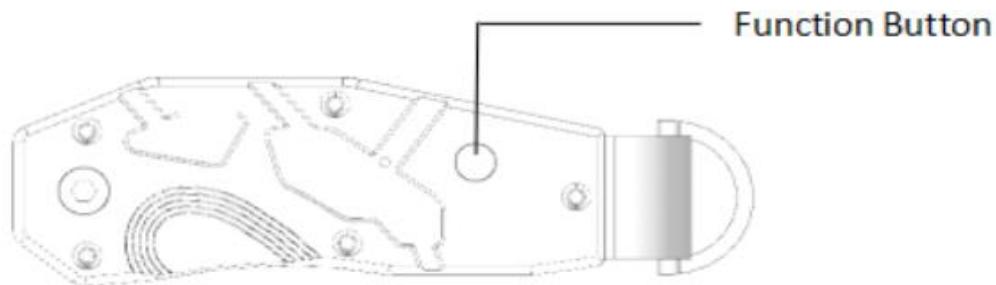

### 01.1 Power On/Off

- . Press your Air keychain's Function Button once to turn on, it should beep once indicating it is powered on.
- . Press the product button continuously for 3 times, and press the third time without letting go. You will hear 2 beeps indicating your Air keychain is powered off.

## 02. Add Your Item Locator

### 02.1 Start The App

- . Open Find My app on your supported iPhone or iPad.
- . Allow notifications from the app.

### 02.2 Connect Your Air keychain.

- . Power on your Air keychain.
- . Tap +, then "Add Other Item"
- . Once your Air keychain located, tap "Connect"
- . Choose a recognizable name and emoji for your Air keychain tap "Continue"
- . Find My will ask for confirmation to add your Air keychain to your Apple ID Tap "Agree"
- . Tap "Finish" and your Air keychain will be set up and ready to be connected to whatever item you wish to locate, e.g. your keys.

## 03. Locate Your Item

### 03.1 Find Air keychain When It's Nearby:

- . Open Find My app and select the "Items" tab or open the Find Items app on your iPhone.

- . Tap on your Item Locator from the list
- . Tap "Play Sound" to make your Item Locator beep.
- . Tap "Stop Sound" to stop the beeps once you find.

### 03.2 Find Air keychain Last Known Location:

- . Open Find My app and select the "Items" tab or open the Find Items app on your iPhone.
- . Tap on your Air keychain from the list
- . Your Air keychain's last known location will appear on the map.
- . To navigate to that last known location, tap "Directions" to open the Apple Maps app.

## 04 Find Item Out Of Range

### 04.1 Enabling "Notify When Left Behind":

- . Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- . Tap on your Air keychain from the list.
- . Under "Notifications" enable the "Notify When Left Behind" toggle.
- . You will receive a notification when you leave your Air keychain behind and it's no longer in range of your device .

### 04.2 Enabling "Notify When Found":

- . Under "Notifications", enable the "Notify When Found" toggle .
- . When your Air keychain is seen by another Find My enabled device, you will receive a notification of its updated location.
- . Note: "Notify When Found" can only be activated when your Air keychain is out of range .

## 05. When Your Item Is Lost

### 05.1 Enabling "Lost Mode":

- . Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- . Tap on your Air keychain from the list
- . Under "Lost Mode" tap "Enable".
- . A screen detailing Lost Mode will pop up, tap "Continue".
- . Enter your phone number or email address and tap "Next"

- . You may enter a message that will be shared with the person that finds your item.
- . Tap "Activate" to enable "Lost Mode"
- . Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.
- . Note: When "Lost Mode" is enabled, your Air keychain is locked and cannot be paired to a new device.

## 06 Resetting Air keychain

### 06.1 Remove The Air keychain From Find My App:

- . Open Find My app and select the "Items" tab.
- . Tap on your Air keychain from the list.
- . Please ensure "Lost Mode" is disabled.
- . Scroll to the bottom of the screen and tap "Remove Item".
- . A summary will open, tap "Remove" to confirm.

### 06.2 Factory Reset Your Air keychain:


- . After successfully removing the Air keychain from Find My app, press the Air keychain's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.
- . The Air keychain is now reset and ready to be paired to a new device.

## 07. Extras

### 07.1 Replace The Battery:


- . Remove the screws on front of your Air keychain with a screwdriver
- . Replace the batteries with new CR2032 battery placing them positively up (text facing up).
- . Carefully close the Air keychain by fastening the screws on both sides.
- . **WARNING:**  
Please handle the replaced battery properly to avoid injury to others. especially children.



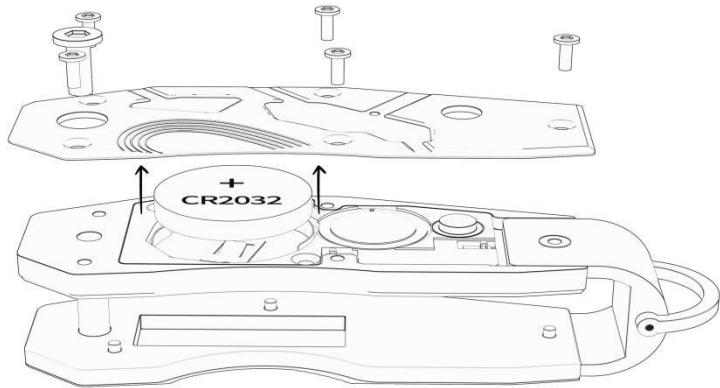


## 07.2 Replace the Keychain bottom shell:

- Remove the screws on front of your Air keychain with a screwdriver
- Separate the front shell from the bottom shell.
- Replace the keychain case.
- Carefully close the Air keychain by fastening the screws on both sides.

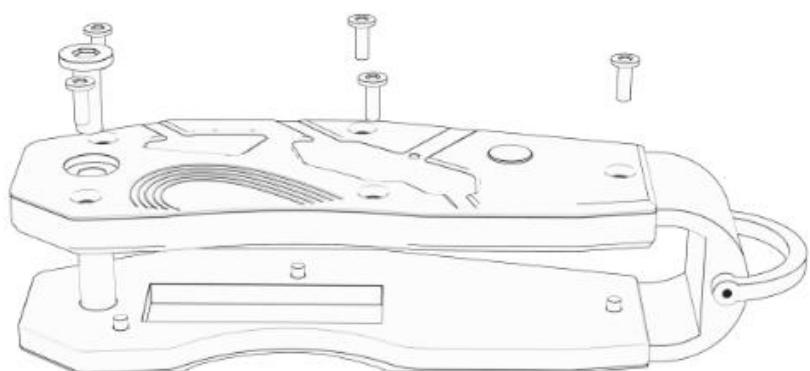

(1)

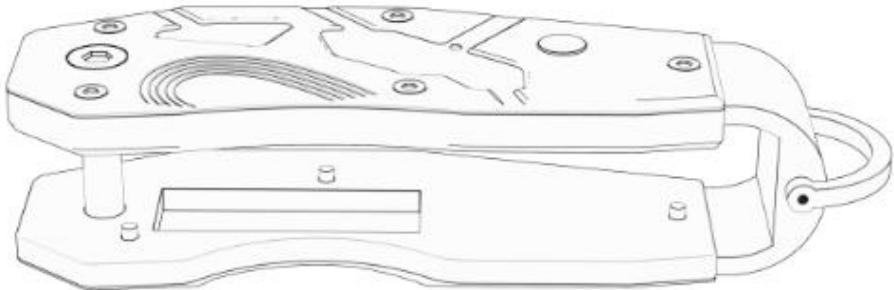

(2)

## 08 Abnormal release

08.1 be searched. When the product name cannot be find, you can restored the product to factory settings and retarget it.

### 08.2 Precaution:

- Please store this product at room temperature (20~25° °C) .
- Do not expose this product to rain or humidity.
- Do not throw the product to avoid damage caused by falling.
- Do not use chemical solvents to wipe the product, please do not discard at will, or put in high temperature and fire, so as not to cause danger.
- Battery Type:CR2032
- Please use the correct battery for the product

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.