




USER MANUAL

Model : C-710_R
Operating system : android 14
CPU : A523 Super-Fast Octa-core Processor
RAM : 3GB RAM + 5GB RAM Expandable
Memory : 32GB + 1TB TF Card
Display : IPS 1200*1920 in-cell
Camera : 5MP Front, 13MP Rear Camera
Stereo : Enhanced HD 2 box Stereo Speakers
Network : 2.4/ 5G WiFi Connectivity
Battery type : 5000 mAh Li-ion Battery

PRODUCT OVERVIEW

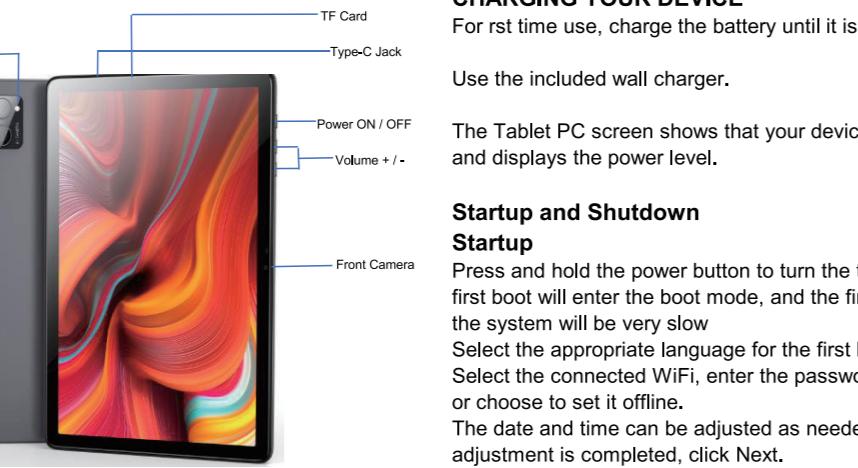

CHARGING YOUR DEVICE

For first time use, charge the battery until it is full.

Use the included wall charger.

The Tablet PC screen shows that your device is charging and displays the power level.

Startup and Shutdown

Startup

Press and hold the power button to turn the tablet on. The first boot will enter the boot mode, and the first boot into the system will be very slow.

Select the appropriate language for the first boot. Select the connected WiFi, enter the password to connect, or choose to set it offline.

The date and time can be adjusted as needed, after the adjustment is completed, click Next.

Read more about google services and click for more. After reading all the service details, click Accept to enter the screen setting password, or skip.

Wait for the tablet to load and use it.

Shutdown

Long press POWER, it will pop up a shutdown window. Shutdown window contains mute mode, airplane mode, reboot mode and shutdown four options. Click Shutdown is the last step.

Open and Close of the Screen

Screen will be closed on its own when no operation happens.

Screen will be closed on its own if no operation happens for some time to save battery power. When screen is open, press POWER key, the screen will be closed immediately.

Turn it on when you close the screen.

If the screen is off, tap POWER to turn it on. The screen will display the lock status, swipe the unlock icon up to "Unlock screen".

USB Connection

Tablet storage configuration

Before transmitting documents, you have to conduct storage configuration for your Table.

1. Connect the Table and computer by USB cable, the reminder column will show the reminder information.

2. Open the reminder board; please view the Table status and reminder to learn how to open the board.

3. In the reminder board, click the "USB Connected", then click "open USB storage configuration".

4. Now the USB is connected successfully.

Copy the document into memory card

1. Connect the Table to computer with USB cable.

2. As Table storage configuration, it is connected with computer successfully.

3. Open the "My computer" in your computer, check the items

in "removable disc".

4. Copy the documents you need into "removable disc".

5. After copying finishes, click "shutdown the USB storage configuration" to uninstall.

Note: When the Table is connected to the USB cable, open the USB storage configuration, do not view the memory card through the Tablet PC, only after disconnecting the USB cable, then view the memory card through the Tablet PC.

Shortcut bar

Slide down the screen to enter the notification bar of shortcut applications

Automatic rotating screen

WIFI

BT

Flight mode

Notice board

Screen brightness adjustment and display

Batter

WIFI Signal

Search

Eye protection mode

Screen recording

Power saving mode

Volume -

Backspace

Home button

Multitask key

Volume +

Add a personal touch

Slide down the screen to enter the notification bar of shortcut applications

Automatic rotating screen

WIFI

BT

Flight mode

Notice board

Screen brightness adjustment and display

Batter

WIFI Signal

Search

Eye protection mode

Screen recording

Power saving mode

Volume -

Backspace

Home button

Multitask key

Volume +

NOTICE

Not striking from any hard object.

Stop using in humid or strong weather.

Keep away from electric or magnetic field.

Don't stain the device by chemicals.

Not disassemble the device.

Keep away from high & freezing temperature, dusty or moist environment.

Recommended lower volume to avoid any ear damage.

Don't leave the device inside a car with all windows closed.

Don't update firmware without professional guidance. The manufacturer is not responsible for the device damage caused by user's private firmware updating.

Open Settings

Find the wallpaper in settings

Open wallpaper & style

Choose to adjust the lock screen or home screen

Select a cool image to set as the lock screen or home screen wallpaper, and review it, click

1. Tap the shortcut app icon to quickly open/close the app

2. Long press the shortcut app icon to access the app for more detailed Settings

3. Click Edit Shortcut app to delete or add shortcut app

4. The notification bar displays a message alert for recent apps

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.