


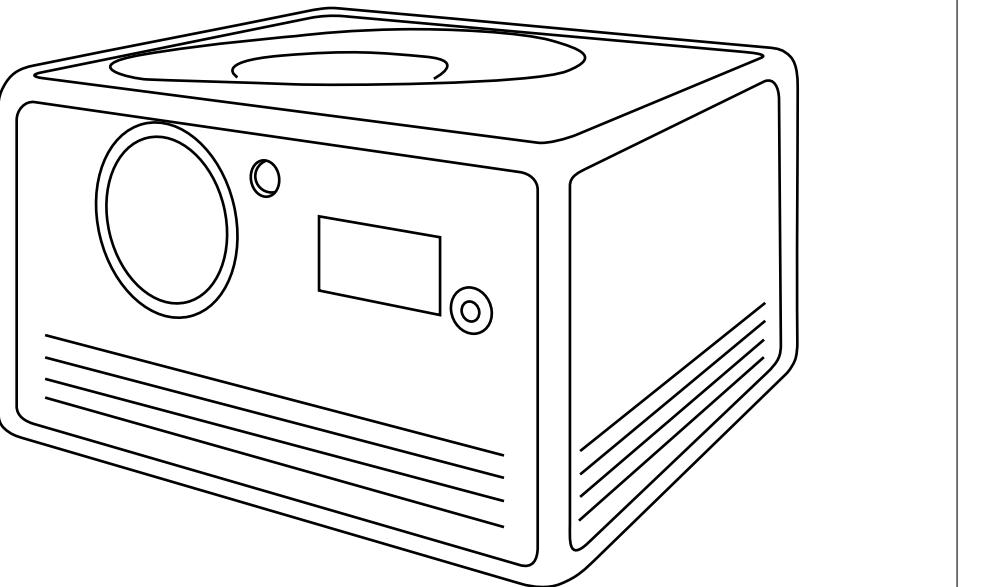


Pet Automatic Ball Launcher

User Manuals



1 About the product and its accessories

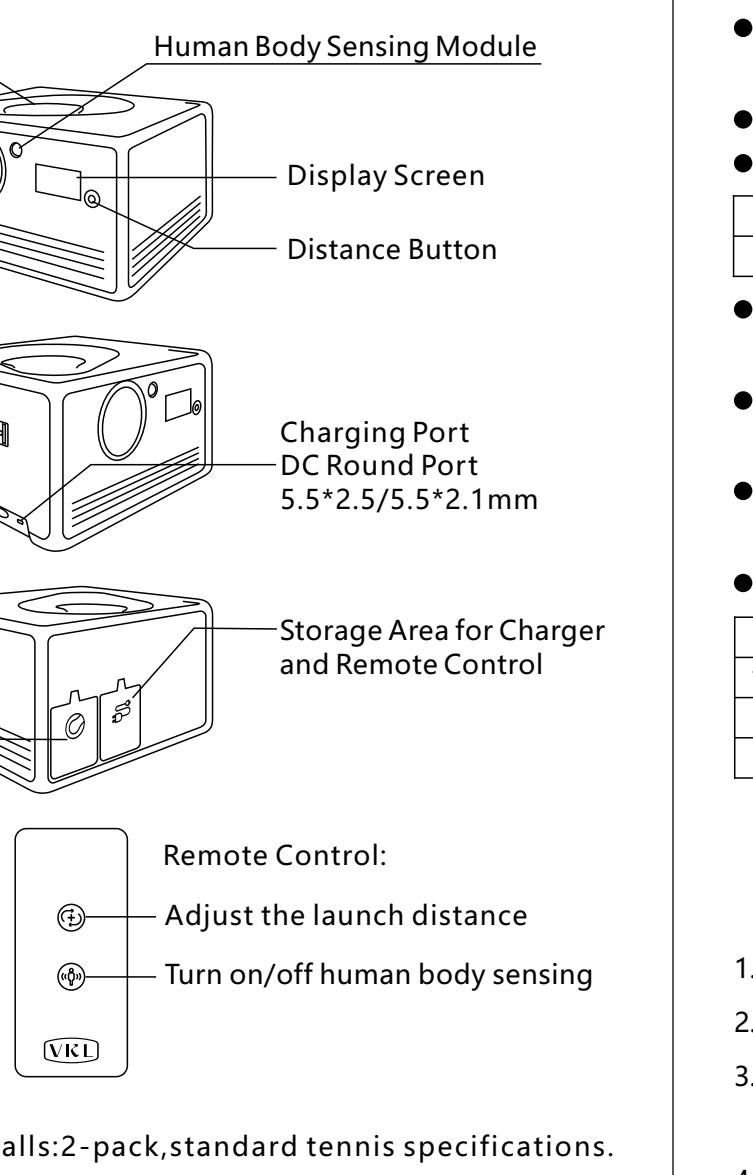

***Product includes:** 1 automatic ball machine, 2 tennis balls, 1 remote control, and 1 charger. For returns, please pack all items in the original box.

2 About Charging

- This ball launcher is equipped with a rechargeable battery. Please use the provided charger for recharging..
- Charging time: about 3 hours
- Battery capacity: 2600mAh

Charger power requirements(12.6w Max)	
Operating Voltage-12.6V	Maximum Current-1A

- Please use the original charger. If it is damaged, use a replacement charger with a power rating that does not exceed the specified maximum.
- This product has a charging protection function, and it will automatically cut off the power when the battery is fully charged.
- The charging head's indicator light: green for full charge, red for not fully charged.
- Battery level display: Check via display screen

Four bars	75%-100% battery level
Three bars	50%-75% battery level
Two bars	25%-50% battery level
One bar	1%-25% battery level

3 How to use

1. Before first use, please charge the machine.
2. Power off completely when not in use.
3. After power-on, default distance is level 1 (10ft). Adjust using product's distance button or remote. Levels cycle: 1 (10 ft), 2 (20 ft), 3 (30 ft), then repeat.
4. When in use, place the ball in the entry. It will eject after 3 seconds. If multiple balls are placed at once, they will eject approximately every 3 seconds.
5. In case of damage to the provided tennis ball, it can be replaced with any standard tennis ball.

4 Matters need attention

1. The ball launcher can't be used while charging.
2. Please turn off the device before charging.
3. Don't take apart the machine.
4. Remote control only works when powered on.
5. Don't stand in front of the ball launcher to avoid injury.
6. Human/Animal Detection: Stops ball dispensing on sensing, can ONLY be turned off via remote, defaults to on at power-on.
7. High-sensitivity sensor may cause false triggers due to deer lights, passing leaves, flying insects, or similar interference.
8. After an obstacle clears, there's a 5-second delay for human detection. Avoid standing in front of the sensor too long time, or it may not detect the next action.
9. The human body sensing icon flashes when the function is activated and remains steady when deactivated.
10. This product is not waterproof. Avoid using it in rainy conditions or rinsing it directly with water. For cleaning, use a dry cloth or damp wipe only.
11. Clean the tennis ball and machine after each use.
12. Replace damaged balls promptly for optimal use.
13. Balls contaminated with saliva, dirt, and other impurities may affect launch distance.
14. Excessively cold or hot ambient temperatures can affect battery life.
15. Low battery voltage may cause the launcher range to decline, which is normal. Prompt charging will resolve this issue.
16. Try not to fully drain the battery, as it will affect its lifespan.
17. The remote control for this product is not interchangeable. If it is lost, please purchase an official VKL remote control.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.