



Children's singing machine

User Manual


Instruction Manual

This manual contains important information that must be retained

Precautions

1. This product contains small parts. Children under 3 years old should use it under adult supervision.
2. The built-in 3.7V battery cannot be removed or replaced.
3. Please use a 5V=2A charger to charge this product (the charger should be used by an adult or under adult supervision).
4. Do not immerse the host in water or liquid;
5. Do not use this product in an environment with high temperature, high pressure, humidity, strong static electricity or magnetic field.
6. Before cleaning, the product should be disconnected from the charger and the surface stains should be wiped with a dry cloth. Do not disassemble the product by yourself to avoid danger.
7. The battery must not be exposed to sunlight, fire or similar overheating environments.
8. Avoid dropping the product from a height or subjecting it to excessive pressure.

1. Host buttons/interfaces introduction

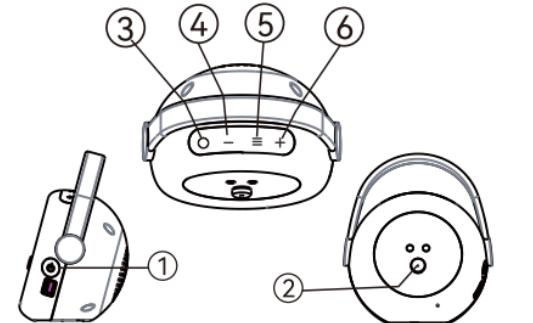

① On/Off button

③ Colorful light switch/single loop


⑤ Menu key/
Bluetooth key

② Play/Pause button

④ Previous song/
Volume down

⑥ Next song/
volume up

2. Microphone Introduction/ Interface Introduction

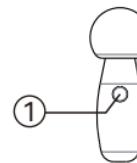

⑦ Power button: long press to switch on and off / short press to switch between original sound and backing vocals

3. Host button function description

Serial number	icon	name	Function	
			Short press	Long press
①	①	On/Off button		Power on/off
②	②	Pause/Play Button	Pause/Play	Return to the first song
③	③	Colorful light key	Turn on/off the colorful lights	Single loop Continuous play
④	④	Previous song Volume down	Previous song	Volume down
⑤	⑤	Menu Key	Toggle menu	Music/ Bluetooth switch
⑥	⑥	Next song Volume up	Next song	Increase the volume
⑦	⑦	Microphone On/off button	Original sound/backing vocals	Power on/off

1. Instructions

① Power on/off

Long press the power button for 3 seconds, and the device will turn on after the power-on prompt tone is played; when the device is turned on, long press the power button for 3 seconds, and the shutdown prompt tone is played, and the device will turn off. The indicator light is red when charging, and the red light is off when fully charged, and the blue light is on when working.

② Bluetooth connection

Press and hold the menu button for 3 seconds to enter Bluetooth mode. When your phone searches for "G2", click to connect. Press and hold the menu button again to switch back to music mode.

③ Audio Playback

A: Long press the menu button to switch Bluetooth mode.

B: Short press the volume up/down button to play the previous/next song. Long press the volume button to adjust the volume.

C: Long press the play button to return to the first song in the current folder and play it.

D: Long press the colorful light switch to realize single song loop/continuous play function.

④ Microphone function

Long press the microphone power button to turn the microphone on and off, and short press the switch to switch between original singing/backing singing mode.

4. Resource Content

- ① Children's Songs
- ② Fainy Tales
- ③ Fable
- ④ Science Enlightenment Stories
- ⑤ Sleeping Music

Product Name	Children's singing machine	Product Model	G2
Battery Type	Polymer lithium battery	Battery capacity	900mAh
Main Materials	Plastic, Silicone Electronics	Rated input	5V=2A
Battery life	8h	Charging port	TYPE-C
Bare Metal Weight	122g	Audio Format	Mp3 etc
trumpet	4Ω3W		

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.