

<h2>selfie stick</h2> <h3>使用说明</h3>	<p><b>兼容</b>  <input checked="" type="checkbox"/> iOS <input checked="" type="checkbox"/> Android</p>	<h4>怎样使用</h4> <ol style="list-style-type: none"> <li>开机: 长按拍照键3秒开机。</li> <li>蓝牙配对: 指示灯快闪4秒进入配对状态, 配对状态蓝色指示灯闪烁, 使用手机搜索“Selfie”来匹配, 配对成功后蓝色指示灯熄灭。</li> <li>拍照: 自拍器与手机处于连接状态时, 短按拍照键, 蓝灯闪烁。</li> <li>无配对: 开机后, 在无配对连接状态下, 无操作5分钟自动关机。</li> <li>配对: 开机后, 在自拍器与手机处于连接状态时, 10分钟无操作将进入休眠状态, 再过10分钟无操作自动关机。</li> <li>关机: 开机及休眠状态下, 长按拍照键3秒关机, 指示灯闪烁熄灭。</li> </ol>	<h4>取出和装入自拍器</h4> <p>取出与装入</p> <h4>怎样更换电池</h4> <p>从左侧的凹槽缝抠出来即可打开遥控器盖。</p>	<h4>360°旋转</h4> <p>夹子360°旋转, 拍照更自由。</p> <h4>怎样打开三脚架</h4> <p>在手柄向外打开, 即变成三脚架。</p>	<h4>三脚架模式</h4> <p>自拍杆变三脚架模式时, 注意将杆子最后一节拉出并调整至三脚架稳固。</p>	<h4>规格</h4> <p>材料: 不锈钢+ABS      总长度: 1030mm      折叠长度: 194mm      产品重量: 155g      电池: CR1632 (可更换)      (电池不得暴露在诸如日照、火烤或类似过热环境中)</p> <p><b>提醒</b>      自拍杆兼容Android4.2.2和iphone的ios5.0和以上      (Android设备: 如果你在相机选项下改变了你的“音量键功能”, 一定要把它改成默认, 或者“拍照”, 让自拍杆正常工作)</p> <p><b>感谢您的支持!</b>      FCC CE GS RoHS</p>
<h2>selfie stick</h2> <h3>Instructions for use</h3>	<p><b>Compatible</b>  <input checked="" type="checkbox"/> iOS <input checked="" type="checkbox"/> Android</p>	<h4>How to use</h4> <ol style="list-style-type: none"> <li>Turn on: Long press the camera button for 3 seconds to turn on.</li> <li>Bluetooth pairing: the indicator light flashes for 4 seconds to enter the pairing state, the blue indicator light of the pairing state flashes, use the mobile phone to search for “Selfie” to match, and the blue indicator light will go out after the pairing is successful.</li> <li>Take a photo: When the Selfie is connected to the mobile phone, short press the camera button and the blue light flashes.</li> <li>No pairing: After booting, in the state of no pairing connection, it will automatically shut down after 5 minutes of no operation.</li> <li>Pairing: After turning on the phone, when the Selfie is connected to the phone, it will enter the dormant state if there is no operation for 10 minutes, and it will automatically shut down after another 10 minutes.</li> <li>Power off: In power on and sleep mode, press and hold the camera button for 3 seconds to power off, the indicator light flashes and goes out.</li> </ol>	<h4>Unload and load</h4> <p>Unloading and loading</p> <h4>Replacement battery</h4> <p>Cut out from the groove on the left      Open the remote control cover.</p>	<h4>360° Rotation</h4> <p>The clip rotates 360°, Take pictures more freely.</p> <h4>Open the tripod</h4> <p>Open the handle outwards, It becomes a tripod.</p>	<h4>Tripod mode</h4> <p>When the selfie stick changes to tripod mode, pay attention Pull out the last section of the pole and adjust it to The tripod is stable.</p>	<h4>Specification</h4> <p>Material: Stainless steel+ABS      Total length: 1030mm      Folded length: 194mm      Product weight: 155g      Battery: CR1632 (replaceable)      (The battery must not be exposed to such as sunlight, fire or similar overheating environment)</p> <p><b>Remind</b>      The selfie stick is compatible with Android 4.2.2 and iphone ios5.0 and above      (Android device: if you are on the camera Change your “volume key Function”, be sure to change it to the default, Or “take a picture” and let the selfie stick normal work)</p> <p><b>thank you for your support!</b>      FCC CE GS RoHS</p>

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.