

HINTS AND TIPS



Ball not turning on? Try replacing the batteries - it's usually a quick fix.



Ball or buttons not responding? Turn the ball off. Remove batteries. Hold down triangle for 2 seconds. Wait 60 seconds then reassemble. This resets the ball function.



The targets do not require batteries and are water resistant. Each target is fully sealed so please don't try to open them.



Targets not being recognised by the ball? Try moving to a different playing surface. Occasionally, the material within the surface or under the surface can block the ball's signal.



Cleaning your ball: Wipe it down with a damp cloth. Do NOT submerge in water. The ball is splash resistant but not waterproof.

strikesphere

ELEVATE YOUR GAME



Golden Bear Products Ltd, Hortonwood 40, Telford, Shropshire, TF1 7EY, U.K.
Tel: 01952 608308 www.goldenbear toys.com

EU Authorised Representative: Vulcan Consulting, 38/39
Fitzwilliam Square West, Dublin 2, D02 NX53, Ireland

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For FCC compliance inquiries, contact:
Golden Bear US Inc.
1234 Compliance St, Los Angeles, CA 90001
Phone: (555) 123-4567
Email: support@goldenbear toys.com




Made in China

SOCCER DASH

1007-SS

INSTRUCTIONS

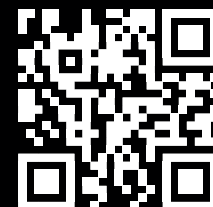

QUICK GUIDE



Insert batteries to activate your ball. The targets don't require batteries - they're ready to go!



Set up your game zone using the 4 targets.



Press and hold triangle to switch on the ball. Select your game mode to play solo or teams.



Follow the instructions for each game mode. Roll the ball over the targets to complete the challenge.

FULL INSTRUCTIONS



Set up your game zone using the 4 targets.



Press and hold triangle button to switch on.



Hold star button for 2 seconds to activate volume settings. Press again to increase or decrease volume. Wait 3 seconds to lock in.

SELECT GAMEPLAY



Switch between 3 game modes; TRAINING MODE, COMPETITIVE GAME or TEAM CHALLENGE.



Press star to select game.

TRAINING MODE [MODE 1]

Choose from 4 training drills; SPRINT, ENDURANCE, FREESTYLE or MEMORY GAME.



Roll the ball over the correct coloured target to select a training drill.

Follow the instructions. Complete each challenge in the fastest time possible.



To end the game and return to main menu, hold down triangle for 3 seconds.

COMPETITIVE GAME [MODE 2]

It's a tournament of 5 levels. Compete solo or head to head. The player who completes all 5 levels in the quickest time wins.



Press triangle to select up to 10 players.



Press star to start game.



Roll the ball over any target to begin.

Complete each challenge in the quickest time.



To end the game and return to main menu, hold down triangle for 3 seconds.

TEAM CHALLENGE [MODE 3]

It's a tournament of 5 levels. Compete in teams of 2 or 3 players. The team that completes all 5 levels in the quickest time wins.



Press triangle to select up to 5 teams.



Press star to start game.



Roll the ball over any target to begin.

Pass the ball to another player when instructed. Work as a team to complete each challenge in the quickest time.



To end the game and return to main menu, hold down triangle for 3 seconds.

RESET SCORES TO ZERO



To reset individual game scores to zero, press and hold star for 10 seconds.

SWITCH OFF SOCCER DASH



End game then press and hold triangle for 3 seconds to switch off. The ball will also turn off automatically after a period of no activity.