

VEVOR

Affordable. Reliable. Home Improvement.

Soundbar

Model: LK-S802-8

Technical Support and E-Warranty Certificate
www.vevor.com/support

VEVOR
Affordable. Reliable. Home Improvement.

Soundbar

Model: LK-S802-8

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

WARNING:

To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user- serviceable parts inside. Refer servicing to qualified personnel only.

1. Do not let water splash onto the surface of this product or enter the interior of the product.
2. This product is not suitable for people (including children) with decreased physical, sensory, or mental abilities or lack of experience and knowledge, unless they are supervised or guided by personnel responsible for their safety.
3. Children should be monitored to ensure that they do not play with the device.
4. If the surface of this product is damaged or there are mechanical or electrical faults, do not use the device.
5. Do not put this product into water.
6. Do not directly heat this product, it should be placed in a dry and ventilated place.
7. Do not place heavy objects on this product.

1

Remote Control Description

Using the remote control:

01. POWER

Press this button to power on or power off.

02. MODE

Press this button to switch the mode within Bluetooth, USB, Aux-in, HD-in(ARC-in).

03. VOL+

Press VOL+ to up the volume of the sound bar

04. ⏮

Under Bluetooth and USB mode, press this button will go to previous song.

05. MOVIE

Press this button will enter MOVIE mode sound effect.

06. PAIR

Under Bluetooth mode, press this button will disconnect the connection between sound bar and sound sourcing device (such as your mobile phone), press this button will reconnect the previous sourcing device again.

07. RESET

Press this button will resume the factory sound setting.

08. MUTE

 
Under work mode, press this button to turn off sound of sound bar, press it again to turn on the sound.

09. ⏸

when playing music, press this button to pause playing, and repress to play continue

10. ⏭

Under Bluetooth and USB mode, press this button will go to next song.

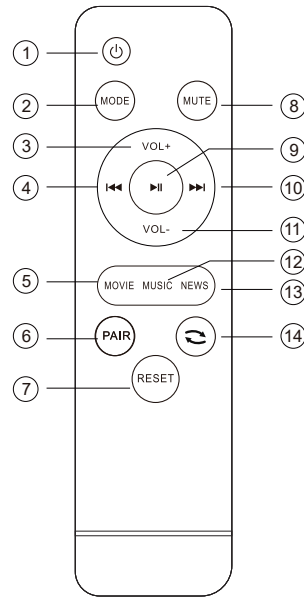

11. VOL-

press VOL- to down it.

12. MUSIC

Press this button will enter MUSIC mode sound effect.

13. NEWS

Press this button will enter NEWS mode sound effect.

14. 🔄

USB file loop.

2

FCC WARNING

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ultimate Advantage

1. Use the latest decoding chip, Bluetooth 5.0+, supporting fast connection.
2. Mobile design, ushering in a new era of Bluetooth speakers with excellent sound quality that stands out from the crowd.
3. Can be matched with personal computers MP3、And audio devices such as mobile phones equipped with a 3.5mm stereo audio input interface.
4. It can automatically remember the song number after shutting down.

Product features

- Wide frequency range
- Balanced sound field calibration
- Unit material upgrade
- Stable signal transmission

- High resolution sound quality
- Long term stable use
- Optimization of heat dissipation structure
- Quick Connect

- Low distortion performance
- Suitable for adapters
- Rich and complete functions
- High efficiency drive

 
Important safeguards

For Soundbars that are suitable for power supply, they are more inclined towards indoor activities such as home use, film and entertainment. Please connect the power adapter before indoor use to ensure that the machine can play and use normally indoors.

3


Soundbar Panels

FRONT



1. 🌟 Press 🌟 to switch the LED lighting mode.
2. VOL- / ⏮ Volume down (long press)/Previous (short press).
3. ⏸ Pause/Play In Bluetooth mode, long press to disconnect Bluetooth.
4. VOL+ / ⏭ Volume up (long press)/Next (short press).
5. 🔄 / MODE Power On/Off (long press); Mode (USB, TF, AUX)(short press).

 BACK



1. **DC 16V**
DC 16V = 2A(Power Port).
2. **Indicator light for Playing**
3. **AUX Port**
Audio input.
4. **TF(Micro SD Card)**
Port for TF keys (32 GB maximum).
5. **USB Flash Drive**
Port for USB keys (32 GB maximum).
6. **COAXIAL**
COAXIAL input on the soundbar to COAXIAL Output of other devices (Blu-ray/DVD player/Gaming consoles).
7. **HD/ARC**
Can be connected to a TV using the HD/ARC port.

COAXIAL Input

If using COAXIAL cable to connect speaker, through the mode button on the remote control or the Power/Mode key on the side plate to select 'COAXIAL', screen displays 'COA'.

4

Bluetooth Mode:

1. Press the 'MODE' button repeatedly till Bluetooth Mode is selected and Soundbar shows "BT" on its LED screen.
2. On Bluetooth enabled devices, select the Bluetooth model of the device. The display screen will flash, indicating that it is waking up. After successful pairing, the indicator light will continue to light up, the display screen will show "BT" and stop flashing.
3. Now you can play music from your Bluetooth-enabled device on the sound bar.
Press ⏮ or ⏭ button on the remote control to play previous or next song.

AUX Input:

If using the AUX cable, connect the speaker to audio source and select 'AUX' by using the Mode key on the remote control or the Power/Mode key on the side panel. 'AUX' will be displayed on the display accompanied by 'AUX' prompt.

HD/ARC Input

If using an HD/ARC cable to connect the speaker, select 'HD' through the mode button on the remote control or the Power/Mode key on the side panel. The screen will display 'ARC' accompanied by 'ARC' prompt.

 
USB Input:

Plug in supported flash drive to play is USB mode.

5

Connection schematic

RECOMMENDED PLACEMENT

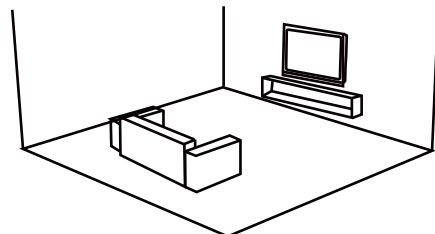

Soundbar: Under the TV(if wall-mounted)/in front of the TV

Solutions to common problems

Trouble	Causes and Solutions
Bluetooth pairing failed	Cause 1: The speaker is not in Bluetooth mode. Cause 2: The speaker Bluetooth is automatically connected to other devices. Solution: Press the "M" key to select Bluetooth mode. If other devices automatically connect, long press "🔄" to disconnect the Bluetooth connection, then turn on the phone's Bluetooth and reconnect.
Speaker sound is too small	Cause 1: The volume of the speaker is too low. Cause 2: The volume of the phone is too low. Solution: Please increase the speaker and phone volume.
Music playing staccato	Cause 1: The Effective distance between the speaker and the mobile phone may be more than 10 meters. Cause 2: There are obstacles between the speaker and the mobile phone. Solution: If it is the above reasons, please shorten the effective distance between the speaker and the mobile phone. If not, please reconnect to Bluetooth.
Speaker doesn't work	Cause 1: The speaker may have run out of power. Cause 2: Bluetooth is not connected. Cause 3: The volume of the speaker may not be turned on, or the volume of the mobile phone may not be turned on. Solution: Please turn on the speaker again after fully charged, reconnect Bluetooth, increase the volume of the speaker and the phone.

If the fault persists after the above inspection, please contact the nearest local maintenance department! Our company's product technology is constantly upgrading. We will not notify you separately of changes in product specifications and features!

6

折后尺寸：105*148MM 105g双铜 正反面单黑印刷 风琴折