



Non-Magnetic Cases



Magnetic Cases

Note: Non Compatible with Non-Magnetic Phone Cases



RocLife
Wireless
POWER BANK
Model NO.:ROLE37




User Manual

Please read this User Manual carefully before using the product and keep it properly

Product parameter:

Name: Wireless Power Bank
Battery: Lithium Polymer
Brand: RocLife
Model No.:ROLE37
Model: Frenovel ABS + PC
Battery capacity: 5000mAh (3.7V 18.5Wh)
Rated capacity: 3000mAh (5VDC,2A)
Energy conversion: >80%
Output: 5VDC/2A,9VDC/2A,12VDC/1.5A
USB-C output:5VDC/2A,9VDC/2A,12VDC/1.5A
DC/DC:1.5A
Wireless output: 5W
Product size: 144mm*37.4mm*5.05mm
Net weight: 120g±20g
Wireless charging output: max 5W when simultaneous charging & discharging.

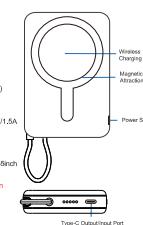

Product description:

This product is a portable charging device that can provide wired charging and wireless charging for mobile phones, tablets, e-books, game machines and other family products. The product has the characteristics of wired charging and wireless charging in one, magnetic suction positioning, power indicator lights, 18W PD fast charging, two output (including wireless output), 15W wireless fast charging, etc. Product built-in FOD, overcharge, over discharge, temperature protection and other safety protection circuit.

Checking quantity of electricity:

Press on/off button check the remaining electricity of the power bank, the five power indicator lights are on the left of the product.

Wireless Charging the iPhone 3 Series or Later

To activate wireless charging, press the power button or place your device on the charger as illustrated below and it will be held in place magnetically. Note: After the phone is placed correctly, there may be a delay of 3-5 seconds, the product will automatically turn on the charging mode. If there is no wireless load access within 30 seconds, the product will automatically turn off the wireless charging function.

Wireless charging tips:

Wireless charging mobile phone needs to place the wireless charging area of the product (see the illustration for the wireless charging coil emission area) for wireless charging. The charging distance of this product is within 2mm. If the wireless charging distance exceeds 2mm, the wireless charging cannot be carried out. Please adjust the wireless charging distance of the mobile phone within the wireless charging range.

Wireless Charging with Built-in USB-C Cable

Wired for Speed, Wireless for Convenience. Built-in USB-C cable Supports charging iPhone 15+ series, Galaxy Z+ series, Android phones. To activate wired charging, remove the USB-C cable from the battery slot, connect the cable, press the power button to start charging, and when charging is complete, place the USB-C cable back into the battery slot.

Charge the product:

Press on/off button to charge the built-in wireless charging mode power bank. Turn the charging cable on to be able to plug into the input port to charge the power bank. Connect the Type-C connector to the charger, and the power indicator lights will start to flash, indicating that the product is being charged. When PD is fully charged, the power indicator lights will stop flashing.

Recharging Your Portable Charger:

When connecting to the charging cable matching the mobile power interface, the power indicator lights will flash, which means that the connection is normal and the power bank is charged, if there is no flash, it means that the connection fails and there is no charging. Please check whether the charging cable is connected correctly.



Charging Your Device Wirelessly and Recharging Your Portable Charger Simultaneously



Reminder:

Please read all instructions and warnings before using this product. Improper use will damage the product or personal safety.

- The charging contact surface on the back of the mobile phone does not contain metal substances, such as iron sheets, rings, metal protective cases, etc.
- When the mobile phone is charging, if intermittent charging or serious heating occurs, please stop using it immediately and contact the manufacturer.
- Do not align the mobile phone with the wireless charging coil, and there are metal foreign bodies in the protective sleeve of the mobile phone. Please try to cool the mobile phone, remove the protective sleeve, and then align it to the normal position.
- This product has an over-current protection function. If the product is used improperly, it will turn off or reduce the output power, reduce the charging speed and ensure safety. Please check whether the equipment is used improperly or not.
- Do not let children use alone under 12 years, especially for accessories.
- Please use a dry soft cloth to clean the surface. Do not use chemicals, soap, or detergent.
- Please do not dismantle the machine by yourself. The user's abnormal use or improper placement of this product may reduce the service life or damage the product. Therefore, the responsibility does not belong to the warranty responsible party. Please use the product in accordance with the instructions.
- There is a conversion rate in the power bank, so the battery capacity of the power bank is not equal to the rechargeable capacity.
- Please charge your power bank regularly (at least 5 months is recommended) to maintain its long service life.
- Improper use of the product may easily result in the product itself or endanger the safety of others.
- Do not damage the product manual and improperly apply or warn the personal and property damage caused by consumers and the company will not bear any legal responsibility.
- Non-professionals are strictly prohibited to decompose this product.
- Avoid using electrical appliances or loads that exceed the output current of the product (the circuit will be protected, no output).
- Avoid strong magnetic fields, including magnetizing, ironing, tempering, separating, etc. Strong magnetic fields may cause product damage.
- Store the product in a cool, dry place. Do not store the product in a hot or humid environment. Do not dispose of the product in heat or fire.
- Use of a power supply or charger not recommended or sold by the product manufacturer may result in a risk of fire or injury to persons.

16. Ambient Temperature should be between 10°C to 45°C / 50°F to 113°F.
17. Storage Temperature range: -10 to 60°C.
18. When disposing of secondary cells or batteries, keep cells or batteries of different manufacturers separate from each other.

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING – When using this product, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- To reduce the risk of injury, close supervision is necessary when the product is used by children.
- Do not put fingers or hands into the product.
- Do not expose power bank to rain or snow.
- Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.
- Do not use power bank in excess of its ratings. Overload outputs above ratings may result in a risk of fire or injury to persons.
- Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect assembly may result in a risk of fire or injury to persons.
- Do not expose a power pack to fire or excessive temperatures. Exposure to fire or temperature above 100°C may cause explosion. The temperature of 100°C can be replaced by the following conditions:
1) After 10 minutes of exposure to fire or 100°C.
2) After 10 minutes of exposure to 100°C.
- If repair is performed by a qualified repair person using only identical replacement parts, this will ensure that the safety of the product is maintained.
- Switch off the power bank when not in use.

RocLifeServices@hotmail.com

English:

- ★ CAUTION: Risk of fire and explosion if overheated.
- ★ Do not drop or crush. Do not exceed 60°C or incinerate.
- ★ Follow Manufacturer's Instructions.

Deutsch:

- ★ ACHTUNG: Brand- und Verbrennungsgefahr.
- ★ Nicht öffnen, zerlegen, über 40°C halten oder verbrennen.
- ★ Beachten Sie die Anweisungen des Herstellers.

Français:

- ★ ATTENTION - Risque d'incendie et de brûlures.
- ★ Ne pas ouvrir, démonter, chauffer au-dessus de 40°C ou incinérer.
- ★ Suivez les instructions du fabricant.

Italiano:

- ★ ATTENZIONE: Rischio di incendio e ustioni.
- ★ Non aprire, smontare, esporre a temperature superiori a 40°C o incenerire.
- ★ Seguire le istruzioni del produttore.

Español:

- ★ PRECAUCIÓN: Riesgo de incendio y quemaduras.
- ★ No abrir, desmontar, calentar por encima de 40°C o incinerar.
- ★ Siga las instrucciones del fabricante.

Polski:

- ★ OSTRZEŻENIE: Ryzyko pożaru i yanierzenia.
- ★ Nie otwierać, zgrywać, podgrzewać powyżej 40°C ani spalać.
- ★ Posłuchać instrukcji producenta.

Nederlands:

- ★ WAARSCHUWING: Risico op brand en verbranding.
- ★ Niet openen, opblazen, verhitten boven 40°C of verbranden.
- ★ Volg de instructies van de fabrikant.

Svenska:

- ★ VARNING: Risk för brand och bränningar.
- ★ Öppna inte, krossa inte, varma över 40°C eller brinn.
- ★ Följ tillverkarens instruktioner.

Türkçe:

- ★ DİKKAT: Yangın ve yanık riski.
- ★ Üst 40°C'ye kadar ısıtmayın.
- ★ Üreticinin talimatlarını takip edin.

Croatia:

- ★ UPOZORENJE: Nebezpečnost požáru a požádání.
- ★ Neotvarujte, neškrábejte, nevraťte nad 40°C a nezapálte.
- ★ Dodržujte pokyny výrobcu.

UK CE FC RoHS Made in China

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates used and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The RF transmitter on this device has not been tested for FCC compliance for those conditions where client transmitters are also in operation.